

BR	Bridging and IBM Networking Command Reference
DR	Dial Solutions Command Reference
FR	Configuration Fundamentals Command Reference
IR	Cisco IOS Interface Command Reference
P1R	Network Protocols Command Reference, Part 1
P2R	Network Protocols Command Reference, Part 2
P3R	Network Protocols Command Reference, Part 3
QR	Quality of Service Solutions Command Reference
SR	Security Command Reference
VR	Voice, Video, and Home Applications Command Reference
WR	Wide-Area Networking Command Reference
XR	Cisco IOS Switching Services Command Reference

Cisco IOS Command Reference Master Index, Release 12.0

Symbols

! character
 ping command output FR-529

character
 privileged EXEC mode prompt FR-8

\$ character in regular expressions DR-905

* character in regular expressions DR-904

+ character in regular expressions DR-904

. character
 ping command output FR-529

/etc/printcap file
 modifying for printing FR-70

> prompt FR-283

? character in regular expressions DR-904

? command FR-xv

^ character in regular expressions DR-905

_ character in regular expressions DR-906

Numerics

100VG AnyLAN port adapter
 configuring IR-126
 displaying information IR-251

7-bit character set
 changing for session FR-95

8-bit character set
 EXEC and configuration commands
 changing for a session FR-84
 setting default value FR-50
 setting for line FR-59

hardware databits
 changing for session FR-78
 configuring on a line FR-48

software character bits
 changing for session FR-79
 setting for line FR-49

special character width
 changing for session FR-95
 configuring default FR-51
 configuring for line FR-74

90-compatible OUI form BR-94

A

aaa accounting command SR-70

aaa accounting suppress null-username command SR-73

aaa accounting update command SR-74

aaa authentication arap command SR-4

aaa authentication banner command SR-6

aaa authentication enable default command SR-8

aaa authentication fail-message command SR-10

aaa authentication login command SR-12

aaa authentication nasi command SR-14

aaa authentication password-prompt command SR-16

aaa authentication ppp command SR-18

aaa authentication username-prompt command SR-20

aaa authorization command SR-58

aaa authorization config-commands command SR-61

aaa authorization reverse-access command SR-62

AAA configuration, virtual profiles, use with DR-777

aaa nas-port extended command SR-86

aaa new-model command SR-22

aaa processes command SR-23

AAA/TACACS+
 arap authentication DR-646
 enable login authentication DR-177

AAL, displaying WR-98, WR-105, WR-111

AAL3/4
 ATM
 (example) WR-4
 enabling WR-4

BR Bridging and IBM Networking
DR Dial Solutions
FR Configuration Fundamentals
IR Cisco IOS Interface

P1R Network Protocols, Part 1
P2R Network Protocols, Part 2
P3R Network Protocols, Part 3
QR Quality of Service Solutions

SR Security
VR Voice, Video, and Home Applications
WR Wide-Area Networking
XR Cisco IOS Switching Services

AAL5 NLPID WR-106, WR-112, WR-122
abbreviating commands
context-sensitive help FR-xv
software recognition FR-3
ABR
 configuring
 (example) WR-3
 rate-factor
 (example) WR-5
 configuration WR-5
abr command WR-2
absolute DR-21
absolute-timeout command DR-172, FR-66
accept reverse charging, X.25 WR-323
accept-lifetime command P1R-478
access control
 AppleTalk
 access group P2R-21
 distribute list P2R-37, P2R-39
 zone filter P2R-57
 zones P2R-2
 ARA DR-649, DR-650, DR-657
 DECnet P3R-135, P3R-147
 IPX P2R-210, P2R-246
 LAT
 assigning names to group lists DR-387
 connections DR-364
 defining a group list DR-393
 specifying access conditions to nodes DR-384
 VINES P3R-57–P3R-59
XNS
 extended P3R-330
 standard P3R-333
access expressions, configuring BR-84
access groups
 DECnet P3R-117
 IP P1R-127
access list command
 with regular expressions DR-902
 (example) DR-907
access list violations
 IP
 accounting P1R-131
 displaying P1R-162
 displaying (example) P1R-163
 logging P1R-101, P1R-109, P1R-117, P1R-121,
 P1R-131, P1R-157
access lists
 Apollo Domain
 applying to an interface P3R-2
 creating P3R-3
 AppleTalk
 network numbers
 cable range P2R-4
 creating P2R-11
including P2R-6
interfaces P2R-21
other access P2R-13
within P2R-17
zones, creating P2R-2, P2R-19
AppleTalk, displaying P2R-110
bridging (table) BR-937
DDR
 dialing, controlling DR-665, DR-693, DR-721
 types and numbers, supported (table) DR-665,
 DR-693, DR-721
DECnet
 extended P3R-106
 filter connect initiate packets P3R-108
 standard P3R-112
dynamic, temporary entries, clearing manually SR-142
Ethernet type codes (table) BR-937
IBM NetBIOS, byte offset BR-189
IP
 applying on inbound or outbound interfaces
 P1R-127
 BGP access list filters P1R-386, P1R-403
 extended P1R-98, P1R-131
 logging message P1R-117, P1R-121, P1R-157
 named P1R-129
 setting on virtual terminal lines P1R-96
 standard P1R-108–P1R-110
 violations, accounting for P1R-131
 violations, logging P1R-101, P1R-117, P1R-121,
 P1R-131, P1R-157
IP violations, logging P1R-109
IPX
 extended P2R-206
 named P2R-248
 NetBIOS P2R-300, P2R-302, P2R-408
 NLSP route aggregation P2R-213
 routing table filtering P2R-285
 SAP P2R-216
 standard P2R-210
LSAP, using in access expressions BR-84
netbios-host BR-85
rate limit statistics (table) QR-56
rate-limited QR-55
SNAP type, using in access expressions BR-84
SRB
 Ethernet type codes (table) BR-937
 filtering by protocol type BR-86
traffic shaping based on QR-85
transparent bridging
 assigning to bridge group BR-30
 assigning to interface BR-26, BR-30
 associating with interface and bridge group BR-38
 filtering MAC addresses BR-33
 qualifications for using BR-3

- VINES
 - displaying P3R-25
 - extended P3R-54
 - simple P3R-57
 - standard P3R-59
- XNS
 - extended P3R-330
 - standard P3R-333
- access routers, pooling, common hostname DR-596
- access servers, four services supported DR-171
- access-class command DR-364, P1R-96, WR-284
- access-enable command SR-142
- access-expression command BR-84
- access-list (DECnet extended) command P3R-106
- access-list (DECnet standard) command P3R-112
- access-list (encryption) command SR-206
- access-list (filter connect initiate packets) command DECnet P3R-108
- access-list (IPX extended) command P2R-206
- access-list (IPX standard) command P2R-210
- access-list (standard) command IR-3
- access-list (type-code) command IR-4
- access-list (XNS extended) command P3R-330
- access-list (XNS standard) command P3R-333
- access-list additional-zones command P2R-2
- access-list cable-range command P2R-4
- access-list command
 - access-list (standard-ibm) BR-5
 - access-list (type-code-ibm) command BR-6
- IP
 - extended P1R-98, P1R-115, P1R-119
 - standard P1R-108
- IPX
 - extended P2R-206, P2R-229
 - NLSP route aggregation summarization P2R-213
 - SAP P2R-216
 - violation logging P2R-206, P2R-229
- SRB BR-86
 - transparent bridging, extended BR-2
 - type-code BR-6
- access-list includes command P2R-6
- access-list nbp command P2R-8
- access-list network command P2R-11
- access-list other-access command P2R-13
- access-list other-nbps command P2R-15
- access-list rate-limit command QR-2
- access-list within command P2R-17
- access-list zone command P2R-19
- access-profile command SR-25
 - replace command form, (caution) SR-26
 - using per-user configuration, (caution) SR-26
- access-template command SR-143
- accounting
 - DECnet
 - database threshold P3R-122
 - deleting database entries P3R-114
 - enabling P3R-118
 - filters P3R-120
 - maximum transit entries P3R-123
- accounting command SR-76
- accounting, IPX
 - configuring P2R-250
 - database threshold P2R-254
 - deleting database entries P2R-221
 - enabling P2R-250
 - filters P2R-252
 - maximum transit entries P2R-255
- acc-qos command VR-4
- activation character, setting FR-46, FR-543
- activation-character command FR-46, FR-543
- adapter command BR-738
- address command SR-388
- address ranges, summarizing
 - IS-IS for IP P1R-293, P1R-352
 - OSPF P1R-233
- addressed-key command SR-389
- addresses
 - alternate destinations, defining WR-325
 - primary IP P1R-14
 - secondary IP P1R-14
- SMDS
 - displaying assigned WR-265, WR-266
 - effect of bridging WR-269
 - mapping IP multicast WR-281
 - multicast WR-274
 - multicast ARP WR-276
 - structure of WR-269
- X.121
 - called, suppressing WR-383
 - calling
 - suppressing WR-384
 - updating WR-394
 - setting WR-324
 - address-registration, ATM, (example) WR-6
- adjacency
 - TARP blacklist
 - displaying P3R-295
 - setting P3R-306
 - adjacency levels, IS-IS for IP, specifying P1R-329, P1R-330
 - adjacent-cp-name command BR-556
 - administrative distance
 - BGP, setting P1R-384
 - defaults (table) P1R-297, P1R-480
 - IP Enhanced IGRP, setting P1R-297
 - OSPF default P1R-298, P1R-480
 - RIP default P1R-298, P1R-480
 - administrative filtering, statically configured stations BR-8
 - ADT, primary end of link, specifying BR-304
 - AESOs, attaching to interfaces SR-448
 - aggregate address, configuring for BGP P1R-356

aggregate-address command P1R-356
alias command FR-618
aliases
 creating for commands FR-618
 default FR-618
 displaying FR-671
all-nets flooding, IPX P2R-278
all-routes explorer packets, definition BR-195
ALPS
 alarms
 ASCU BR-897
 circuits BR-898
 peer BR-899
 ASCU
 displaying status BR-930
 logical address BR-892
 physical address BR-893
 poll BR-900
 circuit
 activating BR-895, BR-901
 deactivating BR-927
 default BR-896
 definition BR-894
 disabling BR-906
 displaying status BR-931
 message queue BR-908
 remote CPE BR-894
 counters BR-928
 error message display BR-902
 error states BR-913, BR-919
 HLD definition BR-909
 IP address BR-910
 messages BR-911
 multiplexing BR-912
 P1024B protocol BR-929
 peer
 alarms BR-899
 displaying status BR-933
 partner CPE BR-917
 TCP BR-916
 polls
 intervals BR-915
 limits BR-923
 minimum requirement BR-914
 service messages
 content BR-922
 intervals BR-920
 lists BR-921
 TCP peers BR-907, BR-916
 timeouts BR-924, BR-925
 X.121 address BR-926
 X.25 interface BR-903
 X.25 virtual circuit BR-904
alps a1-map a2-map command BR-892

alps ascu command BR-893
alps circuit command BR-894
alps connection-type permanent command BR-895
alps default-ckt command BR-896
alps enable-alarms ascu command BR-897
alps enable-alarms circuit command BR-898
alps enable-alarms peer command BR-899
alps enable-ascu command BR-900
alps enable-circuit command BR-901
alps error-display command BR-902
alps host-hld host-link command BR-903
alps hostlink command BR-904
alps idle-timer command BR-906
alps keepalive command BR-907
alps lifetime-timer command BR-908
alps local-hld remote-hld command BR-909
alps local-peer command BR-910
alps max-msg-length command BR-911
alps mpx command BR-912
alps n1 command BR-913
alps n2 command BR-914
alps poll-pause command BR-915
alps primary-peer command BR-916
alps remote-peer command BR-917
alps retry-option command BR-919
alps service-msg-interval command BR-920
alps service-msg-list command BR-921
alps service-msg-list number command BR-922
alps servlim command BR-923
alps t1 command BR-924
alps t2 command BR-925
alps translate command BR-926
alt-dial command VR-6
AMI line coding IR-390
anchoring, regular expressions DR-905
answer-address command VR-7
AO/DI
 BAP number
 formats DR-866
 prefix DR-866
 client, enabling DR-870
 mapping DR-871
 multilink PPP bundle, receive only mode DR-869
apollo access-group command P3R-2
apollo access-list command P3R-3
Apollo Domain
 access lists
 applying to an interface P3R-2
 creating P3R-3
 ARP table, displaying entries P3R-11
 interfaces, displaying status P3R-12
 load sharing P3R-5
 maximum paths, setting P3R-5
 parallel paths, choosing between P3R-5

routing
 enabling P3R-8
 interface, enabling on P3R-6
 routing table entries
 adding P3R-7
 displaying P3R-14
 update interval P3R-9
 static routes, adding to routing table P3R-7
 traffic, displaying statistics P3R-16
 apollo maximum-paths command P3R-5
 apollo network command P3R-6
 apollo route command P3R-7
 apollo routing command P3R-8
 apollo update-time command P3R-9
 AppleTalk
 access control
 access group P2R-21
 distribute list P2R-37, P2R-39
 zone filter P2R-57
 zones P2R-2
 access lists
 cable range P2R-4
 displaying P2R-110
 interface cable range P2R-21
 network numbers P2R-21
 other access P2R-13
 range-overlaps P2R-6
 within P2R-17
 network numbers, creating P2R-11
 zones, creating P2R-2, P2R-19
 addresses
 format P2R-24
 remapping P2R-46
 adjacent networks P2R-112
 adjacent routers P2R-150
 ARP table entries
 deleting P2R-103
 displaying P2R-114
 gleaning P2R-59
 ARP table update interval P2R-25, P2R-27, P2R-29
 AURP
 enabling P2R-77
 last-heard-from timer P2R-30
 private path database P2R-117
 routing update interval P2R-31
 tunnel interface, assigning AppleTalk
 domain-group number P2R-41
 update-events queue P2R-116
 cable ranges
 assigning to interface P2R-32
 remapping P2R-46
 CAP, compatibility
 checksum P2R-33
 discovery mode P2R-35
 enabling P2R-23, P2R-32, P2R-35

startup process P2R-35
 domain
 hop count P2R-43
 information, displaying P2R-121
 number, assigning P2R-41
 eigrp interfaces, displaying P2R-123
 eigrp log-neighbor-changes command P2R-51
 eigrp-bandwidth-percent command P2R-50
 Enhanced IGRP
 enabling P2R-77
 hello packets P2R-53
 hold time P2R-53
 neighbors, displaying P2R-125
 query packets P2R-52
 route redistribution P2R-83
 split horizon P2R-52
 timers, adjusting P2R-53
 topology table P2R-127
 update packets P2R-52
 EtherTalk P2R-1
 extended interface, assigning cable range P2R-32
 extended interfaces P2R-35
 fast switching P2R-82
 configuring P2R-82
 displaying cache entries P2R-119
 FDDITalk P2R-1, P2R-76
 filters
 data packet, applying P2R-21
 GZL, applying P2R-39, P2R-57
 partial zone P2R-75
 routing table P2R-37, P2R-39
 floating static routes P2R-90
 displaying P2R-164
 nonextended networks P2R-92
 free-trade zone P2R-56
 GZL
 filters P2R-39, P2R-57
 replies P2R-39, P2R-57
 hop count P2R-43
 interenterprise routing
 addresses
 remapping P2R-46
 AURP tunnel interface P2R-41
 cable ranges, remapping P2R-46
 domain name P2R-45
 domain number P2R-45
 domains P2R-45
 hop count P2R-43
 remap, displaying P2R-153
 remapping P2R-46
 interfaces
 configuring dynamically P2R-35
 displaying P2R-135
 domain number, assigning P2R-41
 internetwork parameters, displaying P2R-132

- IPTalk
 /etc/services file P2R-63
 IP encapsulation, configuring P2R-61
 UDP port numbers P2R-63
- Kinetics IPTalk
- LocalTalk P2R-1
- MacIP
 addresses, allocating P2R-67, P2R-71
 clients, displaying P2R-139
 servers, displaying P2R-140
 servers, establishing P2R-69
 traffic statistics P2R-144, P2R-166
- maximum paths, defining P2R-73
- NBP
 lookup interval P2R-74
 lookup type P2R-65
 name registration table P2R-148
 registered entities P2R-201
 services, displaying P2R-146
 tests P2R-201
- neighbor table P2R-104
- network events, logging P2R-55
- nonextended interface, assigning address P2R-23
- Phase 1/Phase 2 networks, compatibility P2R-79
- pre-FDDITalk packets, enabling recognition P2R-76
- proxy network numbers, assigning P2R-79
- routes, poisoned P2R-158, P2R-160
- routing P2R-84
 extended interface P2R-35
 routing protocol, specifying P2R-77
 routing table
 displaying entries P2R-156
 update timers, setting P2R-95
 routing uopdates, interval timer P2R-86
 routing updates
 advertising P2R-81
 retransmission, disabling P2R-89
 strict checking P2R-94
 stub mode, enabling P2R-87
 timers, setting P2R-95
- RTMP
 enabling P2R-77
 routes without zones P2R-81
 routing updates, disabling transmission P2R-89
 strict checking of routing updates P2R-94
 stub mode, enabling P2R-87
- service types (table) P2R-65
- SMDS, configuring over WR-274
- SMRP
 enabling for P2R-198
 fast-switching cache table, clearing entries
 P2R-108
 fast-switching cache table, displaying P2R-181
 fast-switching, enabling on a port P2R-196
- sockets P2R-162
- static routes
 displaying P2R-164
 overriding P2R-90, P2R-92
- test mode, entering P2R-201
- TokenTalk P2R-1
- traffic statistics P2R-166
- tunneling, Cayman IR-407, P1R-96
- ZIP
 query interval P2R-99
 reply filter, creating P2R-100
- zone
 assigning name P2R-101
 displaying P2R-173
 name format P2R-101
 special characters P2R-101
- appletalk access-group command P2R-21
- appletalk address command P2R-23
- appletalk alternate-addressing command P2R-24
- appletalk arp interval command P2R-25
- appletalk arp retransmit-count command P2R-27
- appletalk arp-timeout command P2R-29
- appletalk aarp tickle-time command P2R-30
- appletalk cable-range command P2R-32
- appletalk checksum command P2R-33
- appletalk client-mode command P2R-34
- appletalk discovery command P2R-35
- appletalk distribute-list in command P2R-37
- appletalk distribute-list out command P2R-39
- appletalk domain hop-reduction command P2R-43
- appletalk domain name command P2R-45
- appletalk domain remap-range command P2R-46
- appletalk domain-group command P2R-41
- appletalk eigrp active-time command P2R-48
- appletalk eigrp log-neighbor-changes command P2R-51
- appletalk eigrp split-horizon command P2R-52
- appletalk eigrp-bandwidth-percent command P2R-50
- appletalk eigrp-timers command P2R-53
- appletalk event-logging command P2R-55
- appletalk free-trade-zone command P2R-56
- appletalk getzonelist-filter command P2R-57
- appletalk glean-packets command P2R-59
- appletalk ignore-verify-errors command P2R-60
- appletalk iptalk command P2R-61
- appletalk iptalk-baseport command P2R-63
- appletalk lookup-type command P2R-65
- appletalk macip server command P2R-69
- appletalk macip static command P2R-71
- appletalk maximum-paths command P2R-73
- appletalk name-lookup interval command P2R-74
- appletalk permit-partial-zones command P2R-75
- appletalk pre-fdditalk command P2R-76
- appletalk protocol command P2R-77
- appletalk proxy-npb command P2R-79
- appletalk require-route-zones command P2R-81
- appletalk route-cache command P2R-82

appletalk route-redistribution command P2R-83

appletalk routing command P2R-84

appletalk rtmp jitter command P2R-86

appletalk rtmp-stub command P2R-87

appletalk send-rtmps command P2R-89

appletalk static cable command P2R-92

appletalk static cable-range P2R-90

appletalk static cable-range command P2R-90

appletalk static network command P2R-92

appletalk strict-rtmp-checking command P2R-94

appletalk timers command P2R-95

appletalk virtual-net command P2R-97

appletalk zip-reply-filter command P2R-100

appletalk zone command P2R-101

APPN

activating and deactivating

activation retries, specifying BR-644, BR-645

limited resources BR-616, BR-617

link, activating BR-575

link, deactivating BR-578

port, activating BR-576

port, deactivating BR-579

routing, activating BR-573

routing, deactivating BR-577

startup connection, specifying BR-589

subsystem, activating BR-574

ATM link, specifying BR-580

BTU

maximum receive size, specifying BR-626

maximum send size, specifying BR-595

buffers, specifying BR-586

capacity, specifying BR-602, BR-603

central resource registration feature, disabling BR-587

class of service

defining BR-588

specifying BR-557

control point, specifying BR-561

cost per byte, specifying BR-590, BR-591

cost per connection, specifying BR-592, BR-593

CP-CP session, permitting BR-594

database storage BR-650, BR-651, BR-652

destination LU, specifying BR-567

DLUR

permitting function BR-596

specifying node BR-596, BR-597

DLUS

backup default, specifying BR-582, BR-584

node, specifying BR-598, BR-600

DSPU

specifying BR-641

Frame Relay link

specifying BR-605

HPR

hpr command

APPN

control point BR-606

link station BR-607

port BR-608

hpr retries command BR-610

hpr sap command BR-611

hpr timers liveness command BR-612

hpr timers path-switch command BR-613

hpr-max-sessions command BR-609

show appn link-station command BR-674

show appn node command BR-678

show appn port command BR-680

show appn rtp command BR-683

show appn session command BR-685

show appn topology command BR-687

ISR, enabling BR-614

link station

active, specifying maximum BR-624

inbound, specifying maximum BR-642

name, specifying BR-563

outbound, specifying maximum BR-643

port, specifying BR-636

role, specifying BR-646, BR-647

memory usage, specifying

buffers BR-586

cached directory entries BR-621

cached routing trees BR-622

maximum available BR-623

minimum available BR-627

mode, specifying or changing BR-566

monitoring

class of service BR-659

connection network BR-662

dependent LUs BR-666

dependent PUs BR-668

directory entries BR-664

LUs BR-670

mode BR-677

node BR-678

ports BR-680

SNA sessions BR-672, BR-685

topology BR-687

network name, specifying BR-559, BR-658

node row, specifying BR-630

partner node, specifying BR-556

ATM link BR-580

Ethernet link BR-615

FDDI link BR-615

Frame Relay link BR-605

LU-LU session BR-567

PPP link BR-637

QLLC BR-705

SDLC BR-653

- SMDS address BR-690
Token Ring link BR-615
ports, defining BR-570
PPP link, specifying BR-637
QLLC
 link, specifying BR-705
 X.25 subaddress, configuring BR-706
queuing priority, specifying BR-618
route selection, determining
 bit rate, specifying BR-602, BR-603
 cost per byte BR-590, BR-591
 cost per connection BR-592, BR-593
 local node BR-648
 propagation delay BR-638, BR-639
RSRB
 configuring BR-649
 port, defining BR-570
RTP connection
 activating BR-569
SAP (service access point), activating BR-619
SDLC
 link, specifying BR-653
 secondary address, configuring BR-654
security, specifying BR-655, BR-656
transmission group, specifying BR-691, BR-692
transmission priority, specifying BR-694
virtual data link control
 configuring BR-701
 port, defining BR-570
 ring-group, specifying BR-701
 virtual MAC address option, specifying BR-701
XID, specifying BR-707, BR-708
appn class-of-service command BR-557
appn connection-network command BR-559
appn control-point command BR-561
appn link-station command BR-563
appn mode command BR-566
appn partner-lu-location command BR-567
appn path-switch command BR-569
appn port command BR-570
appn routing command BR-573
appn start command BR-574
appn start link-station command BR-575
appn start port command BR-576
appn stop command BR-577
appn stop link-station command BR-578
appn stop port command BR-579
APS, protect interface IR-14, IR-18
aps authenticate command IR-6
aps force command IR-7
aps group command IR-9
aps lockout command IR-11
aps manual command IR-12
aps protect command IR-14
aps revert command IR-15
aps timers command IR-16
aps unidirectional command IR-17
aps working command IR-18
ARA
 access control DR-649, DR-650, DR-657
clients, connecting to virtual terminal lines DR-509,
 DR-518, DR-527
monitoring DR-658
session, automatic startup DR-620
arap authentication command DR-646, SR-28
 using list-names
 (caution) SR-28
arap callback command DR-812
arap dedicated command DR-646
arap enable command DR-648
arap net-access-list command DR-650
arap noguest command DR-651
arap timelimit command DR-653
arap use-tacacs command DR-654
 line configuration commands
 arap use-tacacs SR-105
 single-line option
 (caution) SR-105
arap warningtime command DR-656
arap zonelist command DR-657
area authentication command P1R-228
area default-cost command P1R-230
area nssa command P1R-232
area range command P1R-233
area stub command P1R-235
area virtual-link command P1R-237
area-address command P2R-219
area-password command P1R-324
ARP
 displaying accounting information IR-264
 SMDS broadcast messages WR-276
 SMDS, enabling WR-262, WR-272, WR-274
arp arpa command P1R-5
arp command P1R-4, WR-262
arp frame-relay command P1R-5
arp probe command P1R-5
ARP server, (example) WR-8
arp snap command P1R-5
ARP table
 Apollo Domain P3R-11
 AppleTalk
 gleaning entries P2R-59
 update interval P2R-25, P2R-27, P2R-29
 LANE, dynamic entries, clearing XR-129
 timeout P1R-7
 VINES P3R-62
arp timeout command P1R-5, P1R-7

ASCII

- activation character FR-46
- character, widths FR-74, FR-95
- character set, (table) FR-741
- disconnect character FR-52
- dispatch character FR-53, FR-80
- escape character FR-58, FR-83
- hold character FR-61, FR-86
- padding FR-68, FR-91
- start character FR-97
- stop character DR-62, FR-99
- asp addr-offset command BR-302
- asp role command BR-304
- asp rx-ifc command BR-305
- asterisk character in regular expressions DR-904
- asynchronous mobility DR-626
- async default routing command DR-7
- async dynamic address command DR-8
- async dynamic routing command DR-9
- async mode dedicated command DR-618
- async mode interactive command DR-619
- async-bootp command DR-4, FR-322
- asynchronous
 - interfaces
 - group ranges DR-17
 - members DR-24
 - mobility DR-485
- asynchronous interface, routing on, configuring manually DR-9
- asynchronous interfaces
 - compression
 - ignore-pfc option for async drivers DR-576, IR-60
 - MPPC DR-576
 - group
 - effect of peer neighbor routes DR-589
 - groups, designating IR-123
- ATG, DECnet, configuring P3R-136
- ATM
 - ABR
 - rate-factor (example) WR-5
 - address
 - NSAP (example) WR-29
 - addresses
 - multicast (example) WR-25
 - address-registration
 - (example) WR-6
 - configuration WR-6
 - AIP filter register
 - (example) WR-44
 - configuring WR-44
 - APPN partner node, specifying BR-580
 - ARP server, (example) WR-8
 - channels, maximum, configuring (example) WR-21

Cisco 4500 Series

- loopback for OS3, DS3, E3 interfaces WR-79
- commands WR-1
- DS3
 - framing (example) WR-16
 - scrambling (example) WR-10
- E.164 addresses
 - (example) WR-39
 - configuring WR-39
- E.164 auto conversion
 - (example) WR-11
- E3
 - framing (example) WR-17
- E3-scramble
 - (example) WR-12
- ESI address
 - (example) WR-13
- exception queue
 - length (example) WR-15
- framing
 - DS3 (example) WR-16
 - E3 (example) WR-17
- ILMI
 - keepalives (example) WR-18
- ilmi
 - PVC discovery (example) WR-19
- interfaces
 - (example) WR-77
 - displaying WR-97
- keepalive timer (example) WR-149
- LBO
 - (example) WR-20
- line build-out
 - (example) WR-20
- loopback (example) WR-79
- loopback mode
 - Cisco 4500 Series, OC3, DS3, E3 interfaces WR-79
- maximum number of VCs, configuring WR-23
- MID
 - per VC (example) WR-24
- multicast addresses
 - (example) WR-25
- multipoint intervals
 - configuring (example) WR-26
- NSAP address WR-28
 - (example) WR-29
- OAM
 - cell flush (example) WR-30
- permanent rate queues
 - (example) WR-34
 - configuring WR-33
- point-to-multipoint SVC P1R-631

- poll timer (example) WR-151
protocol addresses, mapping (example) WR-65
PVC, discovery (example) WR-19
raw queue size
 (example) WR-35
 configuring WR-35
receive buffers, configuring WR-36
receive buffers (example) WR-36
scrambling, DS3 (example) WR-10
signaling, point-to-multipoint (example) WR-27
SMDS WR-39
 AAL3/4 encapsulations WR-25
 broadcast addresses WR-25
 multicast addresses WR-25
 multicast addresses, configuring (example)
 WR-25
SONET PLIM IR-19
 (example) WR-40
 configuring WR-40
speed WR-33
SSCOP WR-146
SSCOP connection control timer (example) WR-148
SSCOP receiver window, (example) WR-152
SSCOP retry count (example) WR-150
SSCOP transmitter window (example) WR-153
static maps, displaying WR-100
SVC
 disabling WR-37
 disabling (example) WR-37
 point-to-multipoint P1R-631
traffic information, displaying WR-115, WR-117
traffic shaping, strict
 (example) WR-38
 enabling WR-38
transmit buffers
 (example) WR-41
 configuring WR-41
transmit clock, enabling (example) WR-9
UNI version
 (example) WR-42
 configuring WR-42
unicast addresses WR-39
VC status, displaying P1R-681
vc-per-vp (example) WR-43
virtual circuits, maximum, configuring (example)
 WR-23
atm aal aal3/4 command WR-4
atm abr rate-factor command WR-5
atm address-registration command WR-6
atm arp-server command WR-7
atm clock internal command WR-9
atm compression command VR-9
ATM-DXI IR-80
 protocols supported for maps WR-65
 requires ADSU WR-65
- atm ds3-scramble command WR-10
atm e164 auto-conversion command WR-11
atm e164 auto-conversion example WR-11
atm e3-scramble command WR-12
atm esi-address command WR-13
atm exception-queue command WR-15
atm framing (DS3) command WR-16
atm framing (E3) command WR-17
atm ilmi-keepalive command WR-18
atm ilmi-pvc-discovery command WR-19
atm lbo command WR-20
atm max-channels command WR-21
atm maxvc command WR-23
atm mid-per-vc command WR-24
atm multicast command WR-25
atm multipoint-interval command WR-26
atm multipoint-signalling command WR-27
atm nsap-address command WR-28
atm oam flush command WR-30
atm pvc command WR-21
atm pvp command WR-31
atm rate-queue command WR-33
atm rawq-size command WR-35
atm rxbuff command WR-36
atm sig-traffic-shaping strict command WR-38
atm smds-address command WR-39
atm sonet command IR-19
atm sonet stm-1 command WR-40
atm txbuff command WR-41
atm uni-version command WR-42
atm vc-per-vp command WR-43
ATM virtual circuit configuration commands
 cbr VR-172
 atm vp-filter command WR-44
 atm-address command XR-186
 atm-dest-address command BR-580
 ATM-DXI, AAL encapsulations WR-67
 ATM-DXI encapsulations, (example) WR-68, WR-71
 atmsig close atm command WR-37
 attach command FR-488
 attach shelf command FR-694
 authentication
 CAs SR-362
 IP Enhanced IGRP packets P1R-300
 MD5, RIP P1R-497
 on DRP Server Agent P1R-137
 authentication (IKE policy) command SR-391
 authentication translate option, mapping to virtual interface
 template command DR-515, DR-536
 authorization command SR-65
 autobaud command FR-47
 autoconfigure discovery command DR-83
 autoconfigure, modem DR-84
 auto-cut-through command VR-90
 autodetect encapsulation command DR-258, DR-338

autodetect encapsulation v120 command DR-642
autohangup command DR-11
automatic protocol startup
 ARA DR-620
 PPP DR-620
 SLIP DR-620
automatic receiver polarity reversal IR-20
autonomous bridging, enabling on ciscoBus II BR-23
autonomous switching, SRB, enabling BR-189
autonomous systems
 BGP providing paths to remote networks P1R-477
 boundary router P1R-243, P1R-523
auto-polarity command IR-20
autoselect command DR-620
auto-summary (BGP) command P1R-358
auto-summary (RIP) command, RIP P1R-192
auto-summary command, IP Enhanced IGRP P1R-292

B

B8ZS line coding IR-390
backup delay command DR-740
backup interface, Dialer Profiles DR-747
backup interface command DR-741, DR-748
backup load command DR-742, DR-750
backup server table, IPX Enhanced IGRP P2R-258
backup-dl5 command
 APPN control point BR-582
 APPN link station BR-584
bandwidth, setting DR-236, IR-21
bandwidth command DR-236, IR-21
bandwidth on demand, DDR DR-695
banner exec command FR-112
banner incoming command FR-114
banner login command FR-115
banner motd command FR-117
banners
 disabling on a line FR-112, FR-115, FR-139
 enabling on a line FR-112, FR-115, FR-139
EXEC, displaying FR-112
for reverse Telnet lines FR-114
incoming message FR-114
line number FR-144
login FR-115
MOTD FR-117
baud rate
 receive, changing for session FR-94
 receive, configuring for a line DR-180
 transmit and receive, configuring for a line DR-187
 transmit, configuring for a line DR-195
 X.3 PAD parameters DR-896
Bc, committed burst size, Frame Relay WR-174
Be, excess burst size, Frame Relay WR-176

BECN
 bits WR-250
 message generation QR-83
BFE
 address translation WR-285, WR-312
 Blacker Emergency Mode
 entering WR-285
 leaving WR-285
 local marker facilities (table) WR-405
 mapping algorithm WR-312
 remote-red setting WR-371
 X.25 encapsulation WR-292
bfe command WR-285
BGP
 administrative distance, setting P1R-384
 aggregate address, configuring P1R-356
 autonomous system path P1R-436
 backdoor routes, indicating P1R-433
 community attribute
 sending to a neighbor P1R-422
 setting P1R-440
 community list, creating P1R-389
 community, matching P1R-393
 confederation P1R-367
 display routes
 allowed by a community list P1R-459
 of communities P1R-457
 enabling P1R-435
 filtering packets and routing information DR-902
 IP access (example) DR-907
 local preference value, setting P1R-545
 metric type P1R-446
 networks, specifying P1R-431
 remove-private-as P1R-417
 route dampening
 configuring factors P1R-369
 dampened routes, displaying P1R-461
 dampening information, clearing P1R-379
 enabling P1R-369
 flap statistics, clearing P1R-380
 flap statistics, displaying P1R-464
 setting with a route-map P1R-442
 suppressed routes, unsuppressing P1R-379
route filtering P1R-386, P1R-403
route map P1R-525
route reflector, configuring P1R-365, P1R-366, P1R-420
route summarization P1R-192, P1R-292, P1R-358
routing domain confederation P1R-367
sessions, resetting immediately P1R-375
soft reconfiguration P1R-377, P1R-424
synchronization with IGPs P1R-477
TCP MD5 authentication P1R-408
timers, adjusting P1R-480
bgp always-compare-med command P1R-359

- bgp bestpath compare-routerid command P1R-361
bgp bestpath med-confed command P1R-362
bgp bestpath missing-as-worst command P1R-364
bgp client-to-client reflection command P1R-365
bgp cluster-id command P1R-366
bgp confederation identifier command P1R-367
bgp confederation peers command P1R-368
bgp dampening command P1R-369
bgp default local-preference command P1R-371
bgp fast-external-failover command P1R-375
bgp log-neighbor-changes command P1R-373
bgp router-id command P1R-376
bgp-policy command QR-4
Bisync
 bsc dial-contention command BR-309
 character set BR-307
 contention interfaces BR-308
 number of poll-list cycles BR-316
 poll timeout BR-312
 polling cycle interval BR-311
 primary end of link BR-313
 retries for a device BR-314
 secondary end of link BR-315
 specific polls BR-317
Bisync enhancements, bsc contention command BR-308
Blacker Emergency Mode WR-327
 address translation WR-285
 entering WR-285
 leaving WR-285
boot bootldr command FR-286
boot bootstrap command FR-288
boot buffersize command FR-199
boot command FR-282
boot config command FR-200
BOOT environment variable
 rearranging order of entries FR-293
 specifying FR-290, FR-293
boot field
 bit settings, listing FR-300
 default values, changing FR-295, FR-297
boot flash command FR-282
boot host command FR-202
boot network command FR-204
boot register FR-295, FR-297
boot system command FR-290, FR-292
booting
 from Flash FR-290
 from network server FR-282
 (example) FR-284
 manually from Flash FR-282
 system software, configuration register FR-295,
 FR-297
BOOTLDR environment variable, specifying FR-286
BOOTP, forwarding agent P1R-26, P1R-32
bootstrap image
 backing up on a server FR-253
 secondary FR-288
Break key FR-293
Break key, use in login string DR-415
Break signals DR-895
 generating DR-461
 X.3, action upon receipt of DR-895
bridge acquire command BR-8
bridge address command BR-9
bridge bridge command BR-11
bridge circuit-group pause command BR-13
bridge circuit-group source-based command BR-14
bridge cmf command BR-15
bridge crb command BR-16, P1R-15
bridge domain command BR-17
bridge forwarding database, viewing classes of entries
 BR-62
bridge forward-time command BR-19
bridge group command P1R-15
bridge groups, assigning interface to BR-14, BR-20, BR-25
bridge hello-time command BR-46
bridge irb command BR-47
bridge lat-service-filtering command BR-48
bridge max-age command BR-49
bridge multicast-source command BR-50
bridge priority command BR-51
bridge protocol command BR-52
bridge protocol data units, intervals between hello BR-46
bridge protocol ibm command BR-89
bridge route command BR-54
bridge-group aging-time command BR-22
bridge-group cbus-bridging command BR-23
bridge-group circuit-group command BR-25
bridge-group command BR-20
bridge-group input-address-list command BR-26
bridge-group input-lat-service-deny command BR-27
bridge-group input-lat-service-permit command BR-28
bridge-group input-lsap-list command BR-29
bridge-group input-pattern-list command BR-30
bridge-group input-type-list command BR-31
bridge-group lat-compression command BR-32
bridge-group output-address-list command BR-33
bridge-group output-lat-service-deny command BR-34
bridge-group output-lat-service-permit command BR-35
bridge-group output-lsap-list command BR-36
bridge-group output-pattern-list command BR-38
bridge-group output-type-list command BR-39
bridge-group path-cost command BR-40
bridge-group priority command BR-41
bridge-group spanning-disabled command BR-42
bridge-group sse command BR-44
bridge-group virtual interface (BVI) BR-61

bridges
 displaying
 all global information BR-149
 logical configuration BR-150
bridging, X.25 WR-349
broadcast command WR-46
broadcasts
 IP
 and transparent bridging spanning-tree protocol P1R-28
 flooding P1R-28
 IPX
 forwarding P2R-278
 type 20 packets P2R-392, P2R-393, P2R-394
 VINES
 forwarding P3R-78
 serverless networks P3R-86
 zero-hop P3R-86
 XNS
 all-nets P3R-344
 flooding P3R-344, P3R-345, P3R-346
 in 3Com environment P3R-345
 forwarding P3R-347, P3R-350
BSC
 Bisync enhancements, contention BR-309
 bsc contention command BR-308
 bsc dial-contention command BR-309
 contention interfaces BR-308
bsc contention command BR-308
bsc dial-contention command BR-309
bsc host-timeout command BR-310
bsc pause command BR-311
bsc poll-timeout command BR-312
bsc primary command BR-313
bsc retries command BR-314
bsc secondary command BR-315
bsc servlim command BR-316
bsc spec-poll command BR-317
bsc-char-set command BR-307
BSTUN
 BSTUN over Frame Relay
 bstun lisnsap command BR-320
 bstun route command BR-327
 frame-relay map bstun command BR-331
 frame-relay map llc2 command BR-536
 frames, specifying BR-327
 custom queuing
 BSTUN header BR-337
 TCP port BR-338
 frames, specifying BR-325
 group, specifying BR-318
 interface, enabling BR-328
 peers, specifying BR-321
 protocol group, specifying BR-322
bstun group command BR-318

bstun keepalive-count command BR-319
bstun lisnsap command BR-320
bstun peer-name command BR-321
bstun protocol-group command BR-322
bstun route (Frame Relay) command BR-327
bstun route command BR-325, BR-327
buckets-of-history-kept command FR-352
buffer-percent command BR-586
buffers
 character, for terminal sessions FR-53, FR-56
 command history
 changing for session FR-33
 setting for a line FR-16, FR-18
 configuration file, changing size FR-199
 interface buffer pool tuning FR-622
 management parameters FR-621, FR-623
 message logging to internal FR-508
 public buffer pool tuning FR-622
receive
 (example) WR-36
 configuring WR-36
size, setting FR-621, FR-623
statistics, displaying FR-672
transmit
 (example) WR-41
 configuring WR-41
XRemote, changing size of DR-492
buffers command FR-621
buffers huge size command FR-623
burned-in address WR-307
busy-message command DR-366

C

cable arp command VR-190
cable channel-change command VR-191
cable downstream annex command VR-192
cable downstream frequency command VR-193
cable downstream if-output command VR-194
cable downstream interleave-depth command VR-195
cable downstream modulation command VR-196
cable downstream symbol-rate command VR-197
cable insertion-interval command VR-198
cable interface configuration commands
 cable arp VR-190
 cable channel-change VR-191
 cable downstream annex VR-192
 cable downstream frequency VR-193
 cable downstream if-output VR-194
 cable downstream interleave-depth VR-195
 cable downstream modulation VR-196
 cable downstream symbol-rate VR-197
 cable insertion-interval VR-198
 cable ip-broadcast-echo VR-200

cable ip-multicast-echo VR-199
cable proxy-arp VR-205
cable shared-secret VR-206
cable source-verify VR-211
cable spectrum-group frequency VR-209
cable upstream fec VR-212
cable upstream frequency VR-213
cable upstream power-level VR-214
cable upstream scramble VR-216
cable upstream shutdown VR-218
cable ip-broadcast-echo command VR-200
cable ip-multicast-echo command VR-199
cable length, T3 IR-23
cable privacy kek grace-time command VR-201
cable privacy kek life-time command VR-202
cable privacy tek grace-time command VR-203
cable privacy tek life-time command VR-204
cable proxy-arp command VR-205
cable shared-secret command VR-206
cable source-verify command VR-211
cable spectrum-group command VR-207
cable spectrum-group frequency command VR-209
cable upstream fec command VR-212
cable upstream frequency command VR-213
cable upstream power-level command VR-214
cable upstream scramble command VR-216
cable upstream shutdown command VR-218
cablelength command IR-23
cablelength long command IR-24
cablelength short command IR-26
ca-identity mode, enabling SR-371
calendar set command FR-624
callback
 ARA DR-812
 ARA protocol chat scripts DR-815
 dialer interface, non-DTR DR-809
 enabling for PPP client DR-814
 enabling on interface DR-807
 enabling on the EXEC DR-818
 exec chat scripts DR-817
 forcing a waiting period DR-813
 PPP, client or server DR-809
 secure DR-806
callback forced-wait command DR-813
called-number command DR-64
caller ID screening DR-820
 configuring DR-202, DR-295, DR-822
 platform support DR-202, DR-295, DR-822
CAP, compatibility P2R-61
CAR
 access lists QR-2
 interface statistics (table) QR-62
 policies, configuring QR-50

carrier wait time
DDR
 interface disabling DR-707
 map class DR-730
carrier-delay command IR-28
CAs
 authenticating SR-362
 (example) SR-362
CEP, support SR-384
configuration, (example) SR-383
declaring SR-371, SR-383
 (example) SR-371, SR-383
enrolling SR-368
identity, deleting SR-371
LDAP
 support SR-384
 support (example) SR-384
locations, specifying SR-383
public keys SR-362
URLs, specifying SR-383
cas-custom command DR-259
cas-group (controller e1) command DR-265
cas-group command DR-269, IR-29
caution, description VR-216
cautions
 access lists SR-210, SR-262, SR-271
access-profile command
 replace command form (caution) SR-26
 using per-user configuration (caution) SR-26
arap authentication command
 using list-names (caution) SR-28
arap use-tacacs command
 single-line option (caution) SR-105
Cisco 7200 series router SR-249
crypto key zeroize dss command SR-249
DSS keys SR-248
enable password command
 using encryption-type (caution) SR-422
enable secret command
 using encryption-type (caution) SR-424
enable use-tacacs command
 using tacacs-server authenticate enable command
 (caution) SR-108
Java blocking SR-185
key config-key command
 unrecoverable DES key (caution) SR-137
login authentication command
 using list-names (caution) SR-34
nasi authentication command
 using list-names (caution) SR-37
ppp authentication command
 using list-names (caution) SR-39
ppp use-tacacs command
 single-line option (caution) SR-51

service password-encryption command
 security level (caution) SR-432
usage in text v
Cayman tunneling, AppleTalk IR-407, P1R-96
CBAC
 application-layer protocols, configuring SR-185
audit trail messages
 (example) SR-176
 enabling SR-176
configurations, viewing SR-200
denial-of-service attacks, detection SR-194
disabling SR-199
H.323 inspection, configuring SR-186
half-open sessions
 deleting, high threshold SR-179, SR-188
 deleting, low threshold SR-181, SR-190
 description SR-179
 TCP threshold SR-194
inspection rules
 applying SR-178
 applying (example) SR-178
 defining SR-183
 removing SR-178
 viewing SR-200
Java
 blocking SR-183
 blocking (caution) SR-185
 inspection, configuring SR-185
RPC inspection, configuring SR-186
session information
 (example) SR-200
 viewing SR-200
SMTP inspection, configuring SR-186
TCP inspection, configuring SR-185
timeouts
 DNS idle, specifying SR-177
 FIN-exchange, specifying SR-192
 overriding SR-186
 synwait, specifying SR-196
 TCP idle, specifying SR-193
 UDP idle, specifying SR-197
 UDP inspection, configuring SR-185
cbr VR-172
CCL scripts, using modified and unmodified together
 DR-621
CCO
 accessing vi
 definition vi
cd command FR-168
CDP
 enabling and disabling for routing device FR-356
 enabling on an interface FR-354
 global information, displaying FR-396
 interface status information, displaying FR-399
neighbor
 information, displaying FR-400
 table, clearing FR-359
neighbor device, displaying information FR-397
traffic counters, clearing FR-358
traffic information, displaying FR-402
transmission hold time, configuring FR-355
transmission timer, setting FR-357
cdp enable command FR-354
cdp holddown command FR-355
cdp run command FR-356
cdp timer command FR-357
CEF, interface, enabling XR-36
central resource registration, disabling BR-587
central-resource-registration command BR-587
CEP, specifying SR-384
certificate chain configuration mode, enabling SR-364
certificate command SR-358
certificates
 accepting SR-360
 (example) SR-360
 adding SR-358
 deleting SR-358, SR-364
 (example) SR-358, SR-364
requesting SR-368
 (example) SR-369
requests
 resending (example) SR-379, SR-381
 resending, number of times SR-379
 resending, wait period SR-381
retrieving SR-366
 (example) SR-366
revoking SR-368
storing SR-366
viewing SR-385
 (example) SR-385–SR-386
Certification Authority Interoperability
 CA authentication SR-362
 CEP, specifying SR-384
 challenge password SR-368
 description SR-357
 LDAP support, specifying SR-384
 NVRAM memory usage SR-366
ces aal1 clock command WR-48
ces aal1 service command WR-49
ces cell-loss-integration-period command VR-174
ces circuit command WR-51
ces clockmode synchronous command VR-176
ces connect command VR-177
ces dsx1 clock source command WR-54
ces dsx1 framing command WR-55
ces dsx1 lbo command WR-57
ces dsx1 linecode command WR-58
ces dsx1 loopback command WR-60
ces dsx1 signalmode robbedbit command WR-61

- ces initial-delay command VR-179
ces max-buf-size command VR-180
ces partial-fill command VR-182
ces pvc command WR-62
ces service command VR-184
CGMP
 clearing P1R-576
 enabling P1R-586
 proxy P1R-586
Challenge Handshake Authentication Protocol
channel-associated signaling (CAS) WR-52
channel-group (Fast EtherChannel) command IR-31
channel-group command DR-273
channelized E1
 channel groups DR-273
 controller, statistics DR-279, DR-317
 loopback
 local, interface DR-310
channelized T1
 channel groups DR-273
 controller, descriptive name DR-284
 loopback IR-156, IR-157
 local, entire line DR-309
 local, interface DR-310
 remote, interface DR-312
channelized T3 IR-63, IR-394
channel-protocol command BR-740
channels, ATM, maximum, configuring (example) WR-21
CHAP
 authentication method DR-590
 rotary, common alias for routers DR-596
 username and password, specifying DR-615
 using with DDR DR-700
character data bits
 changing for session FR-79
 setting for line FR-49
character mapping
 creating DR-471
 determining DR-449
 displaying DR-450
character padding
 changing for session FR-91
 configuring for line FR-68
character set
 7-bit for standard U.S. characters FR-95
 8-bit
character width
 EXEC process
 changing for session FR-84
 configuring for a line FR-59
 defining default FR-50
 special characters
 changing for session FR-95
 configuring for line FR-74
 defining default FR-51
- characters in regular expressions
 \$ character DR-903
 * character DR-903
 + character DR-903
 . character DR-903
 ? character DR-903
 ^ character DR-903
 _ character DR-903
chat scripts
 ARA protocol-callback DR-815
 backward compatibility, SLIP and PPP DR-638
 DDR DR-672
 escape sequences, (table) DR-669
 example DR-907
 EXEC callback DR-817
 expect-send pairs, sample (table) DR-670
 naming conventions DR-668, DR-672
 physical terminal lines, using on DR-38, DR-815, DR-817
starting
 because of incoming connections DR-40
 from the EXEC DR-60
 manually for a line DR-60
 on line activation DR-38
 on line reset DR-42
 on system startup DR-44
writing DR-668
chat-script command DR-668
 regular expressions, (example) DR-907
checksums
 AppleTalk P2R-33
 ISO CLNS P3R-198
 system images, verifying FR-254
chunk size, configuring IP DR-373
CIPX DR-630
circuit emulation services (CES)
 cable length WR-57
 channel-associated signaling (CAS) WR-52
 clocking WR-48
 clocking information WR-144
 framing WR-55
 hard PVC WR-62
 line code format WR-58
 loopback WR-60
 on-hook detection WR-52
 robbed bit signaling WR-61
 structured services WR-52
 unstructured services WR-52
Cisco 2520 through 2523 routers
 low-speed serial interfaces, physical layer DR-35
Cisco 4500 Series
 ATM loopback, OC3, DS3, E3 interfaces WR-79
Cisco IOS, saving configuration changes FR-xxi
ciscoBus II, enabling autonomous bridging on BR-23
Cisco-supported RFCs, (table) FR-753

class (map-list configuration) command, Frame Relay
WR-166
class (virtual circuit configuration) command
Frame Relay
 map class
 DLCI WR-168
class command WR-64
class-of-service command BR-588
claw (backup) command BR-744
claw command BR-741
clear access-list counters command P1R-111
clear access-template command SR-145
clear adjacency command XR-26
clear alps circuits command BR-927
clear alps counters command BR-928
clear appletalk arp command P2R-103
clear appletalk neighbor command P2R-104
clear appletalk route command P2R-105
clear appletalk traffic command P2R-106
clear arp-cache command P1R-8
clear atm vc command XR-128
clear bridge command BR-57
clear bridge multicast command BR-58
clear card-message command FR-219
clear cdp counters command FR-358
clear cdp table command FR-359
clear cef linecard command XR-27
clear clns cache command P3R-184
clear clns es-neighbors command P3R-185
clear clns is-neighbors command P3R-186
clear clns neighbors command P3R-187
clear clns route command P3R-188
clear controller command DR-275
clear controller lex command IR-33
clear counters command IR-35
clear counters line command DR-68
clear crypto connection command SR-214
clear crypto isakmp command SR-393
clear crypto sa command SR-310
clear dbconn connection command BR-710
clear decnet accounting command P3R-114
clear decnet counters command P3R-116
clear dialer command DR-676, DR-682
clear dlsw circuit command BR-236
clear dlsw reachability command BR-237
clear dlsw statistics command BR-238
clear drip command BR-200
clear entry command DR-367
clear frame-relay-inarp command WR-170
clear host command P1R-9
clear hub command IR-38
clear hub counters command IR-39
clear interface command IR-40
clear interface fastethernet command IR-42
clear ip accounting checkpoint command P1R-112

clear ip bgp command P1R-377
clear ip bgp dampening command P1R-379
clear ip bgp flap-statistics command P1R-380
clear ip bgp peer-group command P1R-381
clear ip cef command XR-28
clear ip cgmp command P1R-576
clear ip drp command P1R-113
clear ip dvmrp route command P1R-577
clear ip eigrp neighbors command P1R-293, P1R-577
clear ip flow stats command XR-2
clear ip igmp group command P1R-578
clear ip mds forwarding command XR-110
clear ip mroute command P1R-579
clear ip nat translation command P1R-10
clear ip nhrp command P1R-12
clear ip ospf command P1R-240
clear ip pim auto-rp command P1R-580
clear ip pim interface count command XR-111
clear ip route command P1R-13
clear ip rtp header-compression command P1R-581
clear ip sdr command P1R-582
clear ip sse command P1R-114
clear ip trigger-authentication command SR-30
clear ip wccp command FR-148
clear ipx accounting command P2R-221
clear ipx cache command P2R-223
clear ipx nhrp command P2R-224
clear ipx nlsp neighbors command P2R-225
clear ipx route command P2R-227
clear kerberos creds command SR-126
clear lane le-arp command XR-129
clear lane server command XR-131
clear line EXEC command DR-12
clear logging command FR-490
clear modem command DR-70, DR-72
clear modempool-counters command DR-74
clear mpoa client cache command XR-187
clear mpoa server cache command XR-188
clear ncia circuit command BR-722
clear ncia client command BR-723
clear ncia client registered command BR-724
clear netbios-cache command BR-90
clear rif-cache command BR-91, IR-43
clear service-module serial command IR-44
clear smrp meache command P2R-108
clear snapshot quiet-time command DR-826
clear source-bridge command BR-92
clear sse command BR-93
clear tarp counters command P3R-189
clear tarp ldb-table command P3R-190
clear tarp tid-table command P3R-191
clear tcp command FR-119
clear tcp statistics command P1R-114
clear vines cache command P3R-20
clear vines ipc command P3R-21

clear vines neighbor command P3R-22
clear vines route command P3R-23
clear vines traffic command P3R-24
clear vlan statistics command BR-59
clear voice port command VR-10
clear vpdn history failure command DR-836
clear vpdn tunnel command DR-837
clear x25 command WR-286
clear xot command WR-288
client (lu limit) command BR-749
client (lu nailing) command BR-751
client-atm-address command XR-133
clns access-group command P3R-192
clns adjacency-filter command P3R-194
clns cache-invalidate-delay command P3R-196
clns checksum command P3R-198
clns cluster-alias command P3R-199
clns configuration-time command P3R-200
clns congestion-threshold command P3R-201
clns dec-compatible command P3R-202
clns enable command P3R-203
clns erpdu-interval command P3R-204
clns esct-time command P3R-205
clns es-neighbor command P3R-206
clns filter-expr command P3R-207
clns filter-set command P3R-209
clns holding-time command P3R-211
clns host command P3R-212
clns is-neighbor command P3R-214
clns mtu command P3R-215
clns net (global configuration) command P3R-217
clns net (interface configuration) command P3R-218
clns packet-lifetime command P3R-219
clns rdpdu-interval command P3R-220
clns route (interface static route) command P3R-221
clns route (to enter a static route) command P3R-223
clns route default command P3R-225
clns route default discard command P3R-226
clns route discard command P3R-228
clns route-cache command P3R-224
clns router isis command P3R-230
clns router iso-igrp command P3R-231
clns routing command P3R-232
clns security-passthrough command P3R-233
clns send-erpdu command P3R-234
clns send-rdpdu command P3R-235
clns split-horizon command P3R-236
clns template-alias command P3R-238
clns want-erpdu command P3R-240
clock, transmit, (example) WR-9
clock calendar-valid command FR-625
clock rate, (examples) IR-46
clock rate command DR-237, IR-45
clock rate examples DR-238

clock rate line command VR-11
clock rate network-clock command VR-12
clock read-calendar command FR-626
clock set command FR-627
clock signal, inverting DR-249, IR-132
clock source
 T1 IR-385
 T3 IR-47
clock source (Cisco AS5200) IR-49
clock source (Cisco AS5200) command IR-49
clock source (Cisco MC3810) command IR-50
clock source (controller) command DR-276, IR-51
clock source (CT3IP) command IR-47
clock source (interface) command IR-53
clock source command DR-278
 interface configuration DR-239
clock source line command DR-276
clock summer-time command FR-628
clock ticks, IPX P2R-270
clock timezone command FR-630
clock update-calendar command FR-631
cluster aliases, ISO CLNS P3R-199
CMCC adapters
 activating, host link BR-776
 assigning, generic-pool BR-763
 backup data paths BR-790
 channel-protocol, defining transmit rate BR-740
CLAW
 configuring BR-741
 display
 connection state BR-823
 packing names BR-823
 packing statistics BR-825
configuring BR-738
 claw (backup) BR-744
 CMCP subchannels BR-753
 CSNA BR-755
 DLUR BR-758
 DLUS backup BR-760
 interfaces BR-744
 internal lan BR-774
 IP host backup, offload devices BR-787
 LLC connection parameters BR-882
 maximum LUs BR-781
 offload device BR-784
 offload devices BR-787
 PCA BR-740
 PU entity BR-793
 SNA session switch BR-888
 internal adapter interface BR-888
TCP port setting BR-881
TN3270 BR-884
TN3270 server BR-884, BR-887
WILL TIMING-MARK BR-885

defining
 host link BR-776
 idle-time BR-765
 preferred network node server BR-792
 keepalive interval BR-772
display
 adapters BR-810
 internal lans BR-810
display information
 channel statistics BR-827
 CLAW BR-797
 CMPC
 subchannel information BR-798
 transmission groups BR-843
 CSNA subchannels BR-801
 interfaces BR-831, BR-874
 IP stack BR-807
 LLC2 sessions BR-821
 offload, backup groups BR-797
 TCP connections BR-837
 TCP stack BR-840
 TN3270 server
 configuration parameters BR-848, BR-851,
 BR-855, BR-859
 PU LU BR-867
 UDP listener sockets BR-871
 UDP stack BR-872
enabling, core dump BR-761
ICMP stack, display information BR-805
interfaces, configuring BR-741
internal adapter, specify name BR-783
IP host backup BR-790
 claw (backup) command BR-744
LLC2
 display, active connections BR-800
 display parameters BR-812
 specify number BR-780
LSAPdefining, SNA session switch BR-778
LU sessions, limiting BR-749
microcode version, displaying BR-796
offload device, configuring BR-784
physical channel interface monitoring BR-880
PU entity, configuring, direct connection BR-793
shut down
 internal LAN interface BR-878
 physical interfaces BR-878
 virtual interfaces BR-878
specify
 internal adapter name BR-783
 TCP port setting BR-881
TN3270, generic-pool command BR-763
CMNS
 enabling WR-289
 local X.25 routing on nonserial media WR-289
 restarting WR-286
traffic statistics, displaying WR-307
X.25 routing WR-378
cmns enable command WR-289
CMPC
 defining
 LLC connection parameters BR-882
 cmpc command BR-753
 cmt connect command IR-55, IR-56
 cmt disconnect command IR-56
 codec (voice-port configuration) command VR-91
 codec command VR-13
 Combinet devices, protocols supported DR-288, DR-347
 comfort-noise command VR-93
 command FR-180
 command history
 buffer size
 changing for session FR-33
 setting for a line FR-16, FR-18
 displaying previous commands FR-26
 recalling commands FR-26
 command modes
 exiting FR-11
 global configuration FR-206
 privileged EXEC FR-8
 summary (table) FR-xx
 command syntax, help FR-14
commands
 abbreviating FR-3
 ATM WR-1
 EXEC, show ip bgp neighbors P1R-467
 mapping old to new, (table) FR-321
 mapping old to new (table) FR-198, FR-218, FR-247
 router configuration
 bgp bestpath med-confed P1R-362
 neighbor shutdown P1R-423
Common Command Language (CCL) DR-621
community access string, setting for SNMP FR-451
compand-type command VR-94
compatible command P1R-241
compress command DR-240, DR-576, IR-58
compress mppc command DR-576
compress predictor command DR-240, DR-576
compress stac command DR-240, DR-576
compressed system images FR-293
compressing configuration files FR-209
compression
 configuring IR-58
 HDLC encapsulation IR-59
 LAPB encapsulation IR-59
 LAPB DR-240, IR-60
 MPPC, ignore-pfc option DR-576, IR-59
 packet-by-packet, X.25 BR-81, BR-456, WR-346,
 WR-349
 PPP DR-576, IR-59
 PPP encapsulation IR-59

RAND compression algorithm DR-240, IR-60
specifying for LAT packets BR-32
statistics, displaying IR-205
TCP packet header WR-354
concentrator port, enabling IR-170
concurrent routing and bridging, enabling BR-16
condition command VR-95
conditional default origination, IS-IS P1R-325
CONFIG_FILE environment variable, specifying FR-200
config-isakmp command mode, enabling SR-399
config-register command FR-295
configuration file
 active, displaying FR-214
 buffer, changing size FR-199
 copying, to an rcp server FR-252
 host
 default filename FR-211
 loading from a server FR-202, FR-211
 network
 default filename FR-211
 loading from a server FR-211
 network server, storing FR-254
 NVRAM, displaying file FR-216
 storing
 in CONFIG_FILE environment variable FR-254, FR-255
 in NVRAM FR-254, FR-255
configuration files, copying, to an rcp server FR-203, FR-205, FR-253
Configuration Management, FDDI MAC-level connection IR-290
configuration mode, exiting FR-10
configuration register, streamlined setup facility FR-37
configuration, saving FR-xxi
configure command FR-206
configuring BR-275
confreg command FR-297
congestion threshold
 DECnet P3R-128
 ISO CLNS P3R-201
connect command DR-368, DR-382, DR-458
connect-at-startup command BR-589
connection command VR-97
connections
 displaying open DR-486, DR-565
 escaping from DR-417, DR-559
 incoming, definition FR-114
 LAT DR-382-DR-383
 mobile remote node DR-485
 naming FR-141
 NASI clients, connecting to DR-754
 NetBEUI DR-55
 enabling DR-34
 notification of pending output DR-416, FR-67
 PPP DR-635
refusing full duplex DR-462, FR-101
resuming DR-36
reverse DR-26, DR-30
rlogin DR-419, DR-421, DR-422, DR-457-DR-459
SLIP DR-640
switching between DR-36
Telnet DR-457-DR-460
Telnet, configuring a line DR-463
TN3270 DR-468
viewing the status of TCP DR-443
X.3 PAD DR-566
XRemote DR-487, DR-491, DR-495
console
 displaying debug messages FR-89
 logging messages FR-510
console port, configuring DR-22
constant bit rate (CBR) port
 clocking WR-81
 clocking information WR-144
 configuring WR-78
constrained multicast flooding
 enabling BR-15
 multicast state information
 clearing BR-58
 displaying BR-68
contact string, setting for SNMP FR-453
continue command FR-299
controller command DR-279
Controller commands
 cablelength short IR-26
 clock source IR-50
controller configuration commands
 loop-detect VR-30
 mode (Voice over ATM) VR-31
 shutdown (DS 1 link) VR-75
 tdm-group VR-77
 voice-group VR-81
controller t3 command IR-63
copy FR-193
copy bootflash rcp command FR-260
copy command FR-249
copy flash lex command IR-64
copy flash rcp command FR-258
copy modem command DR-76
copy rcp flash command, example FR-256
copy rcp running-config command FR-260
copy rcp startup-config command FR-260
copy tftp flash command, example FR-257
copy tftp lex command IR-65
copy xmodem command FR-224
copy ymodem command FR-225
cost
 assigning to DECnet P3R-131
 modifying default for transparent bridging BR-40

cost-per-byte command
 APPN, link station BR-590
 APPN port BR-591
cost-per-connect-time command
 APPN
 link station BR-592
 port BR-593
counters
 clearing IR-35, IR-375
 DECnet P3R-116
 TARP, clearing P3R-189
cp-cp-sessions-supported command BR-594
CPP
 and PPP support DR-339
 authentication, negotiating with DR-281, DR-339
 callback, accepting DR-283, DR-340
 encapsulation DR-288, DR-347
 half-bridging DR-288, DR-347
 PPP support DR-281
cpp authentication command DR-281, DR-283, DR-339, DR-340
 usernames and passwords used DR-281
cptone command VR-100
CRC
 G.703/G.704 IR-67
 setting IR-66
crc bits 5 command IR-68
crc command IR-66
crc4 command DR-242, IR-67
crl optional command SR-360
CRLs
 certificates
 accepting SR-360
 revoking SR-367
 checking SR-360
 downloading SR-367
 requesting SR-367
 retrieving SR-366
 (example) SR-366
 storing SR-366
cross-connect command VR-14
crypto algorithm 40-bit-des command SR-216
crypto algorithm des command SR-217
crypto ca authenticate command SR-362
crypto ca certificate chain command SR-364
crypto ca certificate query command SR-366
crypto ca crl request command SR-367
crypto ca enroll command SR-368
crypto ca identity command SR-371
crypto card clear-latch command SR-220
crypto card command SR-218
crypto cisco algorithm 40-bit-des command SR-222
crypto cisco algorithm des command SR-224
crypto cisco connections command SR-226

crypto cisco entities command SR-228
crypto cisco key-timeout command SR-230
crypto cisco pregen-dh-pairs command SR-231
crypto clear-latch command SR-233
crypto dynamic-map command SR-312
crypto esa command SR-234
crypto gen-signature-keys command SR-235
crypto ipsec security-association lifetime command SR-315
crypto ipsec transform-set command SR-317
crypto isakmp enable command SR-394
crypto isakmp identity command SR-395
crypto isakmp key command SR-397
crypto isakmp policy command SR-399
crypto key exchange dss command SR-237
crypto key exchange dss passive command SR-239
crypto key generate dss command SR-242
crypto key generate rsa (CA) command SR-373
crypto key generate rsa (IKE) command SR-401
crypto key pubkey-chain dss command SR-245
crypto key pubkey-chain rsa command SR-403
crypto key zeroize dss command SR-248
crypto key zeroize rsa command SR-376
crypto key-exchange command SR-236
crypto key-exchange passive command SR-241
crypto key-timeout command SR-247
crypto map (CET global configuration) command SR-250
crypto map (CET interface configuration) command SR-253
crypto map (IPSec global configuration) command SR-321
crypto map (IPSec interface configuration) command SR-325
crypto map local-address command SR-327
crypto pregen-dh-pairs command SR-254
crypto public-key command SR-255
crypto sdu connections command SR-256
crypto sdu entities command SR-257
crypto transform configuration mode, enabling SR-320
crypto zeroize command SR-258
csna command BR-755
CSNA device path BR-755
CSNP, packets P2R-319
CSU/DSU
 loopback IR-154
 resetting on Cisco 2524 or Cisco 2525 IR-44
Ctrl-C command FR-143
Ctrl-Z command FR-143
CUD
 interpreting calls with unknown WR-328
 placing in routing table WR-325, WR-375
custom queueing
 configuration information, displaying QR-74
 establishing QR-5
custom-queue-list command QR-5
cut-through command IR-68

D

- data, inverting IR-128
data bits
 changing character FR-79
 setting for session FR-49
data compression DR-240, IR-61
data flow control, setting FR-85
data size, RTR FR-374, FR-375
databits command FR-48
data-character-bits command FR-49
datagram encapsulation
 alternate destination addresses WR-325
dbconn license command BR-711
dbconn ping command BR-712
dbconn server command BR-713
DCE
 clock rate IR-45
 Frame Relay device WR-232
 timing IR-70
X.25 timers
 T10 restart indication WR-385
 T11 incoming call WR-386
 T12 reset indication WR-387
 T13 clear indication WR-388
dce-terminal-timing enable command DR-244, IR-70
DDN
 local marker facilities (table) WR-405
 X.121 address caution WR-293
 X.25 encapsulation WR-292
DDR P2R-399
 backups with floating-static routes P2R-350
 bandwidth on demand DR-695
 carrier wait time
 specifying for interface DR-707
 specifying for map class DR-730
 chat scripts DR-672
 sample expect-send pairs (table) DR-670
 writing DR-668
 clearing dialer interface statistics DR-676, DR-682
 controlling dialing
 by protocol DR-664, DR-692, DR-720
 by protocol and access list DR-664, DR-692,
 DR-720
 diagnostics for interface, displaying DR-222
 diagnostics for interface, displaying DR-709, DR-733
 dialer hold queue
 and rotary groups DR-688
 dialers supported DR-688
 dialer pool, ISDN B channels
 maximum number DR-726
 minimum number DR-726
 dialer profile
 CHAP or PAP, username DR-728
 dialer interface data, displaying DR-222, DR-709,
 DR-733
 dialer pool and dialer pool-member (example)
 DR-724
 dialer pool, members DR-726
 dialer pool, specifying DR-724
 link to physical interface DR-726
 links, maximum number DR-723
 specifying DR-728
 dialer rotary groups
 assigning interfaces DR-702
 setting interface priority DR-701
 dialing pool, dialer profile DR-724
DTR dialing
 not for rotary group (hunt group) leaders DR-677,
 DR-683
 outgoing calls only DR-677, DR-683
 receiving calls from DR-677, DR-683
 remote interface passive DR-677, DR-683
 remote interface to terminate calls DR-677,
 DR-683
 show dialer display DR-711, DR-735
floating-static routes P2R-350
identifying best line DR-704
idle time, line DR-689
idle time, map-class DR-718
interface timeout, setting DR-684
IPX
 spoofing watchdog packets P2R-381
 watchdog packets P2R-381, P2R-399
legacy
 assigning dial string-telephone number DR-705
 calls to single site, dial string DR-679, DR-705
 dialer map, ISDN interfaces DR-346
 dialer map, for outbound calls DR-697
 dialer map, ISDN interfaces DR-343
 enabling DR-678, DR-690
 forwarding broadcasts DR-342, DR-345
 ISDN Advice of Charge, BRI (example) DR-343
 snapshot routing DR-827
 specifying one telephone number DR-679
 outbound calls, identifying best line DR-704
 protocol address for broadcasts DR-698
 setting dialer load threshold DR-695
 single DDR telephone number DR-705, DR-729
 SPX, spoofing of watchdog packets P2R-383
 supported access list types and numbers (table)
 DR-665, DR-693, DR-721
 telephone number to call, specifying single DR-679
debug command output, displaying FR-89
debug messages, displaying enabled FR-561
debug serial-interface command DR-615
DEC spanning-tree protocol, specifying use of BR-52

- DECnet
access groups P3R-117
access list (example) DR-907
access lists P3R-106, P3R-108, P3R-112
accounting
 database entries, deleting P3R-114
 database threshold P3R-122
 disabling P3R-118
 enabling P3R-118
 filters P3R-120
 maximum transit entries P3R-123
associate name P3R-134
ATG limitations P3R-136
cluster alias configuration P3R-199
congestion threshold P3R-128
conversion, Phase IV to Phase V P3R-129
cost value for interface P3R-131
default route, on interface P3R-154
designated router P3R-158
end systems P3R-158
equal cost paths P3R-142, P3R-148
extended access lists P3R-106
fast switching P3R-157
filtering packets and routing information DR-902
filters
 on hello messages P3R-135
 on object numbers (table) P3R-110
 on routing information P3R-135
hello timer P3R-133
hop count P3R-127
host name mapping P3R-134
interarea routing cost P3R-126
intra-area routing cost P3R-140
Level 1 routing P3R-146
Level 2 routing P3R-146
maximum packet visits P3R-143
node addresses P3R-138
node type P3R-146
OSI backbone, propagating Phase IV areas P3R-124
path selection P3R-142
Phase IV Prime
 displaying adjacencies P3R-175
 enabling P3R-160
 inherent MAC addresses P3R-105
 MAC addressing advantages P3R-160
 packets sent to Unknown Destination multicast
 P3R-159
Phase IV through OSI backbone, advertising P3R-124
Phase IV/Phase IV Prime on same LAN P3R-158
Phase IV-to-Phase V conversion P3R-129
propagate static route P3R-149
protocol keywords, SMDS multicast address WR-274
route default P3R-156
routing P3R-160
 cost P3R-126, P3R-140
 table size P3R-139
routing updates P3R-163
SMDS, configuring over WR-274
static routes
 creating P3R-152
 displaying P3R-178
 on interface P3R-150
timers P3R-133, P3R-162
Token Ring
 configuring on P3R-132
 encapsulation over P3R-132
decnet access-group command P3R-117
decnet accounting command P3R-118
decnet accounting list command P3R-120
decnet accounting threshold command P3R-122
decnet accounting transits command P3R-123
decnet advertise command P3R-124
decnet area-max-cost command P3R-126
decnet area-max-hops command P3R-127
decnet congestion-threshold command P3R-128
decnet conversion command P3R-129
decnet cost command P3R-131
decnet encapsulation command P3R-132
decnet hello-timer command P3R-133
decnet host command P3R-134
decnet in-routing-filter command P3R-135
decnet map command P3R-136
decnet max-address command P3R-138
decnet max-area command P3R-139
decnet max-cost command P3R-140
decnet max-hops command P3R-141
decnet max-paths command P3R-142
decnet max-visits command P3R-143
decnet multicast-map command P3R-144
decnet node-type command P3R-146
decnet out-routing-filter command P3R-147
decnet path-split-mode command P3R-148
decnet propagate static command P3R-149
decnet route (interface static route) command P3R-150
decnet route (specific static route) command P3R-152
decnet route default (interface default route) command
 P3R-154
decnet route default (specific default route) command
 P3R-156
decnet route-cache command P3R-157
decnet router-priority command P3R-158
decnet routing command P3R-160
decnet routing-timer command P3R-162
decnet split-horizon command P3R-163
dedicated line, configuring , DR-647
default form of a command, using FR-xxi
default networks, specifying P1R-487

default routes
 IP P1R-487
 IP Enhanced IGRP P1R-294
 IS-IS for IP P1R-242, P1R-325
 OSPF P1R-242, P1R-325
default-information command, IP Enhanced IGRP P1R-294
default-information originate (BGP) command P1R-382
default-information originate (IS-IS) command P1R-325
default-information originate command
 OSPF P1R-242
 RIP P1R-193
default-metric (BGP) command P1R-383
default-metric (RIP) command, RIP P1R-194
default-metric command
 IP Enhanced IGRP P1R-295
 OSPF P1R-244
default-name command XR-135
default-value exec-character-bits command FR-50, FR-95
default-value special-character-bits command FR-51
define command VR-103
delay command IR-69
delete command FR-169
delta, PPP BACP negotiations, telephone number change
 DR-791
deny (CET) command SR-259
deny command P1R-115
 IPX
 SAP filtering P2R-234
 standard P2R-236
 summary P2R-232
deny command (extended) P2R-229
deny command (SAP filtering) P2R-234
deny command (standard) P2R-236
deny command (summary) P2R-232
description (controller) command IR-71
description command VR-105
description command (controller) DR-284
description command (interface) DR-245, DR-285
designated routers
 IS-IS for IP, specifying election P1R-338
desired-max-send-btu-size command BR-595
destination routing table
 ISO CLNS, displaying P3R-332
destination-pattern command VR-16
DHCP
 helper addresses P1R-26, P1R-32
 IP address pooling DR-579
 show settings DR-608
 specifying server DR-581
diag command FR-491
dial backup
 Dialer Profiles DR-747–DR-750
 Dialer Watch DR-743
 watched routes DR-743
line delay, setting DR-740
secondary line, selecting DR-741, DR-748
traffic load threshold, setting DR-742, DR-750
dial peer configuration commands, shutdown (dial-peer
 configuration) VR-74
dial string (telephone number), specifying DR-679, DR-705,
 DR-729
dial-control-mib command VR-18
dialer DR-678, DR-690
dialer callback-secure command DR-806
dialer callback-server command DR-807
dialer caller command DR-820
dialer dtr command DR-677, DR-683
dialer enable-timeout command DR-684
dialer fast-idle command DR-685
 interface configuration DR-685
 map-class configuration DR-716
dialer group, assigning interface DR-687, DR-717
dialer hold queue
 dialers supported DR-688
 rotary groups DR-688
dialer hold-queue command DR-688
dialer idle-timeout command DR-689
 interface configuration DR-689
 map-class configuration DR-718
dialer in-band command DR-678, DR-690
dialer interface
 clearing statistics DR-676
 dial backup, Dialer Profiles DR-747
dialer interface, clearing statistics DR-682
dialer isdn command DR-719
dialer isdn short-hold command DR-341
dialer isdn spc command DR-719
dialer isdn speed command DR-719
dialer load-threshold command DR-695
 multilink PPP and idle timers DR-599, DR-689,
 DR-696, DR-797
dialer map, map class name DR-313
dialer map bridge command DR-697
dialer map class, for ISDN Advice of Charge DR-342
dialer map command DR-342, DR-345, DR-697
 form used for ISDN Advice of Charge DR-342
 form used for ISDN semipermanent connections
 DR-345
ISDN Advice of Charge, usage guidelines DR-343
ISDN semipermanent connections DR-697
no effect on DTR dialing DR-677, DR-683
regular expressions DR-902
dialer map snapshot command DR-827
dialer map, defining configuration parameters for DR-732,
 DR-808
dialer max-link command DR-723
dialer pool, Dialer Profiles, backup interfaces DR-747
dialer pool command DR-724
dialer pool-member command DR-726
dialer priority command DR-701

Dialer Profiles, dial backup DR-747–DR-750
dialer remote-name command DR-728
dialer rotary groups
 assigning interfaces DR-702
 defining DR-708, DR-731
 setting interface priority DR-701
dialer rotary-group command DR-702
dialer rotor command DR-704
dialer string class command DR-729
dialer string command DR-679, DR-705, DR-729
 DDR, dialer profiles DR-729
 legacy DDR DR-679, DR-705
 no effect on DTR dialing DR-677, DR-683
dialer wait-for-carrier-time command
 interface configuration DR-707
 map-class configuration DR-730
Dialer Watch
 overview DR-743
 watched routes DR-743
dialer watch-disable command DR-744
dialer watch-group command DR-745
dialer watch-list command DR-746
dialer-group command DR-687, DR-717
dialer-list protocol command DR-664, DR-692, DR-720
dial-peer configuration commands
 acc-qos VR-4
 alt-dial VR-6
 answer-address VR-7
 codec VR-13
 destination-pattern VR-16
 expect-factor VR-22
 fax-rate VR-23
 forward-digits VR-25
 icpif VR-27
 ip udp checksum VR-29
 port (voice) VR-38
 preference VR-40
 prefix VR-41
 req-qos VR-42
 session protocol VR-44
 session target VR-45
 snmp enable peer-trap poor-qov VR-76
 vad (dial-peer configuration) VR-79
dial-peer terminator command VR-19
dial-peer voice command VR-20
dial-type command VR-106
dir command FR-170
direct encapsulation, configuring SRB for BR-228, BR-452
directory
 print working FR-182
 remove FR-184
disable command FR-4
disconnect character, setting FR-52
disconnect command DR-371

disconnect warning time, setting DR-656
disconnect-character command FR-52
discovery mode P2R-35
 enabling P2R-23, P2R-32, P2R-35
 startup process P2R-35
diskless boot, configuring FR-329
dispatch character
 changing for session FR-80
 configuring for line FR-53
dispatch-character command FR-53
dispatch-machine command FR-54
dispatch-timeout command DR-186, FR-56
display information, TN3270 server
 LU nailing BR-861
 PU configuration parameters BR-863
displaying, DRIP BR-203
distance (ISO CLNS) command P3R-241
distance bgp command P1R-384
distance command P1R-480
distance eigrp command P1R-297
distance ospf command P1R-245
distributed compression IR-58, WR-211, WR-221
DistributedDirector, enabling DRP Server Agent P1R-138
distribute-list in (IPX) command P2R-238
distribute-list in command P1R-483
distribute-list out (IPX) command P2R-240
distribute-list out command P1R-485
distribute-sap-list in command P2R-242
distribute-sap-list out command P2R-244
distributions-of-statistics-kept command FR-360
DLCI
 forwarding broadcasts to WR-215, WR-216
 interface statistics, displaying IR-320
 local (source), setting WR-210
 multicast mechanism
 configuring WR-216
 displaying statistics about IR-320
 protocol address, mapping to WR-211
 using for bridging (example) WR-213
dlsw allroute-netbios command BR-239
dlsw allroute-sna command BR-240
dlsw bgroup-list command BR-241
dlsw bridge-group command BR-242
dlsw disable command BR-244
dlsw duplicate-path-bias command BR-245
dlsw group cache disable command BR-246
dlsw group-cache max entries command BR-247
dlsw icannotreach saps command BR-248
dlsw icanreach command BR-249
dlsw llc2 norr command BR-251
dlsw local-peer command BR-253
dlsw mac-addr command BR-255
dlsw netbios-keepalive-filter command BR-258
dlsw netbios-name command BR-259

- dlsw peer-on-demand-defaults command BR-261
dlsw port-list command BR-263
dlsw prom-peer-defaults command BR-264
dlsw remote-peer frame relay command BR-266
dlsw remote-peer fst command BR-269
dlsw remote-peer interface command BR-271
dlsw remote-peer tcp command BR-274
dlsw ring-list command BR-278
dlsw timer command BR-279
dlsw udp-disable command BR-281, BR-282, BR-284
DLSw+
 configuring service access points BR-248
 duplicate MAC addresses BR-245
 fault-tolerance BR-245
 load-balancing BR-245
 local peer, defining BR-253
 QLLC, connecting with BR-459
 Rif Passthru BR-275
 static MAC address, configuring BR-255
 static NetBIOS name, configuring BR-259
dlur command BR-596, BR-758
DLUR, APPN support BR-596, BR-597
dlur-dspu-name command BR-597
dlus command, APPN
 control point BR-598
 link station BR-600
DLUS, APPN support BR-598, BR-600
dlus-backup command BR-760
DNS
 enabling for rcp and rsh FR-330
 ISO CLNS addresses P3R-243
DNS idle timeout, specifying SR-177
DNSIX
 collection center, specifying SR-441
 enabling SR-444
 hosts that receive messages
 alternate SR-443
 primary SR-442
 number of records in a packet, specifying SR-445
 retransmit count SR-440
dnsix-dmdp retries command SR-440
dnsix-nat authorized-redirection command SR-441
dnsix-nat primary command SR-442
dnsix-nat secondary command SR-443
dnsix-nat source command SR-444
dnsix-nat transmit-count command SR-445
dollar sign character in regular expressions DR-905
domain, assigning BR-17
domain-password command P1R-327
downward-compatible-config command FR-632
down-when-looped command IR-72
DRIP
 clearing BR-200
 displaying BR-203
DRP Server Agent, enabling P1R-138
DS-3
 loopback IR-156, IR-157
 scrambling, (example) WR-10
DSPU
 activating BR-501
 activation request units, defining BR-462
 default PU, defining BR-463
 Ethernet address
 enabling BR-468
 for use by, defining BR-492
 Ethernet interface
 host, defining BR-477
 upstream host BR-465
FDDI address for use by, defining BR-492
Frame Relay
 address for use by, enabling BR-468
 interface
 host, defining BR-471
 PU, defining BR-486
 upstream host BR-465
LAN, defining BR-511
LU
 defining BR-479
 pool, defining BR-484
monitoring BR-512
NCIA
 address for use by, defining BR-492
 connection
 SAP, enabling for downstream PU BR-482
 server configuration BR-481
notification level, specifying BR-483
QLLC data link
 downstream PU, defining BR-488
 host, defining BR-473
 upstream host BR-466
RSRB
 address for use by, defining BR-492
 connection
 activating BR-499
 host, defining BR-477
 service access point, enabling for downstream PU BR-498
RSRB connection
 service access point, enabling for upstream host
 BR-497
 virtual ring, defining BR-495
SDLC
 address for use by, enabling BR-470
 data link
 downstream PU, defining BR-490
 host, defining BR-475
 upstream host BR-467
Token Ring address for use by
 defining BR-492
 enabling BR-468

Token Ring interface
 host, defining BR-477
 upstream host BR-465
 virtual data link control address for use by, defining
 BR-492
 virtual data link control connection
 activating BR-509
 service access point, enabling for downstream PU
 BR-507
 service access point, enabling for upstream host
 BR-505
 virtual ring, defining BR-503
 X.121 subaddress for use by, enabling BR-469
 dspu activation-window command BR-462
 dspu default-pu command BR-463
 dspu enable-host, dspu enable-host (QLLC) command
 BR-466
 dspu enable-host (FDDI) command BR-465
 dspu enable-host command
 dspu enable-host (Ethernet) command BR-465
 dspu enable-host (SDLC) command BR-467
 dspu enable-host command, for Frame Relay and
 Token Ring BR-465
 dspu enable-pu command
 dspu enable-pu (Ethernet) command BR-468
 dspu enable-pu (FDDI) command BR-468
 dspu enable-pu (Frame Relay) command BR-468
 dspu enable-pu (SDLC) command BR-470
 dspu enable-pu (Token Ring) command BR-468
 dspu host command
 dspu host (Ethernet) command BR-477
 dspu host (FDDI) command BR-477
 dspu host (Frame Relay) command BR-471
 dspu host (QLLC) command BR-473
 dspu host (RSRB) command BR-477
 dspu host (SDLC) command BR-475
 dspu host (Token Ring) command BR-477
 dspu host (VDLC) command BR-477
 dspu lu command BR-479
 dspu ncia command BR-481
 dspu ncia enable-pu command BR-482
 dspu notification-level command BR-483
 dspu pool command BR-484
 dspu pu command
 dspu pu (Ethernet) command BR-492
 dspu pu (FDDI) command BR-492
 dspu pu (Frame Relay) command BR-486
 dspu pu (NCIA) command BR-492
 dspu pu (QLLC) command BR-488
 dspu pu (RSRB) command BR-492
 dspu pu (SDLC) command BR-490
 dspu pu (Token Ring) command BR-492
 dspu pu (VDLC) command BR-492
 dspu rsrb command BR-495

dspu rsrb enable-host command BR-497
 dspu rsrb enable-pu command BR-498
 dspu rsrb start command BR-499
 dspu start command BR-501
 dspu vdlc command BR-503
 dspu vdlc enable-host command BR-505
 dspu vdlc enable-pu command BR-507
 dspu vdlc start command BR-509
 DSU
 configuration information, displaying IR-230
 interoperability mode, setting IR-74
 maximum bandwidth, setting IR-73
 dsu bandwidth command IR-73
 dsu mode command IR-74
 DTE, X.25 timers
 T20 restart request WR-389
 T21 call request WR-390
 T22 reset request WR-391
 T23 clear request WR-392
 dte-invert-txc command DR-246, IR-76
 DTR, signal pulsing IR-181
 DTR dialing
 not affected by dialer map and dialer string commands
 DR-677, DR-683
 not for rotary group (hunt group) leaders DR-677,
 DR-683
 outgoing calls only DR-677, DR-683
 remote interface configured to terminate calls DR-677
 remote interface passive DR-683
 remote interface passive only DR-677
 remote interface to terminate calls DR-683
 DTR signal pulsing DR-251
 duplex command IR-77
 DVMRP IR-407
 DWQF
 configuration information, displaying QR-74
 default queue lengths and thresholds (table) QR-11
 enabling QR-11
 interfaces supported QR-11
 DWRED
 configuration information, displaying QR-74
 enabling QR-43
 exponential weight factor QR-45
 hardware support QR-43, QR-46, QR-48
 minimum threshold values (table) QR-47
 parameters QR-47
 DXI 3.2 WR-270
 dxi map command WR-65
 dxi pvc command WR-67
 dynamic command P1R-119
 dynamic map, SMDS WR-273
 dynamic routing, asynchronous connection, configuring
 manually DR-9

E

- E.164, auto conversion, (example) WR-11
- E.164 addresses
 - ATM, (example) WR-39
 - configuring WR-39
 - field descriptions WR-240
 - format WR-240
 - Frame Relay SVC WR-239
- E1 R2
 - countries supported DR-260
 - country settings DR-260
 - customizing parameters DR-260
- E3-scramble, (example) WR-12
- early-token-release command IR-79
- Easy IP DR-876
- echo-cancel coverage command VR-107
- echo-cancel enable command VR-109
- editing command DR-173, FR-5
- editor
 - enhanced mode
 - disabling for a line DR-173, FR-5
 - disabling for session FR-28
 - enabling for a line DR-173, FR-5
 - enabling for session FR-28
- Release 9.21 keys and functions (table) DR-173
- effective-capacity command, APPN
 - link station BR-602
 - port BR-603
- EGP, neighbor, relationships P1R-216
- EIA/TIA-232
 - handshake DR-36
- EIGRP, timers active-time P1R-321
- eigrp log-neighbor-changes command P1R-299
- enable command FR-8, FR-695, SR-422
- enable last-reort command SR-107
- enable password command SR-422
 - using encryption-type, (caution) SR-422
- enable secret command SR-424
 - using encryption-type, (caution) SR-424
- enable use-tacacs command SR-108
 - using tacacs-server authenticate enable command (caution) SR-108
- enabling logging for neighbor resets P1R-373
- encapsulation
 - ATM-DXI IR-80
 - bstun IR-80
 - DECnet, over Token Ring P3R-132
 - dynamic detection on serial or ISDN interface DR-258, DR-338
 - Frame Relay WR-171
 - hdlc IR-80
 - IPX P2R-304, P2R-352
 - LAPB WR-290
 - lapb IR-80
- PPP DR-247, DR-578, IR-80
- SMDS WR-263
- V.120, dynamically set DR-642
- VINES P3R-65
- X.25 WR-292
- XNS P3R-343
- encapsulation aal5 command WR-69
- encapsulation alc command BR-929
- encapsulation atm-ces command VR-186
- encapsulation atm-dxi command WR-71
- encapsulation bstun command BR-328
- encapsulation command DR-247, DR-578, DR-622, IR-80
- encapsulation cpp command DR-288, DR-347
- encapsulation frame-relay command WR-171
- encapsulation isl command XR-3
- encapsulation labp command WR-290
- encapsulation sde command XR-4
- encapsulation sdlc command BR-370
- encapsulation sdlc-primary command BR-371
- encapsulation sdlc-secondary command BR-373
- encapsulation smds command WR-263
- encapsulation stun command BR-329
- encapsulation tr-isl command BR-201, XR-6
- encapsulation x25 command WR-292
- encryption (IKE policy) command SR-405
- end command FR-10
- end-of-line character, changing FR-104
- enrollment mode ra command SR-378
- enrollment retry-count command SR-379
- enrollment retry-period command SR-381
- enrollment url command SR-383
- environment variables
 - BOOT, specifying FR-290
 - BOOTLDR, specifying FR-286
 - CONFIG_FILE, specifying FR-200
- environmental conditions
 - at last shutdown FR-565
 - table of measurements within specification FR-568
 - temperature and voltage FR-565
- equal cost paths, DECnet P3R-148
- erase command FR-172
- erase flash command FR-226, FR-265
- erase start-up config command
- ERPDU
 - interval, determining P3R-204
 - ISO CLNS P3R-234
 - support, configuring P3R-234
- error messages
 - logging priorities, (table) FR-508, FR-510, FR-519, FR-526, FR-583
 - redirecting FR-521
- ES, listing P3R-206, P3R-214
- escape character
 - changing for session FR-83
 - defining for a line FR-58

returning to EXEC prompt DR-487
escape-character command FR-58
ESI, address, (example) WR-13
ES-IS, hello rate configuration P3R-200, P3R-211
/etc/services file P2R-63
Ethernet
 0x80d5 format, enabling use of BR-169
 100VG AnyLAN port adapter IR-126, IR-251
 APPN partner node, specifying BR-615
 bandwidth IR-21
 bridging from FDDI IR-87
 encapsulated packets
 filtering on input BR-31
 filtering on output BR-39
 extending twisted-pair 10BaseT capability IR-382
 MOP enabled IR-162
 specifying media type IR-161
Ethernet type codes, (table) BR-937
ethernet-transit-oui command BR-94
EtherTalk P2R-1
evaluate command SR-148
examples
 CAs
 authenticating SR-362
 configuration SR-383
 declaring SR-371, SR-383
 LDAP support SR-384
 CBAC
 audit trail messages SR-176
 half-open sessions, high threshold SR-179,
 SR-188
 half-open sessions, low threshold SR-181, SR-190
 half-open sessions, TCP threshold SR-195
 inspections, configuring SR-187
 session information, viewing SR-200
 timeouts, DNS idle SR-177
 timeouts, FIN-exchange SR-192
 timeouts, synwait SR-196
 timeouts, TCP idle SR-193
 timeouts, UDP idle SR-198
 certificates
 accepting SR-360
 deleting SR-358, SR-364
 requesting SR-369
 requests, resending SR-379, SR-381
 retrieving SR-366
 viewing SR-385–SR-386
CRLs, retrieving SR-366
IKE
 configuration SR-400
 connections, clearing SR-393
 DH group identifier, specifying SR-406
 disabling SR-394
 encryption algorithm, specifying SR-405
 hash algorithm, specifying SR-407
ISAKMP identity, configuring SR-395
parameters, viewing SR-414
pre-shared keys
 configuration SR-391
 specifying SR-397
RAs, configuration SR-378
RSA keys
 deleting SR-376
 generating SR-374, SR-375, SR-402
 specifying SR-388, SR-390
 specifying manually SR-403, SR-408, SR-413
 viewing SR-417, SR-418
SAs
 lifetimes, configuring SR-410
 viewing SR-415
exception core-file command FR-494
exception dump command FR-496
exception linecard command FR-498
exception memory command FR-500
exception protocol command FR-502
exception queue, length, (example) WR-15
exception slot command BR-761
exception spurious-interrupt command FR-506
EXEC
 mode, default aliases FR-618
process
 delaying startup of FR-663
 disabling on a line FR-121
 displaying messages upon creation FR-112
 enabling on a line FR-121
 setting timeout interval FR-124
 prompt, setup command facility FR-37
exec command DR-13, FR-121
EXEC commands
 clear voice port VR-10
 show c7200 VR-244
 show cable burst-profile VR-219
 show cable modem VR-221
 show cable modulation-profile VR-223
 show cable privacy VR-225
 show cable qos VR-227
 show cable spectrum group VR-228
 show call active voice VR-48
 show call history voice VR-52
 show controllers cable VR-230
 show diag VR-242
 show dial-peer voice VR-55
 show dialplan incall number VR-58
 show dialplan number VR-59
 show interface cable VR-234
 show interface cable signal-quality VR-239
 show interfaces cable sid VR-240
 show ip bgp neighbors P1R-467
 show num-exp VR-62
 show voice call VR-63

show voice dsp VR-65
show voice port VR-67
EXEC process
 disabling on a line DR-13
 enabling on a line DR-13
 setting timeout interval DR-14
exec-banner command FR-112, FR-115
exec-character-bits command FR-59
exec-timeout command DR-14, DR-186, FR-124
execute-on command FR-227
exit, configuration mode FR-10
exit command FR-11
expect-factor command VR-22
explorers, spanning-tree, forwarding or blocking BR-180
explorers, forwarding or blocking
 all-routes BR-178
 spanning-tree BR-179
exponential weight factor, DWRED QR-45
extended access lists
 IP P1R-98
 named dynamic P1R-119
 IPX P2R-206
extended networks, IP, using secondary addresses P1R-15
extended TACACS, username authentication DR-615
external port
 T1 IR-386

F

facility handling, X.25 WR-403
 marker facility (table) WR-405
 standard (table) WR-404
fair-queue (DWFQ) command QR-11
fair-queue command QR-7
Fast EtherChannel IR-31
 assigning a Fast Ethernet IR-31
 configuring IR-124
 displaying information IR-311
Fast Ethernet
 assigning a Fast EtherChannel IR-31
 displaying Fast EtherChannel information IR-311
Fast EtherChannel IR-31
Fast EtherChannel interface IR-124
fast idle timer
 interface, setting DR-685
 map class, setting DR-716
fast switching
 AppleTalk P2R-82
 configuring P2R-82
 displaying cache entries P2R-119
 flow XR-13
 IP, enabling XR-13
 IPX
 cache entries, deleting P2R-223

cache entries, displaying P2R-429
directed broadcast packets P2R-260
disabling P2R-352
enabling P2R-352
inactivity timeout P2R-354
update timeout P2R-357
ISO CLNS P3R-224
SRB BR-188
SSE BR-191
transport, configuring BR-223
VINES
 cache entries
 deleting P3R-20
 displaying P3R-26
 configuring P3R-82
 XNS P3R-357
fast-switched SR/TLB, disabling BR-198
fax-rate command VR-23
FDDI
 APPN partner node, specifying BR-615
 bit specifications IR-85
 bridging configurations IR-87
 determining bandwidth IR-94
 encapsulation mode compatibility IR-87
 full-duplex IR-102, IR-104
 full-duplex status IR-287
 raw, IPX encapsulation P2R-304
 stopping IR-55
 transmission time, controlling IR-92
fddi burst-count command IR-82
fddi c-min command IR-83
fddi cmt-signal-bits command IR-84
fddi duplicate-address-check command IR-86
fddi encapsulate command IR-87
fddi frames-per-token command IR-89
fddi smt-frames command IR-90
fddi tb-min command IR-91
fddi tl-min-time command IR-92
fddi token-rotation-time command IR-94
fddi t-out command IR-93
fddi valid-transmission-time command IR-95
FDDITalk P2R-1, P2R-76
FDL, performance report IR-388, IR-396
fdl command IR-96
FECN, bits WR-250
FID4 frames, configuring the router to read BR-222
file, display FR-180
file compression FR-209
file prompt command FR-174
file system
 erase FR-172
 list FR-170
 setting the default FR-168
files, download mode FR-82
filter register, AIP

- (example) WR-44
- configuring WR-44
- filter-for-history command FR-362
- filtering
 - by protocol type, Ethernet type codes (table) BR-937
 - establishing packet size for SNMP FR-469
- filters
 - AppleTalk
 - applying GZL P2R-57
 - data packet, applying P2R-21
 - GZL P2R-39
 - partial zone P2R-75
 - routing table P2R-37, P2R-39
 - IP Enhanced IGRP
 - routes in updates P1R-483
 - routes in updates, advertising P1R-485
 - routing updates, preventing P1R-519
 - IP, on sources of routing information P1R-480
 - IPX
 - broadcast P2R-280
 - generic P2R-246
 - NetBIOS P2R-300, P2R-302
 - routing table P2R-285, P2R-361
 - routing updates P2R-363
 - SAP P2R-287, P2R-340, P2R-363
 - IPX Enhanced IGRP, route updates P2R-238, P2R-240
 - IPX SAP, routes in updates, processing P2R-242
 - NLSP, route updates P2R-238, P2R-240
 - VINES
 - access lists
 - extended P3R-55
 - simple P3R-57
 - standard P3R-60
 - interface, applying to P3R-53
 - XNS
 - enabling P3R-358
 - generic, enabling P3R-342
 - routing table, enabling P3R-352
 - FIN-exchange timeout, specifying SR-192
 - Finger protocol, enabling FR-664
 - FIP, displaying information about IR-220
 - Flash file system
 - check and repair FR-178
 - format FR-176
 - make directory FR-179
 - recover deleted file FR-191
 - remove directory FR-184
 - rename file FR-183
 - squeeze FR-190
 - verify memory FR-193
 - Flash load helper, monitoring FR-235
 - Flash memory
 - booting automatically FR-290
 - erasing internal FR-265
 - formatting FR-175
 - partitioning FR-267
 - verifying checksum FR-193, FR-254
 - Flash memory device, deleting a file FR-169
 - floating static routes
 - AppleTalk extended networks P2R-90
 - AppleTalk nonextended networks P2R-92
 - flow control
 - changing for session FR-85
 - configuring for a line DR-15
 - end transmission FR-99
 - input, X.3 PAD parameters DR-897
 - start character FR-97
 - start character, configuring for a line DR-59, DR-188
 - stop character FR-99
 - stop character, configuring for a line DR-62
 - flowcontrol command DR-15
 - format command FR-175
 - format indicator 4 (FID4) frames, configuring the router to read BR-222
 - forward delay interval, specifying BR-19
 - forward-digits command VR-25
 - forwarding database, clearing BR-57
 - forwarding mask, X.3 PAD DR-894
 - fractional data line DR-279
 - Frame Rejects (FRMRs), SDLC, configuring BR-397
 - Frame Relay
 - APPN partner node, specifying BR-605
 - bandwidth, estimating QR-81
 - Bc WR-174
 - Be WR-176
 - bridging over BR-60, WR-215
 - broadcast queue
 - actual transmission rate limit WR-179
 - creating WR-179
 - maximum transmission rate measures WR-179
 - priority WR-179
 - broadcast traffic, defined WR-179
 - CIR, minimum acceptable, specifying WR-219
 - committed burst size (Bc), specifying WR-174
 - compression, Stacker packet-by-packet WR-221
 - conditions that bring down WR-206
 - configured routes, displaying WR-256
 - custom queue, associating with map class WR-184
 - DE, group number for DLCI WR-185
 - DE bit, purpose WR-186
 - DE group
 - deleting all groups WR-185
 - deleting one group WR-185
 - DE list
 - deleting entire list WR-187
 - deleting part WR-186
 - disabling split horizon P1R-200, P1R-212
 - DLCI
 - forwarding broadcasts to WR-215, WR-216
 - interface statistics IR-320

- mapping protocol address to WR-211
multicast mechanism WR-216
multicast mechanism statistics IR-320
multicasts WR-220
setting source in test environment WR-210
enabling WR-171
encapsulation
 cisco WR-171, WR-190
 IETF WR-171, WR-190, WR-211, WR-215
excess burst size (Be), specifying WR-176
FECN/BECN bit passing WR-250
general statistics, displaying WR-260
idle timeout, specifying interval WR-188
IETF encapsulation, effect on TCP/IP header
 compression WR-195, WR-217
Inverse ARP WR-170, WR-193
IP map, inheriting compression characteristics from
 interface WR-217
LAPF
 commands WR-199, WR-200, WR-201, WR-202
 commands, usually not used WR-198
 display status of internals WR-244
 FRMR frame, sending WR-197
 link idle timer, setting WR-202
 maximum length of information field, setting
 WR-200
 maximum retransmission count, setting WR-199
 retransmission timer, setting WR-201
 window size, setting WR-198
LMI
 general statistics, displaying IR-320, WR-246
 keepalive interval WR-236
 type, selecting WR-209
LMI DCE
 error threshold WR-204
 monitored events count WR-206
 polling verification timer WR-208
LMI DTE
 error threshold WR-205
 full status polling interval WR-203
 monitored event count WR-207
LMI NNI
 error threshold WR-204, WR-205
 monitored events count WR-206, WR-207
 polling verification timer WR-208
map class
 interface or subinterface WR-182
 routing protocols supported WR-166
map list
 configuration and display WR-258
 map class and QOS parameters WR-239
OSPF over WR-211
point-to-point links WR-215
PVC
 displaying statistics for WR-250
status WR-250
switching on DCE WR-232
switching on NNI WR-232
QOS parameters, applying to map list WR-237
routes, configured, displaying WR-256
routing protocols supported WR-211
RTP header compression
 enabling P1R-583
 enabling per DLCI P1R-585
 enabling with TCP header compression P1R-584
 statistics, displaying P1R-654
SVC support WR-166, WR-181, WR-219, WR-231
 X.121 or E.164 addresses WR-239
SVCs
 displaying all for map list WR-257
 enabling WR-231
 map group for interface required WR-238
switching, enabling WR-232
TCP/IP header compression
 active WR-217
 Cisco encapsulation WR-217
 displaying interface information WR-242
 inconsistent with IETF encapsulation WR-195
 outgoing WR-195
 passive WR-217
 supported interfaces WR-195
test environment WR-210, WR-220
traffic shaping QR-81, QR-86, QR-88, WR-174,
 WR-176
 default queuing WR-235
 operation on SVCs WR-233
 per-VC queuing WR-235
virtual circuits, assigning priority queue WR-225
frame type, channelized E1, channelizedT1 DR-289
frame type, selecting IR-97
framed mode on G.703-E1 interface DR-252, IR-399
frame-relay adaptive-shaping command WR-172
frame-relay bc command WR-174
frame-relay be command WR-176
frame-relay broadcast-queue command WR-179
frame-relay cir command WR-181
frame-relay class command WR-182
frame-relay custom-queue-list command WR-184
frame-relay de-group command WR-185
frame-relay de-list command WR-186
frame-relay frmr command WR-197
frame-relay idle-timer command WR-188
frame-relay interface-dlci command WR-190
frame-relay intf-type command WR-192
frame-relay inverse-arp command WR-193
frame-relay ip rtp header-compression command P1R-583
frame-relay ip tcp header-compression command WR-195
frame-relay lapf k command WR-198
frame-relay lapf n200 command WR-199
frame-relay lapf n201 command WR-200

frame-relay lapf t200 command WR-201
 frame-relay lapf-t203 command WR-202
 frame-relay lmi-n391dte command WR-203
 frame-relay lmi-n392dce command WR-204
 frame-relay lmi-n392dte command WR-205
 frame-relay lmi-n393dce command WR-206
 frame-relay lmi-n393dte commands WR-207
 frame-relay lmi-t392dce command WR-208
 frame-relay lmi-type command WR-209
 frame-relay local-dlci command WR-210
 frame-relay map bridge broadcast command BR-60
 frame-relay map bridge command WR-215
 frame-relay map bstun command BR-331
 frame-relay map clns command WR-216
 frame-relay map command WR-211
 frame-relay map ip compress command P1R-584
 frame-relay map ip rtp header-compression command
 P1R-585
 frame-relay map ip tcp header-compression command
 WR-217
 frame-relay map llc2 command BR-536
 frame-relay map rsrb command BR-537
 frame-relay mincir command WR-219
 frame-relay multicast-dlci command WR-220
 frame-relay payload-compress command WR-221
 frame-relay payload-compress packet-by-packet command
 WR-221
 frame-relay priority-dlci-group command WR-223
 frame-relay priority-group command WR-225
 frame-relay qos-autosense command WR-227
 frame-relay route command WR-229
 frame-relay svc command WR-231
 frame-relay switching command WR-232
 frame-relay traffic-rate command WR-233
 frame-relay traffic-shaping command WR-235
 frames
 forwarding BR-8, BR-50
 maximum size on source-route bridge BR-225,
 BR-228, BR-230, BR-232, BR-452
 using bridge address to filter BR-9
 framing
 T1 IR-389
 T3 IR-100
 framing (E1/T1controller) command IR-97
 framing (E3/T3 interface) command IR-98
 framing (T3 controller) command IR-100
 framing command, channelized E1, channelized T1 DR-289
 FRAS
 BAN
 configuring BR-540
 displaying status BR-550
 enabling BR-543
 BNN
 displaying status BR-550
 DLCI, LLC connection BR-546
 enabling BR-544
 LLC connection, associating BR-546
 congestion, managing BR-549
 connection state, displaying status BR-550, BR-554
 dial backup over DLSw+
 displaying status BR-550
 enabling BR-538
 DLCI, SDLC link, associating BR-547
 DLCI backup, configuring BR-542
 host, LLC2 local termination BR-545
 LLC2, sessions, displaying status BR-552
 mapping, displaying status BR-554
 RSRB, DLCI number BR-537
 SDLC, link, associating BR-547
 source-bridge command BR-166
 fras backup dlsw command BR-538
 fras ban command BR-540
 fras ddr-backup command BR-542
 fras map llc command BR-546
 fras map sdlc command BR-547
 fras-host ban command BR-543
 fras-host bnn command BR-544
 fras-host dlsw-local-ack command BR-545
 fr-atm connect dlci command VR-26
 fr-dest-address command BR-605
 free-trade zone
 AppleTalk P2R-56
 establishing P2R-56
 frequency command FR-364
 FRF.9 compression, example configuration WR-213
 FRMRs, SDLC, configuring BR-397
 front panel LED message FR-219
 fsck command FR-178
 FST, configuring BR-223, BR-230
 FTP Server
 restricted regions FR-698
 router acting as FR-697
 ftp-server enable command FR-697
 ftp-server topdir command FR-698
 full-duplex command IR-101
 full-help command FR-12
 functional address P1R-622

G

G.703-E1 interface
 clock source IR-51, IR-53, IR-54
 CRC IR-67
 CRC4 DR-242
 framed mode DR-252, IR-399
 time slot 16 DR-255, IR-402
 unframed mode DR-252, IR-399
 G.704 interface, CRC IR-67

- gateway of last resort, IGRP and RIP, computing P1R-487
generic-pool command BR-763
global configuration command mode FR-206
global configuration commands
 aaa accounting SR-70
 aaa accounting suppress null-username SR-73
 aaa accounting update SR-74
 aaa authentication arap SR-4
 aaa authentication banner SR-6
 aaa authentication enable default SR-8
 aaa authentication fail-message SR-10
 aaa authentication login SR-12
 aaa authentication nasi SR-14
 aaa authentication password-prompt SR-16
 aaa authentication ppp SR-18
 aaa authentication username-prompt SR-20
 aaa authorization SR-58
 aaa authorization config-commands SR-61
 aaa authorization reverse-access SR-62
 aaa nas-port extended SR-86
 aaa new-model SR-22
 aaa processes SR-23
 cable privacy kek grace-time VR-201
 cable privacy kek life-time VR-202
 cable privacy tek grace-time VR-203
 cable privacy tek life-time VR-204
 cable spectrum-group VR-207
 cross-connect VR-14
 dial-control-mib VR-18
 dial-peer terminator VR-19
 dial-peer voice VR-20
 enable last-resort SR-107
 enable use-tacacs SR-108
 interface fr-atm VR-28
 ip radius source-interface SR-88
 ip tacacs source-interface SR-109
 ip trigger-authentication (global configuration) SR-31
 kerberos clients mandatory SR-127
 kerberos credentials forward SR-128
 kerberos instance map SR-129
 kerberos local-realm SR-130
 kerberos preauth SR-131
 kerberos realm SR-132
 kerberos server SR-133
 kerberos srvtab entry SR-134
 kerberos srvtab remote SR-136
 key config-key SR-137
 network-clock base-rate VR-33
 network-clock-select (MC3810) VR-34
 network-clock-switch VR-36
 num-exp VR-37
 radius-server attribute nas-port extended SR-89
 radius-server configure-nas SR-90
 radius-server deadtime SR-91
 radius-server extended-portnames SR-92
 radius-server host SR-93
 radius-server host non-standard SR-96
 radius-server key SR-98
 radius-server optional passwords SR-97
 radius-server timeout SR-101
 radius-server vsa SR-102
 tacacs-server attempts SR-110
 tacacs-server authenticate SR-111
 tacacs-server directed-request SR-113
 tacacs-server extended SR-114
 tacacs-server host SR-115
 tacacs-server key SR-117
 tacacs-server last resort SR-118
 tacacs-server notify SR-120
 tacacs-server optional-passwords SR-121
 tacacs-server retransmit SR-122
 tacacs-server timeout SR-123
 voice local-bypass VR-83
global configuration mode, summary FR-xx
global translation options
 translate command DR-511
 translate lat command DR-514
 translate tcp command DR-524
 translate x25 command DR-535
global translation options, translate command DR-520, DR-529
GNS
 filters P2R-332
 responding to requests P2R-276
 delay in P2R-275
 GRE IR-407, IR-409
 group (IKE policy) command SR-406
 group and member asynchronous interfaces DR-17, DR-24, IR-123
group codes
 denying access BR-27, BR-34
 permitting access BR-28, BR-35
group range command DR-17
guests
 allowing DR-651
 disallowing DR-651
GZL
 replies P2R-39, P2R-57
 requests P2R-39

H

- half-bridging
 AppleTalk DR-592
 Combinet devices, not supporting PPP DR-347
 Combinet devices not supporting PPP DR-288
 IP DR-593
 IPX DR-594

serial or ISDN, and Ethernet subnetwork DR-592, DR-593, DR-594
half-duplex command IR-104
half-duplex controlled-carrier command IR-106
half-duplex timer command IR-108
hardware
 break signal FR-100
 flow control FR-85
hardware compression IR-58, WR-211, WR-221
hardware compression, displaying IR-206
hardware flow control, configuring for a line DR-15
hash (IKE policy) command SR-407
HDLC
 compression IR-58
 encapsulation, enabling BR-363
 traffic, forwarding BR-360
header-compression translate option, mapping to virtual interface template command DR-515, DR-536
Health Monitor
 managed shelf polling FR-712
 SNMP traps FR-727, FR-729
heartbeat, DXI 3.2 on SMDS WR-270
hello BPDUs, specifying intervals BR-46
hello packets
 AppleTalk Enhanced IGRP P2R-53
 IP Enhanced IGRP
 interval between P1R-303
 valid time P1R-304
 IPX Enhanced IGRP P2R-277
 IS-IS for IP, setting interval P1R-331
 ISO CLNS
 configuration time P3R-200
 hold time P3R-211
 Net/One P3R-329, P3R-360
help, user-level commands FR-12
help command FR-xv, FR-14
helper addresses
 IP FR-157, P1R-25, P1R-83
 IPX P2R-280
history command FR-16
history for RTR
 buckets kept FR-352
 displaying FR-435
 filters FR-362
 lives kept FR-369
 samples kept FR-394
history size command FR-18
hold character
 changing for session FR-86
 configuring for line FR-61
hold queue, X.25 packet WR-333
hold time
 AppleTalk Enhanced IGRP P2R-53
 IP Enhanced IGRP P1R-304
 IPX Enhanced IGRP P2R-283
hold-character command FR-61
holding-time command XR-189
hold-queue command DR-18, IR-110
hop count, DECnet P3R-127
hops-of-statistics-kept command FR-366
host configuration file FR-202
 changing FR-202
 copying from a server using rcp FR-254
 example FR-260
 default filename FR-211
 loading from a server FR-202, FR-211
host name
 defining X.25 DR-548
 router FR-633
 VINES, displaying entries P3R-28
 X.25, defining WR-335
host-failed message DR-366
hostname command FR-633
Hot Standby Router Protocol
 burned-in address P1R-189
 enabling P1R-178, P1R-180
 hello time P1R-173
 hold time P1R-173
 interfaces, tracking P1R-187
 MAC address P1R-180
 MAC refresh interval P1R-182
 password, configuring P1R-177
 preemption P1R-183
 preemption delay P1R-183
 prioritize by tracking other interfaces P1R-187
 priority P1R-183
 status, displaying P1R-172
 timers, setting P1R-185
 tracking interfaces for priority P1R-187
 virtual MAC address P1R-180
hours-of-statistics-kept command FR-368
HP Probe Proxy, name requests P1R-69
hpr command
 APPN control point BR-606
 APPN link station BR-607
 APPN port BR-608
hpr retries command BR-610
hpr sap command BR-611
hpr timers liveness command BR-612
hpr timers path-switch command BR-613
hpr-max-sessions command BR-609
HSA
 automatic synchronization mode, starting FR-315
configuration synchronization
 automatic FR-315
 manual FR-319
configuring default slave RSP FR-316
master and slave, ensuring identical configurations
 FR-315
reload slave RSP card FR-318

slave image
 reloading FR-318
 specifying FR-317
 synchronizing configurations
 automatically FR-315
 manually FR-319
 hssi external-loop-request command IR-112
 hssi internal-clock command IR-113
 http
 //www.cisco.com/univercd/cc/td/doc/product/software
 /ios120/12cger/ibm_r/brrpt1/brsr.htm IR-250
 hub command IR-114
 hub ports
 automatic receiver polarity reversal IR-20
 clearing hub counters IR-39
 enabling IR-114
 hub statistics, displaying IR-257
 link test function IR-142
 resetting IR-38
 shutting down IR-374
 source address control IR-379

|

ICMP Router Discovery Protocol (IRDP), enabling P1R-37
 ICMP subnet masks P1R-14
 icpif command VR-27
 idle interval, changing BR-49
 idle time DR-57, DR-506
 idle time, DDR
 setting for line DR-689
 setting for map-class DR-718
 idle timer, multilink PPP and dialer-load threshold DR-599,
 DR-689, DR-696, DR-797
 idle-terminal message, enabling FR-146
 idle-time command BR-765
 idle-timeout command WR-72
 IDP, encapsulation format P2R-205
 IEEE 802-encapsulated packets
 assigning an access list to filter on input BR-176
 assigning an access list to filter on output BR-182
 filtering on input BR-29
 filtering on output BR-36
 IEEE spanning-tree protocol, specifying use BR-52
 IETF, Frame Relay encapsulation WR-171
 I-frames, size limitations for LLC2 BR-439
 ignore command VR-111
 ignore-dcd command DR-248, IR-115
 ignore-lsp-errors command P3R-242
 IGRP
 enabling P1R-220
 offsets for routing metrics P1R-218
 offsets, applying P1R-218
 traffic distribution, controlling P1R-225, P1R-322

IKE
 algorithms
 encryption, specifying SR-405
 encryption, specifying (example) SR-405
 hash, specifying SR-407
 hash, specifying (example) SR-407
 authentication, methods, specifying SR-391
 connections
 clearing SR-393
 clearing (example) SR-393
 description, feature SR-387
 DH, group identifier, specifying SR-406
 disabling SR-394
 (example) SR-394
 enabling SR-394
 group identifier, specifying SR-406
 specifying (example) SR-406
 ISAKMP identity, configuring (example) SR-395
 negotiations, states SR-415
 policies
 configuration (example) SR-400
 multiple SR-399
 parameters, specifying SR-399
 parameters, viewing SR-414
 viewing SR-414
 requirements, IPSec peers SR-394
 ILMI, keepalives, (example) WR-18
 imli manage command WR-74
 impedance command VR-113
 inarp command WR-75
 incoming connections, definition FR-114
 information (I) frames, size limitations for LLC2 BR-439
 informs, operation, enabling FR-455
 initialization-vector size command SR-329
 input gain command VR-115
 input-queue command P1R-195
 insecure command FR-62
 integrated routing and bridging
 bridge-group virtual interface (BVI), creating BR-61
 bridging a protocol in a bridge group, enabling BR-11
 display configuration for each IRB interface BR-73
 enabling BR-47
 interarea routing
 DECnet
 hop count P3R-127
 maximum route cost P3R-126
 interface, virtual template, configuring DR-763, DR-776
 interface alias address, configuring WR-325
 interface atm command WR-76
 interface bri command DR-198, DR-860
 X.25 traffic on D channel DR-860
 interface bvi command BR-61
 interface cbr command WR-78
 interface channel command, CMCC adapters, specifying
 channel attach interface BR-767

interface command IR-117
interface configuration commands VR-80
atm compression VR-9
ces cell-loss-integration-period VR-174
ces clockmode synchronous VR-176
ces connect VR-177
ces initial-delay VR-179
ces max-buf-size VR-180
ces partial-fill VR-182
ces service VR-184
clock rate line VR-11
clock rate network-clock command VR-12
encapsulation atm-ces VR-186
fr-atm connect dlci VR-26
ip trigger-authentication (interface configuration)
 SR-33
ppp accounting SR-78
ppp authentication SR-39
ppp chap hostname SR-41
ppp chap password SR-43
ppp chap refuse SR-45
ppp chap wait SR-47
ppp pap sent-username SR-49
ppp use-tacacs SR-51
interface configuration mode, summary FR-xx
interface dialer command DR-708, DR-731, IR-121
interface fastethernet command IR-122
interface fr-atm command VR-28
interface group-async command IR-123
interface outage, LAPB timer WR-294
interface port-channel command IR-124
interface serial multipoint command WR-264
interface vg-anylan command IR-126
interface virtual-template command DR-763, DR-776,
 DR-778
interface virtual-tokenring command BR-548
interfaces
 addresses, secondary P1R-14
 asynchronous, DDR dialer maps, configuring DR-699
 backup, configuring DR-741, DR-748
 circuit type, IS-IS for IP, specifying P1R-329
 counters, clearing IR-375
 descriptive name, adding DR-245, DR-285
 dial backup, Dialer Profiles DR-747
 E1-G.703/G.704, enabling framed mode IR-399
 G.703-E1
 clock source IR-51, IR-53, IR-54
 CRC IR-67
 CRC4 DR-242
 enabling framed mode DR-252, IR-399
 time slot 16 DR-255, IR-402
ISDN, configuring for DDR DR-343, DR-346, DR-699
low-speed serial IR-168
PA-E3 clock source IR-51
placing in STUN group BR-350
restarting IR-375
RSVP configuration statistics (table) QR-65
serial, dialer maps, configuring for DDR DR-698
shutting down IR-375
STUN frames
 forwarding BR-360, BR-361
 fowarding BR-359
Token Ring BR-548
unit numbers IR-33, IR-35, IR-40, IR-117
internal buffer, message logging to FR-508
internal network number P2R-289
 IPX P2R-217, P2R-287, P2R-340
internal node number
 IPX P2R-217, P2R-287, P2R-340
international bit command IR-127
international character sets, supporting FR-95
international command FR-150
interrupt characters, configuring faster response DR-373
interrupt-switched command BR-614
intra-area routing, DECnet, hop count P3R-141
invalidated system images FR-274
Inverse ARP
 AppleTalk, setting WR-193
 Frame Relay
 clearing maps WR-170
 configuring WR-193
 protocols supported WR-193
invert data command IR-128, IR-390
invert rxclock command IR-130
invert txclock command DR-249, IR-132
IP
 access lists
 applying on inbound or outbound interfaces
 P1R-127
 definition of extended P1R-127
 extended, creating P1R-98, P1R-127
 extended, creating dynamic P1R-119
 named P1R-129
 setting on virtual terminal lines P1R-96
 standard P1R-108, P1R-115, P1R-154
 standard named P1R-129
 violations, accounting of P1R-131
 violations, logging P1R-101, P1R-117, P1R-121,
 P1R-157
 accounting
 access list violations, displaying P1R-162
 database, displaying P1R-162
 addresses
 assigning to TCP port DR-372
 pooling, show settings DR-610
 pools, defining local DR-583
 pools, enabling DR-579
 primary P1R-14
 secondary P1R-14
 subnet mask on SMDS WR-276

- broadcasts
flooding P1R-28
transparent bridging spanning-tree protocol P1R-28
- CEF operation, enabling XR-36
- description of P1R-3
- Easy IP, commands DR-876
- fast switching, enabling XR-13
- local policy routing, identifying the route map P1R-489
- named access list P1R-129
- NetFlow switching, enabling XR-15
- policy routing
enabling P1R-526
packet length, matching P1R-510
route map, identifying P1R-491
- precedence P1R-541, QR-52
- primary address, setting P1R-14
- redistribution, matching
a tag P1R-516
BGP autonomous system path access list P1R-391
BGP community list P1R-393
interface P1R-501
IP address P1R-503
metric of a route P1R-512
next hop router address P1R-506
route source P1R-508
route type P1R-514
- redistribution, setting
as-path P1R-436
BGP origin code P1R-448
BGP weight P1R-450
community P1R-440, P1R-446, P1R-448
default interface P1R-533
default next hop P1R-537
interface P1R-535
level for importing routes P1R-543
metric P1R-221, P1R-312, P1R-547
metric type P1R-549
next hop P1R-444, P1R-539, P1R-551
preference for autonomous system P1R-545
tag P1R-442, P1R-531
tag of destination routing protocol P1R-553
- routing
displaying status of interfaces FR-156, FR-446, P1R-82
enabling P1R-71
local-area mobility P1R-39
- secondary address, specifying P1R-14
- SMDS
configuring over WR-275
multiple subnetworks WR-264
- source IP address, validating P1R-209
- switching, controlling the route cache XR-13
- UDP datagrams
flooding P1R-30
- speeding up flooding P1R-30
- ip access-group command DR-19, DR-624, P1R-127
- ip access-list command P1R-129
- ip access-list extended (encryption) command SR-264
- ip accounting command P1R-131
- ip accounting-list command P1R-133
- ip accounting-threshold command P1R-134
- ip accounting-transits command P1R-135
- ip address command DR-625, P1R-14
- ip address negotiated command DR-876
- ip address-pool command DR-579
- ip alias command DR-372
- ip as-path access-list command P1R-386
with regular expressions DR-902, DR-907
- ip authentication key-chain eigrp command P1R-300
- ip authentication mode eigrp command P1R-301
- ip bandwidth-percent eigrp command P1R-302
- ip bootp server command FR-634
- ip broadcast-address command P1R-16
- ip cache-invalidate-delay command XR-7
- ip cef accounting command XR-31
- ip cef command XR-29
- ip cef distributed command XR-29
- ip cef traffic-statistics command P1R-17, XR-32
- ip cgmp command P1R-586
- ip classless command P1R-19
- ip community-list command P1R-389
- ip default-gateway command P1R-20
- ip default-network command P1R-487
- ip dhcp-server command DR-581
- ip directed-broadcast command P1R-21
- ip domain-list command P1R-22
- ip domain-lookup command P1R-23
- ip domain-lookup nsap command P3R-243
- ip domain-name command P1R-24
- ip drp access-group command P1R-136
- ip drp authentication key-chain command P1R-137
- ip drp server command P1R-138
- ip dvmrp accept-filter command P1R-588
- ip dvmrp auto-summary command P1R-590
- ip dvmrp default-information command P1R-591
- ip dvmrp metric command P1R-592
- ip dvmrp metric-offset command P1R-594
- ip dvmrp output-report-delay command P1R-595
- ip dvmrp reject-non-pruners command P1R-596
- ip dvmrp routehog-notification command P1R-597
- ip dvmrp route-limit command P1R-598
- ip dvmrp summary-address command P1R-599
- ip dvmrp unicast-routing command P1R-600
- IP Enhanced IGRP
administrative distance, setting P1R-297
authentication, enabling P1R-300
bandwidth P1R-302
default routes P1R-294
disabling P1R-311

enabling P1R-311
filters
 routes in updates P1R-483
 routes in updates, advertising P1R-485
 routing updates, preventing P1R-519
interfaces, displaying P1R-314
load balancing P1R-323
metric offset P1R-310
metrics, adjusting P1R-295
neighbor adjacency changes, logging P1R-299
offsets, applying P1R-205
redistribution, metrics for P1R-295
route authentication P1R-300
route feasibility, determining P1R-323
route redistribution P1R-294, P1R-295
route summarization P1R-192, P1R-292, P1R-358
split horizon, enabling P1R-305
 timers, adjusting P1R-303, P1R-304
ip flow-export command XR-9, XR-11
ip forward-protocol any-local-broadcast command P1R-27
ip forward-protocol command P1R-25
ip forward-protocol spanning-tree command P1R-28
ip forward-protocol turbo-flood command P1R-30
ip ftp passive command FR-324
ip ftp password command FR-325
ip ftp source-interface command FR-326
ip ftp username command FR-327
ip hello-interval eigrp command P1R-303
ip helper-address command P1R-32
ip hold-time eigrp command P1R-304
ip host command P1R-34
ip host-routing command P1R-35
ip hp-host command P1R-36
ip http access-class command FR-19
ip http authentication command FR-20
ip http port command FR-21
ip http server command FR-22
ip icmp rate-limit unreachable command P1R-139
ip identd command SR-426
ip igmp access-group command P1R-601
ip igmp helper-address command P1R-602
ip igmp join-group command P1R-604
ip igmp query-interval command P1R-606
ip igmp query-max-response-time command P1R-608
ip igmp query-timeout command P1R-609
ip igmp static-group command P1R-610
ip igmp version command P1R-611
ip inspect (interface configuration) command SR-178
ip inspect audit trail command SR-176
ip inspect dns-timeout command SR-177
ip inspect max-incomplete high command SR-179
ip inspect max-incomplete low command SR-181
ip inspect name (global configuration) command SR-183
ip inspect one-minute high command SR-188
ip inspect one-minute low command SR-190

ip inspect tcp finwait-time command SR-192
ip inspect tcp idle-time command SR-193
ip inspect tcp max-incomplete host command SR-194
ip inspect tcp synwait-time command SR-196
ip inspect udp idle-time command SR-197
ip irdp command P1R-37
ip irdp holdtime command P1R-37
ip irdp maxadvertinterval command P1R-37
ip irdp multicast command P1R-37
ip local policy route-map command P1R-489
ip local pool command DR-583
ip mask-reply command P1R-140
ip mobile arp command P1R-39
ip mroute command P1R-612
ip mroute-cache command XR-112
ip mtu command DR-20, P1R-141
ip multicast boundary command P1R-614
ip multicast cache-headers command P1R-615
ip multicast helper-map command P1R-617
ip multicast rate-limit command P1R-619
IP multicast routing
 access lists P1R-601
 Auto-RP, cache, clearing P1R-580
CGMP
 clearing P1R-576
 enabling P1R-586
 proxy P1R-586
desktop conferencing session P1R-648
DVMRP
 advertising to neighbors P1R-591
 auto-summarization P1R-590
 delay between reports P1R-595
 reject non-pruning neighbors P1R-596
 route hog notification P1R-597
 route threshold P1R-597
 summary address P1R-599
 tunneling P1R-96
 unicast routing P1R-600
fast-switching cache, displaying XR-116
IGMP
 cache P1R-578
 helper address P1R-602
 host-query message interval P1R-606
 query response time P1R-608
 query timeout P1R-609
 statically connected router member P1R-610
 version P1R-611
IP multicast routing table
 clearing P1R-579
 displaying P1R-665
MDS
 enabling globally XR-114
 enabling on interface XR-112
 interface status, displaying XR-120
 line card packet counts, clearing XR-111

line card packet counts, displaying XR-121
MFIB table summary, displaying XR-123
MFIB table, clearing XR-110
MFIB table, displaying XR-118
packet statistics, displaying XR-115
switched packet counts, displaying XR-125
mrinfo P1R-649
mroute, configuring P1R-612
mrouted P1R-649
multicast groups
 displaying P1R-657
 hosts joining P1R-601
 joining P1R-604
multicast information, displaying P1R-659
multicast tree, tracing P1R-650, P1R-652
packet headers, storing P1R-615
PIM
 dense mode, enabling P1R-623
 enabling P1R-623
 filtering P1R-633
 information, displaying P1R-673
 NBMA mode P1R-632
 neighbors, displaying P1R-675
 preventing P1R-633
 shortest path tree, delaying use P1R-641
 sparse mode, enabling P1R-623
 sparse-dense mode, enabling P1R-623
PIM sparse mode
 join-and-prune message timer P1R-629
 router-query messages P1R-634
 timers P1R-629
rendezvous point (RP), configuring address P1R-625, P1R-635
Reverse Path Forwarding (RPF), displaying P1R-683
RP
 assigning to a group P1R-635
 Auto-RP, groups covered P1R-639
 Auto-RP, mapping agent P1R-640
 displaying P1R-677
 filter RP announcements P1R-637
RPF P1R-665
 displaying P1R-683
sdr
 displaying cache P1R-686
 listener support P1R-648
 session advertisements P1R-648
Session Directory Protocol P1R-648
sparse mode, enabling P1R-623
static route, configuring P1R-612
stub multicast routing P1R-602, P1R-633
Token Ring MAC address mapping P1R-622
TTL, configuring P1R-621
whiteboard applications P1R-648
ip multicast ttl-threshold command P1R-621
ip multicast use-functional command P1R-622

ip multicast-routing command XR-114
ip name-server command P1R-41
ip nat command P1R-42
ip nat inside destination command P1R-44
ip nat inside source command DR-877, P1R-46
ip nat outside source command P1R-48
ip nat pool command P1R-50
ip nat translation command P1R-52
ip netmask-format command P1R-54
ip nhrp authentication command P1R-55
ip nhrp holdtime command P1R-56
ip nhrp interest command P1R-57
ip nhrp map command P1R-58
ip nhrp map multicast command P1R-59
ip nhrp max-send command P1R-60
ip nhrp network-id command P1R-61
ip nhrp nhs command P1R-62
ip nhrp record command P1R-63
ip nhrp responder command P1R-64
ip nhrp server-only command P1R-65
ip nhrp trigger-svc command P1R-66
ip nhrp use command P1R-67
ip ospf authentication command P1R-247
ip ospf authentication-key command P1R-248
ip ospf cost command P1R-249
ip ospf database-filter all out command P1R-250
ip ospf dead-interval command P1R-251
ip ospf demand-circuit command P1R-252
ip ospf hello-interval command P1R-253
ip ospf message-digest-key command P1R-254
ip ospf name-lookup command P1R-256
ip ospf network command P1R-257
ip ospf priority command P1R-259
ip ospf retransmit-interval command P1R-260
ip ospf transmit-delay command P1R-261
ip pim accept-rp command P1R-625
ip pim border command P1R-626
ip pim bsr-candidate command P1R-627
ip pim command P1R-623
ip pim message-interval command P1R-629
ip pim minimum-vc-rate command P1R-630
ip pim multipoint-signalling command P1R-631
ip pim nbma-mode command P1R-632
ip pim neighbor-filter command P1R-633
ip pim query-interval command P1R-634
ip pim rp-address command P1R-635
ip pim rp-announce-filter command P1R-637
ip pim rp-candidate command P1R-638
ip pim send-rp-announce command P1R-639
ip pim send-rp-discovery command P1R-640
ip pim spt-threshold command P1R-641
ip pim vc-count command P1R-642
ip pim version command P1R-643
ip policy route-map command P1R-491
ip precedence command BR-769

ip probe proxy command P1R-69
ip proxy-arp command P1R-70
ip radius source-interface command SR-88
ip rarp-server command FR-328
ip rcmd domain-lookup command FR-330
ip rcmd rcp-enable command FR-331, FR-337
ip rcmd remote-host command FR-332
ip rcmd remote-username command FR-335
ip rcmd rsh-enable command FR-337
ip redirects command P1R-142
ip reflexive-list timeout command SR-150
ip rip authentication key-chain command P1R-196
ip rip authentication mode command P1R-197
ip rip receive version command P1R-198
ip rip send version command P1R-199
ip route command P1R-493
ip route-cache cef command XR-36
ip route-cache command XR-13
ip route-cache flow command XR-15
ip router isis command P1R-328
ip routing command P1R-71
ip rsvp bandwidth command QR-13
ip rsvp neighbors command QR-15
ip rsvp reservation command QR-17
ip rsvp sender command QR-19
ip rsvp udp-multicast command QR-21
ip rtp compression-connections command P1R-644
ip rtp header-compression command P1R-645
ip rtp reserve command DR-585
ip sdr cache-timeout command P1R-647
ip sdr listen command P1R-648
ip security add command SR-446
ip security aeso command SR-448
ip security allow-reserved command SR-463
ip security dedicated command SR-449
ip security eso-info command SR-451
ip security eso-max command SR-452
ip security eso-min command SR-454
ip security extended-allowed command SR-456
ip security first command SR-457
ip security ignoreAuthorities command SR-458
ip security implicit-labelling command SR-459
ip security multilevel command SR-461
ip security strip command SR-465
ip source-route command P1R-143
ip split-horizon (RIP) command P1R-200
ip split-horizon command P1R-212
ip split-horizon eigrp command P1R-305
ip subnet-zero command P1R-72
ip summary-address eigrp command P1R-306
ip tacacs source-interface command SR-109
ip tcp async-mobility server command DR-626
ip tcp chunk-size command DR-373, P1R-144
ip tcp compression-connections command P1R-145
ip tcp header-compression command DR-627, P1R-146

ip tcp intercept connection-timeout command SR-156
ip tcp intercept drop-mode command SR-157
ip tcp intercept finrst-timeout command SR-159
ip tcp intercept list command SR-160
ip tcp intercept max-incomplete high command SR-161
ip tcp intercept max-incomplete low command SR-163
ip tcp intercept mode command SR-165
ip tcp intercept one-minute high command SR-166
ip tcp intercept one-minute low command SR-168
ip tcp intercept watch-timeout command SR-170
ip tcp path-mtu-discovery command P1R-147
ip tcp queuemax command P1R-148
ip tcp selective-ack command P1R-149
ip tcp synwait-time command P1R-150
ip tcp timestamp command P1R-151
ip tcp window-size command P1R-152
ip telnet source-interface command FR-635
ip tftp source-interface command FR-636
ip tos command BR-770
ip trigger-authentication (global configuration) command SR-31
ip trigger-authentication (interface configuration) command SR-33
ip udp checksum command VR-29
ip unnumbered command DR-629, P1R-73
ip unreachable command P1R-153
ip wccp enable command FR-151
ip wccp redirect-list command FR-153
ip web-cache redirect command FR-155
IPC connections, VINES
 blocks, deleting P3R-21
 information, displaying P3R-32
 port numbers (table) P3R-56, P3R-60
ip-pool translate option, mapping to virtual interface template command DR-515, DR-536
IPSec
 crypto access lists, specifying SR-266, SR-331
 crypto map entries
 creating SR-250, SR-321
 lifetime values, overriding SR-341
 specifying a peer SR-335
 crypto maps
 applying SR-325
 dynamic, creating SR-312
 dynamic, priorities SR-323
 dynamic, viewing SR-354
 interfaces, identifying SR-327
 purpose SR-322
 viewing SR-355
 description SR-309
 lifetimes, viewing SR-352
 requirements, IKE SR-394
 SAs
 clearing SR-310
 lifetimes, changing SR-315

- requesting SR-339
viewing SR-349
- session keys, manually specifying SR-344
- transform sets
defining SR-317
mode, changing SR-333
specifying SR-347
viewing SR-353
- transforms
allowed combinations SR-318
changing SR-320
initialization vector SR-329
selecting SR-319
- IPSO**
authorities and bit patterns
(table) SR-450
definition SR-450
- basic, configuring SR-446
- extended
configuring SR-448
defaults SR-451
maximum sensitivity levels SR-452
minimum sensitivity levels SR-454
- labels, definition SR-450
- levels and bit patterns
(table) SR-449
definition SR-449
- IPTalk**
/etc/services file P2R-63
- IP encapsulation, configuring P2R-61
- UDP port numbers P2R-63
- IPX**
access control P2R-210
- access lists
creating for NLSP route aggregation P2R-213
extended P2R-206, P2R-229, P2R-411
named P2R-248
extended P2R-248
NLSP route aggregation P2R-248
SAP P2R-248
standard P2R-248
- NetBIOS P2R-408
- SAP P2R-216, P2R-234, P2R-418
- standard P2R-210, P2R-236, P2R-414
- summary P2R-232, P2R-416
- accounting
configuring P2R-250
database entries, deleting P2R-221
database threshold P2R-254
disabling P2R-250
enabling P2R-250
filters P2R-252
maximum transit entries P2R-255
- all-nets flooding P2R-278
- bandwidth-percent eigrp command P2R-259
- broadcasts
forwarding P2R-278, P2R-280
type 20 packets P2R-278, P2R-392, P2R-393, P2R-394
- client, connecting to asynchronous interface over PPP DR-631
- clock ticks P2R-270
- compression on PPP links DR-630
- disabling P2R-272
- encapsulations P2R-304, P2R-352
ARPA P2R-304
definitions P2R-304
Ethernet_802.2 P2R-304
Ethernet_802.3 P2R-304
Ethernet_II P2R-304
Ethernet_Snap P2R-304
FDDI raw P2R-304
HDLC P2R-304
multiple, configuring P2R-304
Novell-Ether P2R-304
SAP P2R-304
SNAP P2R-304
- Enhanced IGRP
backup server table P2R-258
disabling P2R-410
enabling P2R-359, P2R-410
hello packets P2R-277
hold time P2R-283
hold-down time P2R-282
interface statistics P2R-430
neighbors, displaying P2R-432
queries P2R-258
query packets P2R-378, P2R-380
redistribution P2R-421
SAP updates P2R-370
split horizon P2R-378, P2R-380
topology table P2R-434
update packets P2R-378, P2R-380
- Enhanced IGRP filters, route updates P2R-238, P2R-240
- fast switching
cache entries, deleting P2R-223
cache entries, displaying P2R-429
disabling P2R-352
enabling P2R-352
inactivity timeout P2R-354
update timeout P2R-357
- filters
broadcast P2R-280
generic P2R-246
generic, applying to interface P2R-246
GNS, applying to interface P2R-332
routing table P2R-361
- floating-static routes
definition P2R-350

- redistributing P2R-422
- general RIP/SAP query, sending P2R-296
- GNS
 - filters P2R-332
 - requests P2R-376
 - requests, responding to P2R-276
 - helper addresses P2R-280
 - interfaces, displaying status P2R-439
 - internal network numbers P2R-379
 - IPXWAN
 - disabling P2R-290
 - enabling P2R-290
 - failed link, handling P2R-293
 - IPX network numbers P2R-291
 - link delay, controlling P2R-291
 - option negotiations P2R-291
 - static routing, disabling P2R-294
 - static routing, enabling P2R-294
 - keepalives P2R-399
 - SPX P2R-383
 - load sharing P2R-298
 - per host P2R-343
 - log-neighbor-changes P2R-402
 - loopback interfaces DR-511, DR-520, DR-529
 - maximum paths, setting P2R-298
 - multiple logical networks P2R-305
 - named access lists P2R-248
 - NetBIOS messages, filtering P2R-300, P2R-302
 - NetWare internal network numbers P2R-379
 - network numbers, repairing corrupted P2R-379
 - NLSP
 - filters, route updates P2R-240
 - OS/2 Requestors P2R-379
 - over PPP DR-631
 - clients connecting to virtual terminal lines
 - DR-511, DR-520, DR-529
 - packets, padding P2R-342
 - parallel paths, choosing between P2R-298
 - protocol numbers (table) P2R-208
 - restarting P2R-272
 - RIP
 - delay field P2R-270
 - enabling P2R-359, P2R-365
 - updates P2R-334
 - updates, timers P2R-396, P2R-398
 - RIP, enabling P2R-365
 - route-cache, limiting entries P2R-356
 - routing
 - disabling P2R-304
 - enabling P2R-304, P2R-365
 - enabling on multiple networks (example) P2R-306
 - phantom SAPs P2R-368
 - SAP entries, from best path to destination network P2R-368
 - SAP loop P2R-368
- Service Information, unnecessary SAP updates, reducing number of P2R-377
- routing table entries
 - adding P2R-285
 - deleting P2R-227
 - displaying P2R-455
- routing table, updating P2R-396
- SAP
 - access lists, creating P2R-216
 - broadcast, sending P2R-398
 - definition P2R-205
 - enabling P2R-365
 - filters P2R-216
 - routes in updates, processing P2R-242
 - interpacket delay on a single interface, setting P2R-338
 - interpacket delay on all interfaces, setting P2R-263
 - maximum queue length, setting P2R-376
 - messages
 - filtering P2R-287, P2R-340, P2R-363
 - messages, filtering P2R-287
 - table, adding static entries P2R-366
 - triggered updates, setting interpacket delay on a single interface P2R-388
- SAP split horizon P2R-372
- secondary networks P2R-304
- servers
 - displaying P2R-460
 - internal network number P2R-217, P2R-287, P2R-340
 - internal node number P2R-217, P2R-287, P2R-340
- Service Information, split horizon checking P2R-377
- service types (table) P2R-217
- SMDS, configuring over WR-275
- socket numbers (table) P2R-208
- SPF log P2R-453
- spoofing P2R-399
- static routes
 - adding to routing table P2R-349
 - floating P2R-350
- subinterfaces P2R-305
 - configuring (example) P2R-306
- tick count P2R-270
- traffic statistics P2R-464
- type 20 packets
 - accepting P2R-392
 - forwarding P2R-393, P2R-394
 - watchdog packets P2R-399
- ipx access-group command P2R-246
- ipx access-list command P2R-248
- ipx accounting command P2R-250
- ipx accounting-list command P2R-252
- ipx accounting-threshold command P2R-254

ipx accounting-transits command P2R-255
ipx advertise-default-route-only command P2R-256
ipx backup-server-query-interval command P2R-258
ipx bandwidth-percent eigrp command P2R-259
ipx broadcast-fastswitching command P2R-260
ipx default-output-rip-delay command P2R-261
ipx default-output-sap-delay command P2R-263
ipx default-route command P2R-265
ipx default-triggered-rip-delay command P2R-266
ipx default-triggered-sap-delay command P2R-268
ipx delay command P2R-270
ipx down command P2R-272
ipx gns-reply-disable command P2R-274
ipx gns-response-delay command P2R-275
ipx gns-round-robin command P2R-276
ipx hello-interval eigrp command P2R-277
ipx helper-address command P2R-278
ipx helper-list command P2R-280
ipx hold-down eigrp command P2R-282
ipx hold-time eigrp command P2R-283
ipx input-network-filter command P2R-285
ipx input-sap-filter command P2R-287
ipx internal-network command P2R-289
ipx ipxwan command P2R-290
ipx ipxwan error command P2R-293
ipx ipxwan static command P2R-294
ipx link-delay command P2R-295
ipx linkup-request command P2R-296
ipx loopback translate option, mapping to virtual interface template command DR-515, DR-536
ipx maximum-hops command P2R-297
ipx maximum-paths command P2R-298
ipx nasi-server enable command DR-754
ipx netbios input-access-filter command P2R-300
ipx netbios output-access-filter command P2R-302
ipx network command (extended) P2R-304
ipx nhrp authentication command P2R-308
ipx nhrp holdtime command P2R-309
ipx nhrp interest command P2R-310
ipx nhrp map command P2R-311
ipx nhrp max-send command P2R-312
ipx nhrp network-id command P2R-313
ipx nhrp nhs command P2R-314
ipx nhrp record command P2R-315
ipx nhrp responder command P2R-316
ipx nhrp use command P2R-317
ipx nlsp csnp-interval command P2R-319
ipx nlsp enable command P2R-320
ipx nlsp hello-interval command P2R-322
ipx nlsp hello-multiplier command P2R-324
ipx nlsp lsp-interval command P2R-325
ipx nlsp metric command P2R-326
ipx nlsp multicast command P2R-327
ipx nlsp priority command P2R-328
ipx nlsp retransmit-interval command P2R-329

ipx nlsp rip command P2R-330
ipx nlsp sap command P2R-331
ipx output-gns-filter command P2R-332
ipx output-network-filter command P2R-334
ipx output-rip-delay command P2R-336
ipx output-sap-delay command P2R-338
ipx output-sap-filter command P2R-340
IPX over PPP, on VTY lines DR-541
ipx pad-process-switched-packets command P2R-342
ipx per-host-load-share command P2R-343
ipx ping-default command P2R-344
ipx ppp-client command DR-631
ipx rip-max-packetsize command P2R-346, P2R-374
ipx rip-multiplier command P2R-347
ipx rip-response-delay command P2R-348
ipx route command P2R-349
ipx route-cache command P2R-352
ipx route-cache inactivity-timeout command P2R-354
ipx route-cache max-size command P2R-356
ipx route-cache update-timeout command P2R-357
ipx router command P2R-359
ipx router-filter command P2R-361
ipx router-sap-filter command P2R-363
ipx routing command P2R-365
ipx sap command P2R-366
ipx sap follow-route-path command P2R-368
ipx sap-incremental command P2R-370
ipx sap-incremental split-horizon command P2R-372
ipx sap-multiplier command P2R-375
ipx sap-queue-maximum command P2R-376
ipx server-split-horizon-on-serverpaths command P2R-377
ipx source-network-update command P2R-379
ipx split-horizon eigrp command P2R-378, P2R-380
ipx spx-idle-time command P2R-381
ipx spx-spoof command P2R-383
ipx throughput command P2R-385
ipx triggered-rip-delay command P2R-386
ipx triggered-sap-delay command P2R-388
ipx type-20-helped command P2R-390
ipx type-20-input-checks command P2R-392
ipx type-20-output-checks command P2R-394
ipx type-20-propagation command P2R-394
ipx update interval command P2R-396
ipx update sap-after-rip command P2R-398
ipx watchdog-spoof command P2R-399
IRDP, enabling P1R-37
ISDN
 active calls DR-331
 active calls, displaying DR-229, DR-353
Advice of Charge
 short-hold timer DR-341
 static idle timer and short-hold timer (example)
 DR-341
B channel, order selection DR-294
B1 channel SPID, defining DR-210

- B2 channel SPID, defining DR-212
 Basic Rate Interface (BRI)
 over leased-lines, treated as synchronous serial DR-348
 subinterface, configuring DR-198
 BRI subinterface, configuring DR-860
 call history DR-331
 call history, displaying DR-229, DR-353
 call speed, origin and delivery mismatch DR-208, DR-302
 called-party number verification DR-200
 caller ID callback DR-819–DR-823
 calling number identification DR-203
 channel service states, displaying DR-349
 channelized T1, PRI timeslots DR-315
 configuring static TEI DR-863
 dialer maps, configuring for DDR DR-699
 dialer maps, configuring for legacy DDR DR-343, DR-346
 encapsulation, automatic detection DR-258, DR-338
 Layer 2 and Layer 3 timers DR-229, DR-331, DR-353
 leased-line service, 128 kbps DR-348
 memory pool statistics DR-229, DR-331, DR-353
 Multiple ISDN Switch Types, restrictions DR-305
 NFAS
 DDR configuration, needed on primary D channel only DR-351
 group, members and channels, displaying DR-355
 primary and backup D channels, on separate T1 controllers DR-351
 outbound calls, identifying best line DR-704
 outgoing calls, Sending Complete information element DR-209
 PRI interface, channel status, displaying DR-353
 Primary Rate Interface (PRI)
 called-party number verification DR-292
 calling number identification DR-296
 channel status DR-331
 services DR-331
 status DR-333
 switch types (table) DR-305
 timeslots DR-315
 semipermanent connections (Germany) DR-697, DR-719
 subinterfaces, BRI DR-198, DR-860
 switch types, service provider (table) DR-214
 timers (table) DR-231
 V.120 detection DR-258, DR-338
 isdn all-incoming-calls-v120 command DR-643
 isdn answer1 command DR-200, DR-292
 isdn answer2 command DR-200, DR-292
 isdn bchan-number-order command DR-294
 isdn caller command DR-202, DR-295, DR-822
 ISDN caller ID callback DR-819
 isdn calling-number command DR-203, DR-296
 isdn incoming-voice modem command DR-301
 isdn leased-line bri 128 command DR-348
 isdn negotiate-bchan command DR-207
 isdn not-end-to-end command DR-208, DR-302
 isdn nsf-service command DR-303
 ISDN PRI
 B channel, order selection DR-294
 Multiple ISDN Switch Types, restrictions DR-305
 isdn sending-complete command DR-209
 isdn service command DR-349
 b_channel 0 DR-349
 isdn spid1 command DR-210
 isdn spid2 command DR-212
 ISDN subaddress, specifying in dialer string DR-679
 ISDN subaddress, specifying DR-705
 isdn switch-type command DR-214, DR-305, DR-869
 isdn tei command DR-216
 isdn x25 dchannel command DR-862
 isdn x25 static-tei command DR-863
 isdn-subaddress for multipoint connections DR-342, DR-345, DR-698
 isis adjacency-filter command P3R-244
 isis circuit-type command P1R-329
 isis csnp-interval command P1R-330
 IS-IS for CLNS
 adjacency changes, logging P3R-247
 enabling P3R-230
 Level 1 routing table, displaying P3R-290
 link-state
 packet, setting MTU P3R-248
 PDU, discarding P3R-242
 routing information, redistributing P3R-257
 IS-IS for IP
 adjacency, specifying P1R-329, P1R-330
 area passwords, configuring P1R-324
 conditional default origination P1R-325
 default route, generating P1R-242, P1R-325
 designated router election, specifying P1R-338
 domain passwords, configuring P1R-327
 enabling P1R-343
 interface password, assigning P1R-337
 link state metrics, configuring P1R-336
 password authentication, configuring P1R-324
 retransmission level, setting P1R-339
 router support, specifying level P1R-341
 isis hello-interval command P1R-331
 isis hello-multiplier command P1R-333
 isis lsp-interval command P1R-335
 isis metric command P1R-336
 isis password command P1R-337
 isis priority command P1R-338
 isis retransmit-interval command P1R-339
 isis retransmit-throttle-interval command P1R-340
 ISO CLNS
 addresses, DNS queries P3R-243

adjacency, logging changes P3R-247
checksums P3R-198
CLNS neighbors, removing P3R-187
congestion information, transmitting over Frame Relay
 WR-216
congestion threshold P3R-201
DECnet cluster alias configuration P3R-199
destination routing table, displaying P3R-332
DNS queries P3R-243
ES neighbors
 displaying P3R-272, P3R-280
 removing P3R-185
fast switching P3R-224
filter expressions, displaying filter sets P3R-274,
 P3R-275
general information, displaying P3R-267
hello messages, specifying P3R-200, P3R-211
interfaces
 displaying information P3R-276
 enabling P3R-203
IS neighbors
 displaying P3R-278, P3R-280
 removing P3R-186
IS-IS routing, enabling P3R-230
link-state
 packets, setting MTU P3R-248
 PDUs, discarding P3R-242
MTU, maximum P3R-215
neighbors, listing P3R-206, P3R-214
OSI model P3R-183
packet lifetime P3R-219
redistribution P3R-257
 address match P3R-249
 interface match P3R-252
 level set P3R-261
 metric match P3R-253
 metric set P3R-263
 metric-type set P3R-265
 next-hop match P3R-250
 route-source match P3R-251
 route-type match P3R-254
 tag set P3R-266
routing cache
 clearing P3R-184
 displaying entries P3R-269
 reinitializing P3R-184
routing table, clearing entries from P3R-188
routing, enabling P3R-232
security-option packets, allowing to pass P3R-233
SMDS, configuring over WR-274
traffic statistics, displaying P3R-287
ISO IGRP
 border routers P3R-257
 filters
 aliases P3R-238

 ES adjacencies, applying to P3R-194
 expressions, combining P3R-207
 frames, applying to P3R-192
 IS adjacencies, applying to P3R-194
 IS-IS adjacencies, applying to P3R-244
 ISO IGRP adjacencies, applying to P3R-246
 templates P3R-209
 metric adjustments P3R-255
 preferred routes P3R-259
 router level, specifying P3R-231
 routing information redistribution P3R-257
 routing processes, displaying P3R-282
 split horizon, enabling P3R-236
 timing parameter adjustments P3R-331
iso-igrp adjacency-filter command P3R-246
ISR, enabling BR-614
is-type command P1R-341

K

keepalive (ATM) command WR-236
keepalive command BR-772, IR-134
keepalive interval, LMI
 defining WR-236
 setting, example WR-236
keepalive packets, generating FR-534, FR-535
keepalive timer, ATM (example) WR-149
keepalive timer, setting rate, LAT DR-391
keepalive translate option, mapping to virtual interface
 template command DR-515, DR-535
keepalives P2R-381
 IPX P2R-399
 SPX P2R-383
keepalive-time command XR-190
kerberos clients mandatory command SR-127
kerberos credentials forward command SR-128
kerberos instance map command SR-129
kerberos local-realm command SR-130
kerberos preauth command SR-131
kerberos realm command SR-132
kerberos server command SR-133
kerberos srvtab command SR-134
kerberos srvtab remote command SR-136
key chain command P1R-497
key command P1R-495
key config-key command SR-137
 unrecoverable DES key, (caution) SR-137
keymap command DR-374
keymaps
 custom, creating DR-376
 default DR-377
 special characters DR-376
 specifying for session FR-87
 syntax DR-376

keymap-type command DR-381
 keys, pre-shared
 configuration (example) SR-391
 deleting SR-397
 specifying SR-397
 specifying (example) SR-397
 key-string (IKE) command SR-408
 key-string command P1R-499
 Kinetics IPTalk

L

lan command BR-774
 LAN Extender interface
 access list filtering
 on Ethernet packets IR-137
 on MAC address IR-136
 access-list (standard) command IR-3
 burned-in MAC address IR-135
 downloading
 from Flash IR-64
 from TFTP server IR-65
 priority output queuing IR-138
 rebooting IR-33
 retry count IR-139
 show statistics IR-301
 timeout IR-140
 lan-dest-address command BR-615
 LANE
 ATM addresses
 automatic assignment XR-137
 configuration server XR-137
 fixed assignment XR-150
 manual assignment XR-144
 templates
 ESI XR-140
 prefix XR-140
 broadcast-and-unknown server
 manually specifying ATM address XR-139
 providing different address to client XR-139
 client
 activating on subinterface XR-141
 adding address to database XR-133
 ATM address, providing manually XR-142
 exiting and rejoicing emulated LAN XR-128
 one per subinterface XR-141
 configuration server, ATM address
 assigning XR-137
 identifying to server and client XR-144
 specifying XR-144
 default LAN name in configuration server database
 XR-135
 emulated LAN
 client exiting and rejoicing XR-128

forcing client to join new XR-131
 one per subinterface XR-141
 LE ARP table, clearing entries XR-128, XR-129
 LECS, specifying a list of LECS addresses to use
 XR-152
 MPOA, ELAN ID XR-159
 simple LANE service replication XR-162
 lane auto-config-atm-address command XR-137
 lane bus-atm-address command XR-139
 lane client command XR-141
 lane client mpoa client name command XR-191
 lane client mpoa server name command XR-192
 lane client-atm-address command XR-142
 lane config database command XR-146
 lane config-atm-address command XR-144
 lane database command XR-148
 lane fixed-config-atm-address command XR-150
 lane global-lecs-address command XR-152
 lane le-arp command XR-153
 lane server-atm-address command XR-155
 lane server-bus command XR-157
 lan-name command BR-511
 Lanoptics Hub Networking Management IR-143
 LAPB
 compression DR-240, IR-58, IR-60
 encapsulation WR-290
 frame retransmission parameter (N2 frame) WR-299
 hardware outage WR-294
 idle timer (T4 parameter) WR-302
 interface outage timer WR-294
 interface statistics, displaying IR-339
 modulo, description WR-296
 outstanding frames
 acknowledgment (modulo parameter) WR-296
 maximum number (window parameter) WR-295
 N1 bits WR-297
 retransmission timer (T1 parameter) WR-301
 unsignaled link failure WR-302
 window size (k parameter) WR-295
 lapb interface-outage command WR-294
 lapb k command WR-295
 lapb modulo command WR-296
 lapb n1 command WR-297
 lapb n2 command WR-299
 lapb t1 command WR-301
 lapb t4 command WR-302
 LAT
 access control
 assigning names to group lists DR-387
 defining a group list DR-393
 on connections DR-364
 specifying access conditions to nodes DR-384
 associating a command with a service DR-398,
 P3R-165
 associating a rotary group with a service DR-406

- compression, specifying BR-32
- deleting entry from connection queue DR-367
- description DR-382
- enabling DR-386
- group code filtering, configuring BR-48
- group code mask, specifying DR-400
- inbound connections, enabling DR-399
- keepalive timer, setting DR-391
- learned services DR-430
- listing, available services DR-382, DR-430
- making a connection DR-382–DR-383
- maximum number of sessions, setting DR-408
- node name, changing DR-392
- opening multiple connections DR-382
- password for a service, setting DR-403
- protocol translation options DR-519, DR-528
- proxy node, configuring DR-405
- receive buffers
 - setting for host DR-389
 - setting for server DR-396
- retransmission limit, setting DR-395
- service advertisement timer DR-407
- service announcements
 - configuring DR-397
 - reenabling DR-397
- service groups
 - permitting access based on BR-28
 - specifying for filtering BR-27
- service identification, setting DR-402
- static service rating, setting DR-404
- transmission interval, setting DR-409
- viewing
 - active sessions DR-431
 - learned LAT services DR-430
- lat access-list command DR-384
- lat command DR-382
- lat enabled command DR-386
- lat group-list command DR-387
- lat host-buffers command DR-389
- lat host-delay command DR-390, P3R-164
- lat ka-timer command DR-391
- lat node command DR-392
- lat out-group command DR-393
- lat remote-modification command DR-394
- lat retransmit-limit command DR-395
- lat server-buffers command DR-396
- lat service autocmd DR-398
- lat service autocmd command P3R-165
- lat service enabled command DR-399
- lat service ident command DR-402
- lat service password command DR-403
- lat service rating command DR-404
- lat service rotary command DR-406
- lat service timer command DR-407
- lat service-announcements command DR-397, DR-400, DR-407
- lat service-group command DR-408
- lat service-responder command DR-407
- lat vc-sessions command DR-408
- lat vc-timer command DR-409
- Layer 2 Forwarding, tunnel information, displaying DR-838
- LDAP protocol support, specifying SR-384
- LE ARP table, dynamic entries, clearing XR-129
- length command FR-63
- lex burned-in-address command IR-135
- lex input-address-list command IR-136
- lex input-type-list command IR-137
- lex priority-group command IR-138
- lex retry-count command IR-139
- lex timeout command IR-140
- lifetime (IKE policy) command SR-410
- limited-resource command, APPN
 - link station BR-616
 - port BR-617
- limiting LU sessions BR-749
- line
 - characteristics, modifying remotely DR-394
 - console port, configuring DR-22
 - folding, X.3 DR-896
 - number, absolute DR-22
 - virtual terminal DR-22
- line coding, T1 IR-390
- line coding format DR-250, IR-167
- line command DR-21
- line configuration commands
 - accounting SR-76
 - arap authentication SR-28
 - authorization SR-65
 - login authentication SR-34
 - login tacacs SR-36
 - nasi authentication SR-37
 - timeout login response SR-56
- line configuration mode, entering DR-21
- line feed
 - insertion, X.3 PAD parameters DR-897
 - padding, X.3 PAD parameters DR-898
- line number
 - auxiliary DR-22
 - relative DR-21
 - virtual terminal DR-22
- line speed
 - receive speed, changing for session FR-94
 - transmit and receive speed, changing for session FR-96
 - transmit speed, changing for session FR-106
- line types DR-22
- linecode command DR-307, IR-141
- line-code type, selecting DR-307, IR-141
- lines
 - disconnecting DR-371

- displaying information about DR-57, DR-506
- sending messages to FR-143
- link command BR-776
- Link Quality Monitoring (LQM)
 - enabling DR-605
- link state metrics
 - IS-IS for IP, configuring P1R-336
- link traps, disabling FR-479
- link-queuing command BR-618
- link-state PDU
 - discarding P3R-242
 - MTU, setting P3R-248
- link-test command IR-142
- lives-of-history-kept command FR-369
- LLC2
 - CMNS support BR-369
 - connection information, displaying BR-424
 - display
 - active connections BR-800
 - local acknowledgment, enabling for SNA traffic
 - prioritization BR-222
 - polling frequency, configuring BR-379
 - wait interval for an acknowledgment, configuring BR-375
- XID transmissions, specifying frequency of BR-391
- llc2 ack-delay-time command BR-375
- llc2 ack-max command BR-377
- llc2 dynwind command BR-549
- llc2 idle-time command BR-379
- llc2 local-window command BR-380
- llc2 n2 command BR-381
- llc2 nw command BR-383
- llc2 recv-window command BR-384
- llc2 send-window command BR-385
- llc2 t1-time command BR-386
- llc2 tbusy-time command BR-387
- llc2 tpf-time command BR-388
- llc2 trej-time command BR-390
- llc2 xid-neg-val-time command BR-391
- llc2 xid-retry-time command BR-392
- LMI
 - ANSI T1.617 Annex D WR-209
 - CCITT Q.933 Annex A WR-209
 - Cisco Group 4 WR-209
 - Frame Relay type, selecting WR-209
 - general statistics, displaying IR-320, WR-246
 - keepalive interval WR-236
 - type, displaying WR-209
- LMI DCE
 - error threshold WR-204
 - monitored events count WR-206
 - polling verification timer WR-208
- LMI DTE
 - error threshold WR-205
 - full status polling interval WR-203
- monitored event count WR-207
- LMI NNI
 - error threshold WR-204, WR-205
 - monitored events count WR-206, WR-207
 - polling verification timer WR-208
- LNM
 - configuration report server BR-99
 - displaying information
 - for one or more interfaces BR-152
 - for one or more stations BR-156
 - for one or more Token Rings BR-155
 - ring error monitor BR-106
 - ring parameter server BR-107
- lnm alternate command BR-97
- lnm crs command BR-99, BR-100, BR-105
- lnm express-buffer command BR-101
- lnm loss-threshold command BR-102
- lnm password command BR-103
- lnm rem command BR-106
- lnm rps command BR-107
- lnm snmp-only command BR-108
- lnm softerr command BR-109
- load balancing, IP Enhanced IGRP P1R-323
- load sharing
 - Apollo Domain P3R-5
 - IPX P2R-298
 - XNS P3R-353
- load statistics, interval FR-637
- loading the configuration file FR-204
- load-interval command FR-637
- locaddr-priority command BR-208
- locaddr-priority-list command BR-210
- local acknowledgment
 - current state of, displaying BR-449
 - for LLC2 BR-232
 - source-bridge remote-peer tcp command, using with BR-232
 - for SDLLC connections, enabling BR-454
- local preference value, BGP, setting P1R-545
- local-area mobility P1R-39
- local-lnm command IR-143
- local-sap command BR-619
- LocalTalk P2R-1
- locate-queuing command BR-620
- location command FR-64
- location string, setting FR-465
- lock command DR-410
- lockable command FR-65
- lock-and-key
 - idle timeouts SR-142
 - temporary entries
 - clearing manually SR-142, SR-145
 - creating manually SR-143
 - enabling SR-142
- lock-and-key access

- absolute timeout P1R-99, P1R-119
creating dynamic access list P1R-98, P1R-119
log-adjacency-changes (IPX) command P2R-400
log-adjacency-changes (ISO CLNS) command P3R-247
logging, VPDN, events DR-848
logging buffer, clearing FR-490
logging buffered command FR-508
logging command FR-507
logging console command FR-510
logging facility command FR-512
 facility-type keywords (table) FR-512
logging history command FR-514
logging history size command FR-514, FR-516
logging in
 as specific user DR-411
 to change login username DR-411
logging linecard command FR-517
logging monitor command FR-519
logging on command FR-521
logging source-interface command FR-523
logging synchronous command FR-524
logging syslog-server command FR-699
logging trap command FR-526
login authentication command DR-177, SR-34
 using list-names (caution) SR-34
login command DR-411
login command (line subcommand) DR-175, DR-413
login tacacs command SR-36
login-string command DR-415
log-neighbor-changes command P1R-299, P2R-402
logout, warning users of impending FR-66
logout-warning command FR-66
loop detection buffer
 clearing table P3R-190
 displaying table P3R-298
 setting timer P3R-310
loopback
 ATM packets (example) WR-79
 channelized T1 or E1 channel-group DR-310
 DS-3, channelized T1 link DR-312
 dte IR-153
 from MIP over dedicated T1 link DR-311
 MCI serial card IR-144
 over DS-3 or channelized T1 link IR-156, IR-157
 SCI serial card IR-144
 T1 line DR-309
 through CSU/DSU IR-154
 X.21 DTE limitation IR-144
loopback (ATM) command WR-79
loopback (E3/T3 interface) command IR-146
loopback (interface) command IR-144
loopback (T1 interface) command IR-148
loopback (T3 controller) command IR-151
loopback applique command IR-152
loopback command (E1 controller) DR-308
loopback dte command IR-153
loopback interfaces IR-119
 assigning IPX network to DR-631
 assigning virtual terminal lines to DR-541
loopback line command IR-154
loopback local command (interface) DR-310
loopback local command (T1 controller) DR-309
loopback remote (interface) command IR-156
loopback remote command (controller) DR-311
loopback remote command (interface) DR-312
loop-detect command VR-30
low-speed serial interfaces, physical layer IR-168
LQM DR-605
lsap command BR-778
lsp-gen-interval command P2R-403
lsp-mtu (IPX) command P2R-404
lsp-mtu (ISO CLNS) command P3R-248
lsp-refresh-interval command P2R-405
LU address
 logical units, mapping to queuing priorities based on
 BR-210
 priority list, specifying BR-213
LU sessions, limiting BR-749
LZS compression algorithm IR-58

M

- MAC address P1R-180
 mapping to IP address FR-328
mac-address command BR-110
MacIP
 addresses, allocating P2R-67, P2R-71
 clients, displaying P2R-139
 server, establishing P2R-69
 servers, displaying P2R-140
 traffic statistics P2R-144
manual booting
 from Flash FR-282
 from ROM FR-282
map class, dialer map DR-313
map-class command DR-732
map-class dialer command DR-313, DR-732, DR-808
map-class frame-relay command WR-237
map-group command, Frame Relay WR-238
map-list command
 Frame Relay WR-239
 source and destination addresses, E.164 or X.121
 WR-239
mapping
 MAC address-to-IP address FR-328
 name-to-NSAP address P3R-212
 NSAP-to-SNPA address P3R-206, P3R-214
 NSAP-to-TID, mapping P3R-319
 TID-to-NSAP address P3R-304, P3R-312

masks, format in displays P1R-54, P1R-95
master bundle interface host DR-771
match address (CET) command SR-266
match address (IPSec) command SR-331
match as-path command P1R-391
match clns address command P3R-249
match clns next-hop command P3R-250
match clns route-source command P3R-251
match community-list command P1R-393
match interface (ISO CLNS) command P3R-252
match interface command P1R-501, P3R-252
match ip address command P1R-503
match ip next-hop command P1R-506
match ip route-source command P1R-508
match length command P1R-510
match metric (ISO CLNS) command P3R-253
match metric command P1R-512
match route-type (ISO CLNS) command P3R-254
match route-type command P1R-514
match tag command P1R-516
max-cached-entries command BR-621
max-cached-trees command BR-622
maximum paths
 Apollo Domain P3R-5
 IPX P2R-298
 XNS P3R-353
maximum transmission unit, Path MTU Discovery P1R-147
maximum-lus command BR-781
maximum-memory command BR-623
maximum-paths command P1R-518
max-link-stations command BR-624
max-llc2-sessions command BR-780
max-lsp-lifetime command P2R-406
max-rcv-btu-size command BR-626
M-bit, X.25 more data bit WR-339, WR-359
MCI interface card
 loopback on serial IR-144
 pulsing DTR signal DR-251, IR-181
MD5 authentication
 IP Enhanced IGRP P1R-301
 on TCP connections between BGP peers P1R-408
 OSPF P1R-228
 RIP P1R-497
mdl command IR-159
media-type command IR-161
members command DR-24
memory usage, Certification Authority Interoperability
 SR-366
memory-size iomem command FR-266
menu (EXEC) command FR-24
menu clear-screen command FR-125
menu command FR-126
 resume FR-127
menu default command FR-128
menu line-mode command FR-129

menu options command FR-130
menu prompt command FR-131
menu single-space command FR-132
menu status-line command FR-133
menu text command FR-134
menu title command FR-136
message
 front panel LED display FR-219
 specifying front panel LED FR-238
message logging
 console FR-510
 enabling FR-521
 history table size FR-516
 monitor FR-519
 SNMP trap FR-514
 UNIX syslog server FR-507
message queue length, SNMP FR-471
messages
 busy FR-142
 displaying debug FR-89
 failed connection DR-366
 length FR-143
 line activation, displaying FR-112
 line-in-use FR-142
 login DR-366, DR-415
 redirecting system error FR-521
 sending to other terminals FR-143
 successful connection DR-366, DR-415
 vacant terminal FR-146
metric adjustments, ISO IGRP P3R-255
metric holddown command P1R-214
metric maximum-hops command P1R-215
metric weights (ISO CLNS) command P3R-255
metric weights command P1R-307
metrics
 assigning for redistribution P1R-194, P1R-244,
 P1R-383
 IP Enhanced IGRP, adjusting P1R-295
routing
 Net/One P3R-329, P3R-360
 VINES P3R-72, P3R-80
 XNS P3R-329, P3R-360
MIB
 Cisco Round-Trip Time Monitor FR-383
 RMON FR-376, FR-380
microcode
 loading Cisco IOS image FR-231
 loading from Flash memory FR-229
 reloading FR-233
microcode (Cisco IOS image) command FR-231
microcode command FR-229
microcode reload command FR-233
MID, per VC (example) WR-24
mid command WR-80
minimum-memory command BR-627

MIP, CT3IP external port IR-386
mkdir command FR-179
mls rp ip command XR-100
mls rp management-interface command XR-101
mls rp nde-address command XR-102
mls rp vlan-id command XR-103
mls rp vtp-domain command XR-104
MLSP XR-100
mobile remote node DR-485
mode
 framed DR-252, IR-399
 unframed DR-252, IR-399
mode (IPSec) command SR-333
mode (Voice over ATM) command VR-31
modem
 chat script DR-672, DR-881
 dialer hold queue DR-688
 EC/compression DR-881
 scripts (examples) DR-884
 settings
 AUX (table) DR-882
 EC/compression (table) DR-881
 platform-specific (table) DR-882
 troubleshooting DR-884
modem answer-timeout command DR-79, DR-186
modem at-mode command DR-80
modem at-mode-permit command DR-82
modem attributes DR-51
modem autoconfigure command DR-83
modem autoconfigure discovery command DR-83
modem autoconfigure type command DR-84
modem autotest command DR-85
modem bad command DR-88
modem buffer-size command DR-90
modem busyout command DR-91
modem callin command DR-25
modem callout command DR-26, DR-36
modem chat scripts
 DDR DR-672
 default DR-672
modem country mica command DR-93
modem country microcom_hdms command DR-96
modem cts-required command DR-36
modem dialin line command DR-28
modem dtr-active command DR-29
modem hold-reset command DR-99
modem inout command DR-31
modem poll retry command DR-101
modem poll time command DR-102
modem printer command DR-32
modem reconnection, forcing a waiting period DR-813
modem recovery action command DR-103
modem recovery maintenance command DR-104
modem recovery threshold command DR-106
modem recovery-time command DR-107

modem ri-is-cd command
modem shutdown command DR-108
modem startup-test command DR-109
modem status-poll command DR-110
modem, specifying capabilities of DR-112
modemcap edit command DR-111
modemcap entries, using templates to join DR-52
modemcap entry command DR-112
modem-pool command DR-113
modes
 ca-identity, enabling SR-371
 certificate chain configuration, enabling SR-364
 query, enabling SR-366
 RA, enabling SR-378
monitor, message logging to FR-519
MOP
 controlling sysid messages DR-424
 enabling an interface to support IR-162
 enabling for an interface DR-424
server
 booting automatically FR-290
 forwarding boot requests FR-339
mop device-code command FR-338
mop enabled command DR-424, IR-162
mop retransmit-timer command FR-339
mop sysid command DR-424, IR-163
more FR-235
more command FR-180
more data bit, X.25 WR-339, WR-359
more flh:logfile command FR-235
MOTD banner, configuring FR-117
motd-banner command FR-139
MPOA, LANE client XR-159
mpoa client config name command XR-193
mpoa client name command XR-194
mpoa server config name command XR-195
mpoa server name command XR-196
mpoa server name trigger ip-address command XR-197
mrinfo command P1R-649
mrouted P1R-649
mrouted, description P1R-591
mstat command P1R-650
mtrace command P1R-652
MTU
 Cisco defaults and limits for packet WR-263
 default values by media type (table) IR-164
 ISO CLNS, maximum P3R-215
 setting IS-IS link-state PDU P3R-248
mtu command IR-164
mtu translate option, mapping to virtual interface template
 command DR-515, DR-536
multicast addresses, ATM, SMDS (example) WR-25
multicast command P2R-407
multicast group, joining P1R-604

multicast source addresses, configuring bridging support for BR-50
multilink bundle interface, defining template to use DR-586
Multilink PPP, bundle information, displaying DR-612, DR-802
multilink virtual-template command DR-586
Multiple ISDN Switch Types, restrictions DR-305
multiple logical IP subnetworks, on SMDS WR-264, WR-277, WR-279
multiple-character patterns
 anchoring DR-905
 creating DR-904
 description DR-902
 using multipliers DR-904
multipliers DR-904
 using in regular expressions DR-904
multipoint intervals, ATM, configuring, (example) WR-26
multiprotocol virtual circuit, X.25 WR-344
multiring all command BR-112
multiring command BR-111
multiring trcrf-vlan command BR-202
music-threshold command VR-117

N

name caching, enabling for NetBIOS BR-117
name command BR-783
name display facility, AppleTalk P2R-74
 configuring P2R-65
name elan-id command XR-159
name local-seg-id command XR-161
name mapping, CLNS
 NETs P3R-212
 NSAPs P3R-212
name preempt command XR-160
name server-atm-address command XR-162
name-connection command FR-141
named IP access list P1R-129
named IPX access lists P2R-248
named-key command SR-412
NASI
 clients, enabling DR-754
 connection status, displaying DR-755
 TTY lines, connecting through DR-754
 VTY lines, connecting through DR-754
nasi authentication command SR-37
 using list-names, (caution) SR-37
NAT
 clearing translations P1R-10
 enabling P1R-42
 inside destination address translation P1R-44
 inside source address translation P1R-46
 outside source address translation P1R-48
 pool of addresses, defining P1R-50

statistics, displaying P1R-87
translations, displaying P1R-89
national bit command IR-166
NBF, viewing sessions DR-55
NBMA network
 mapping IP-to-NBMA addresses P1R-58
 mapping IPX-to-NBMA addresses P2R-311
 network identifier P1R-61, P2R-313
NBP
 access lists
 creating P2R-8
 other NBPs P2R-15
 AppleTalk P2R-65, P2R-74
 name registration table P2R-148
 named entities P2R-8
 packet type P2R-8
 services, displaying P2R-146
 tests P2R-201
NCIA
 circuits
 clearing BR-722
 status information, displaying BR-732
 client
 active connection, terminating BR-723
 configuring BR-726
 status information, displaying BR-734
 registered client control block, releasing BR-724
 server
 configuring BR-730
 RSRB ring, configuring BR-728
 starting and stopping BR-725
 status information, displaying BR-736
ncia client command BR-726
ncia command BR-725
ncia rsrb command BR-728
ncia server command BR-730
negative-caching command BR-628
neighbor command, IGRP, RIP P1R-202
neighbor advertise-map non-exist-map command P1R-396
neighbor command
 advertisement-interval P1R-395
 distribute-list P1R-400, P1R-413
 EGBP-multihop P1R-402
 EGP, IGRP, RIP P1R-216
 filter-list P1R-403
 maximum-prefix P1R-405
 next-hop-self P1R-407
 OSPF P1R-262
 remote-as P1R-415
 remove-private-as P1R-417
 route-map P1R-419
 update-source P1R-427
 version P1R-428
 weight P1R-429
neighbor database-filter command P1R-264

neighbor default-originate command P1R-397
neighbor description command P1R-399
neighbor password command P1R-408
neighbor peer-group command
 assigning members P1R-410
 creating P1R-411
neighbor remove-private-as P1R-417
neighbor resets, logging P1R-373
neighbor route-reflector-client command P1R-420
neighbor send-community command P1R-422
neighbor shutdown command P1R-423
neighbor soft-reconfiguration inbound command P1R-424
neighbor table, VINES
 deleting P3R-22
 displaying P3R-34
 static paths, creating P3R-75
net command P1R-342
Net/One
 emulation mode P3R-348, P3R-360
 hello packets P3R-329, P3R-360
 metrics, routing P3R-329, P3R-360
 routing
 enabling P3R-348, P3R-360
 updates P3R-360
NetBEUI
 connection information, displaying DR-55
 remote node, configuring DR-34
NetBIOS
 IPX, filtering messages P2R-300, P2R-302
 session table
 global DR-55
 interface DR-55
netbios access-list bytes command BR-113
netbios access-list command P2R-408
netbios access-list host command BR-115
netbios enable-name-cache command BR-117
netbios input-access-filter bytes command BR-118
netbios input-access-filter host command BR-119
netbios name-cache command BR-120
netbios name-cache name-len command BR-122
netbios name-cache proxy-datagram command BR-124
netbios name-cache query-timeout command BR-126
netbios name-cache recognized-timeout command BR-127
netbios name-cache timeout command BR-128
netbios nbf command DR-34
netbios output-access-filter bytes command BR-129
netbios output-access-filter host command BR-130
NetBIOS, IBM
 access list filter
 assigning to interface BR-118, BR-119
 defining for outgoing messages BR-129, BR-130
byte offset access lists BR-189
byte offsets, configuring BR-113
cache, displaying entries in BR-158
clearing dynamically learned names BR-90

name caching
 configuring the "dead time" for BR-126, BR-127
 defining a static entry BR-120
 enabling BR-117, BR-128
NetFlow Switching
 description XR-16
 exporting cache entries XR-11
 flow switching XR-11
 IP, enabling XR-15
netmask, definition P1R-54
NETs for CLNS
 algorithm for choosing P3R-217
 name mapping P3R-212
 static address, assigning P3R-217
network area command P1R-265
network command P2R-410
 backdoor P1R-433
 BGP P1R-431
 IGRP P1R-217, P1R-309
 RIP P1R-203
network configuration file FR-204
 copying from a server using rcp FR-254
 example FR-260
 default filename FR-211
 changing FR-204
 loading from a server FR-211
network management hub IR-143
network masks, format P1R-95
network services, tailoring use of FR-534, FR-535
network timing services, displaying information WR-144
network weight command P1R-434
network-clock base-rate command VR-33
network-clock-select (ATM) command WR-81
network-clock-select (MC3810) command VR-34
network-clock-switch command VR-36
network-id command XR-198
NHRP, IPX
 access lists P2R-310
 authentication P2R-308
 authoritative response P2R-309
 cache clearing P2R-224
 static entries P2R-311
 cache, displaying P2R-444
 controlling requests P2R-310
 dynamic cache entries P2R-224
 enabling P2R-313
 holdtime P2R-309
 initiation, controlling P2R-317
 loop detection P2R-315, P2R-316
 network identifier P2R-313
 packet rate P2R-312
 record and reverse record options P2R-315
 requests, triggering P2R-317
 Responder Address option P2R-316
 security P2R-308

- server addresses P2R-314
- static IPX-to-NBMA address mapping P2R-311
- traffic statistics P2R-446
- triggering requests P2R-310
- NHRP for IP
 - access list P1R-57
 - authentication P1R-55
 - authoritative response P1R-56
 - cache, clearing
 - dynamic entries P1R-12
 - static entries P1R-58
 - cache, displaying P1R-91
 - enabling P1R-61
 - holdtime P1R-56
 - initiation, controlling P1R-67
 - loop detection P1R-63, P1R-64
 - network identifier P1R-61
 - Next Hop Server address P1R-62
 - packet rate P1R-60
 - record and reverse record options, suppressing P1R-63
 - requests, triggering P1R-57, P1R-67
 - Responder Address option P1R-64
 - security P1R-55
 - server-only mode P1R-65
 - static IP-to-NBMA address mapping P1R-58
 - SVC set-up and teardown
 - thresholds P1R-66
 - time interval P1R-17
 - traffic statistics, displaying P1R-93
- NLSP
 - area network numbers, setting P2R-219
 - CSNP interval, specifying P2R-319
 - database, displaying P2R-448
 - default routes
 - advertising P2R-256
 - specifying P2R-265
 - designated router, specifying election priority P2R-328
 - disabling on an interface P2R-320
 - enabling P2R-359
 - on an interface P2R-320
 - filters, route updates P2R-238
 - GNS queries, replying to P2R-274
 - hello interval, specifying P2R-322, P2R-324
 - holddown period between partial route calculations,
 - controlling P2R-420
 - hop count, maximum from RIP updates P2R-297
 - internal network number
 - definition P2R-289
 - setting P2R-289
 - IPX
 - SPF log P2R-453
 - link delay, specifying P2R-295
 - logging adjacency changes P2R-400
 - LSP
 - generation interval P2R-403
- MTU, maximum size P2R-404
- refresh interval P2R-405
- retransmission interval, specifying P2R-329
- setting maximum lifetime P2R-406
- transmission interval P2R-325
- metric, specifying P2R-326
- multicast addressing
 - interface configuration P2R-327
 - router configuration P2R-407
- neighbors, displaying P2R-451
- redistribution P2R-421
- RIP entries, aging out P2R-347
- RIP packets
 - maximum size P2R-346
 - processing P2R-330
- SAP entries, aging P2R-375
- SAP packets
 - maximum size P2R-374
 - processing P2R-331
- shortest path first algorithm (SPF) calculation interval,
 - controlling P2R-469
- subinterfaces P2R-305
 - configuring (example) P2R-306
- throughput, specifying P2R-385
- NNI
 - and DCE
 - error threshold WR-204
 - monitored events count WR-206
 - polling verification timer WR-208
 - and DTE
 - error threshold WR-205
 - monitored events count WR-207
 - Frame Relay PVC switching
 - interface type WR-192
 - no form of a command, using FR-xxi
 - no ip inspect command SR-199
 - no menu command FR-138
 - node name, changing LAT DR-392
 - node-row command BR-630
 - non-linear command VR-118
 - non-return to zero inverted (NRZI), enabling DR-250
 - nonvolatile RAM file compression FR-209
 - notes, usage in text v
 - notify command DR-416, FR-67
 - NRZI, enabling IR-167
 - nrzi-encoding command DR-250, IR-167
 - NSAP address
 - (example) WR-29
 - ATM WR-28
 - NSAPs for CLNS
 - cluster alias P3R-199
 - media address mapping P3R-206, P3R-214
 - name mapping P3R-212
 - SNPA mapping P3R-206, P3R-214
 - static address assignment P3R-217

TID mapping P3R-319
NSSA P1R-232
ntp access-group command FR-639
ntp authenticate command FR-641
ntp authentication-key command FR-642
ntp broadcast client command FR-645
ntp broadcast command FR-644
ntp broadcastdelay command FR-646
ntp clock-period command FR-647
ntp disable command FR-648
ntp master command FR-649
ntp peer command FR-651
ntp server command FR-653
ntp source command FR-655
ntp trusted-key command FR-656
ntp update-calendar command FR-657
null bytes, end of string FR-68, FR-91
null-xid-poll command BR-632
num-exp command VR-37
NVRAM file compression FR-209

O

o command FR-300
OAM, ATM, cell flush (example) WR-30
oam retry command WR-85
oam-pvc command WR-83
oam-svc command WR-87
ODR, enabling P1R-188
offload (backup) command BR-787
offload command BR-784
offset-list (IGRP) command P1R-218
offset-list (IP Enhanced IGRP) command P1R-310
offset-list (RIP) command P1R-204
offsets
 IP Enhanced IGRP P1R-310
 RIP P1R-204
offsets, applying P1R-205
offsets, IGRP P1R-218
oid command FR-701
on-hook detection WR-52
open connections, displaying DR-486, DR-565
operation command VR-119
OSPF
 address range for a single route, specifying P1R-233
 aggregate addresses, creating P1R-293
 area ID P1R-265
 authentication for an area, enabling P1R-228
 authentication type P1R-247
 auto cost P1R-267
 broadcasts
 over Frame Relay WR-211
 over X.25 BR-81, BR-456, WR-346, WR-350
 compatible command P1R-241

consolidate routes at a boundary P1R-233
cost P1R-249
cost to the default external route, assigning P1R-230
database, displaying information P1R-275
dead interval P1R-251
default metric values, setting P1R-244
default metrics P1R-267
default route, generate P1R-242
default summary route cost P1R-230
demand circuit P1R-252
designated router P1R-259
distance P1R-245
distances P1R-245
DNS names P1R-256
enabling P1R-271
enabling router-id P1R-270
hello interval P1R-253
hello packet interval P1R-251
ignore MOSPF LSA packets P1R-268
interface information, displaying P1R-284
interfaces P1R-265
IRDP advertisements to multicast address, sending P1R-38
link state advertisement retransmissions P1R-260
LSA group pacing P1R-295
MD5 authentication P1R-254
MOSPF packets, ignoring P1R-268
neighbor information, displaying P1R-286
neighbor state changes, viewing P1R-269
network type P1R-257
not so stubby area P1R-232
NSSA P1R-232
over X.25 network WR-345
password P1R-248
priority of router P1R-259
retransmit interval P1R-260
route calculation timers, configuring P1R-296
routers interconnecting to nonbroadcast networks P1R-262
routing processes, displaying information P1R-272
routing table entries, displaying P1R-274
stub area, defining P1R-235
summarize routes at a boundary P1R-233
timers P1R-296
transmit delay P1R-261
virtual link P1R-237
virtual links, displaying P1R-291
ospf auto-cost command P1R-267
ospf ignore lsa mospf command P1R-268
ospf log-adj-changes command P1R-269
OUI code, choosing type to use over translational bridges BR-94
output attenuation command VR-120
output notification
 configuring for session FR-90

setting for line FR-67
output-delay command P1R-205
outstanding frames, LAPB
acknowledgment (modulo parameter) WR-296
maximum number (window parameter) WR-295
owner command FR-371
owning-cp command BR-634

P

P1024B protocol BR-929
packet
compressed packet-by-packet BR-81, BR-456,
WR-346, WR-349
compressed TCP header WR-354
maximum size, establishing FR-469
SNMP, filtering FR-469
X.25
acknowledgment, configuring WR-393
input, setting size of WR-339
output, setting size of WR-359
packet dispatch character
changing for session FR-80
setting for line FR-53
packet lifetime, ISO CLNS P3R-219
packet-by-packet compression, X.25 BR-81, BR-456,
WR-349
packet-by-packet compression, X.25 WR-346
PAD
connections between devices DR-561, WR-303,
WR-360
Macintosh connecting through DR-509, DR-518,
DR-527
mapping WR-356
parameters, changing DR-557–DR-559, DR-566
profile scripts, creating WR-399
pad command DR-554
PAD profile scripts DR-550
padding
changing for session FR-91
configuring for line FR-68
padding command FR-68
PAP, authentication method DR-590
parallel paths
Apollo Domain P3R-5
IPX, choosing between P2R-298
XNS P3R-353
parallel router P1R-15
parameter-setting command DR-894
parentheses, using in regular expressions DR-906
parity
changing for session FR-92
setting for line FR-69
parity command FR-69
partition command FR-267
partition flash command FR-267
passive-interface command P1R-519
password command DR-179, SR-427
passwords
assigning for a line DR-179
clear-text version DR-654
IS-IS for IP
area, assigning on P1R-324
authentication P1R-324
domain, assigning on P1R-327
interface, assigning on P1R-337
LNM, setting for BR-103
path command BR-790
Path MTU Discovery
enabling P1R-147
RFC 1191 P1R-147
paths
selection, DECnet P3R-142
source-route bridging, modifying default cost for
BR-194
transparent bridging, modifying default cost for BR-40
paths-of-statistics-kept command FR-372
pattern matching symbols, LAT (table) DR-384
peer default IP address command DR-587
peer default ip address command DR-633
peer neighbor routes, dialer interface, effect on DR-589
peer neighbor-route command DR-589
Performance Data Collection
configuring FR-705
enabling FR-695
SNMP data FR-717, FR-732
transfer method FR-736
period (.) character, ping command output FR-529
permanent rate queues
ATM
(example) WR-34
configuring WR-33
permit (IPX extended) command P2R-411
permit (IPX standard) command P2R-414
permit (NLSP route aggregation summarization) command
P2R-416
permit (reflexive) command SR-152
permit (SAP filtering) command P2R-418
permit command P1R-154, SR-268
IPX
extended P2R-411
NLSP route aggregation summarization P2R-416
SAP filtering P2R-418
standard P2R-414
PFS, specifying SR-337
Phase IV/Phase V, DECnet, designing network P3R-130
physical channel interface monitoring BR-880
physical-layer command DR-35, IR-168
ping (privileged) command FR-528

- ping (user) command FR-531
ping command FR-204
 LAPB T1 value, determining WR-301
 test characters (table) FR-528, FR-531
 test connectivity FR-528, FR-531
playout-delay command VR-122
plus character in regular expressions DR-904
point-to-multipoint signaling, ATM, (example) WR-27
policy propagation via BGP QR-4
policy routing
 based on address P1R-504
 based on packet length P1R-510
 enabling P1R-526
 local P1R-489
 route map, identifying P1R-489
 route map, identifying P1R-491
 to a default next hop P1R-537
 to a next hop P1R-444, P1R-539
 to an interface P1R-535
 to default interface P1R-533
poll bit, sending for LLC2 BR-388
poll timer, ATM (example) WR-151
poll-interval command FR-703
pool-range command DR-115
Poor Man's Routing
 DECnet P3R-136
port (voice) command VR-38
port command IR-170
APPN
 connection network BR-635
 link station BR-636
port numbers
 TCP services (table) QR-30
 UDP services (table) QR-30
port numbers, Telnet DR-36
port queue, retry interval FR-93
pos flag command IR-171
pos framing command IR-172
pos report command IR-174
pos scramble-atm command IR-176
pos threshold command IR-178
PPP DR-635–DR-636
 APPN remote SAP, specifying BR-637
 authentication
 CHAP or PAP, order requested DR-590
 incoming calls only DR-590
 remote CHAP, common secret DR-597
 remote PAP, username sent DR-603
BACP DR-781–DR-803
 callback configuration DR-783
 dialer load threshold DR-790
 dropping links, no response DR-785
 links, removing from multilink bundle DR-785
 retransmissions, setting limits DR-788
 telephone number negotiation DR-791
telephone number, local, configuring DR-791
transmit queue threshold DR-790
type of link, adding or dropping DR-787
callback
 enabling on non-DTR dialer interface DR-809
 secure DR-806
CHAP
 common hostname DR-596
 common secret DR-597
 client, calling back DR-814
 common secret, remote CHAP authentication DR-597
 compression IR-58
 encapsulation IR-80
 changing dynamically DR-258, DR-338
 enabling on interface DR-578
IPX packet compression over DR-630
Multilink PPP, enabling for BACP DR-796
PAP
 remote authentication (example) DR-603
 remote, username and password sent DR-603
 session, automatic startup DR-620
 wide-area networking DR-575–DR-616
ppp accounting command SR-78
ppp authentication command DR-590, SR-39
 CHAP DR-590
 PAP DR-590
 using list-names, (caution) SR-39
ppp bap call command DR-782
ppp bap callback command DR-783
ppp bap drop command DR-785
ppp bap link types command DR-787
ppp bap max command DR-788
ppp bap monitor load command DR-790
ppp bap number command DR-791, DR-866
ppp bap timeout command DR-794
ppp bridge appletalk command DR-592
ppp bridge ip command DR-593
ppp bridge ipx command DR-594
ppp callback command DR-313, DR-808, DR-809, DR-814
ppp chap hostname command DR-596, SR-41
ppp chap password command DR-597, SR-43
ppp chap refuse command SR-45
ppp chap wait command SR-47
ppp command DR-635
ppp lcp fast-start command DR-637
ppp multilink command DR-599
 BACP, enabling DR-796
ppp multilink fragment-delay command DR-601
ppp multilink idle-link command DR-869
ppp multilink interleave command DR-602
ppp pap sent-username command DR-603, SR-49
ppp quality command DR-605
ppp use-tacacs command SR-51
 single-line option, (caution) SR-51
ppp use-tacacs translate option

- mapping to virtual interface template command
DR-515, DR-536
- ppp-dest-address command BR-637
- prc-interval command P2R-420
- predictor compression DR-576, IR-58, IR-59, IR-60
- predictor compressor DR-240
- preference command VR-40
- preferred routes, specifying with ISO IGRP P3R-259
- preferred-nnserver command BR-792
- prefix command VR-41
- pri-group command DR-315, IR-180
- pri-group timeslots nfafas_d command DR-351
- primary address, IP, setting P1R-14
- primary SDLC station, configuring routing device as
BR-371
- printer command (LPD) FR-70
- priority list, assigning QR-22
- priority queueing
 - configuration information, displaying QR-74
 - establishing QR-28
 - packet limits (table) QR-32
 - priority levels (table) QR-29
- priority-group command QR-22
- priority-list command BR-208, BR-213
- priority-list default command QR-24
- priority-list interface command QR-26
- priority-list protocol bstun command BR-332
- priority-list protocol command QR-28
- priority-list protocol ip tcp command BR-333
- priority-list queue-limit command QR-32
- priority-list stun address command BR-335
- private command FR-72
- privilege level (global) command SR-428
- privilege level (line) command SR-430
- privileged EXEC command mode, entering FR-8
- privileged EXEC commands
 - clear ip trigger-authentication SR-30
 - clear kerberos creds SR-126
 - show accounting SR-79
 - show ip trigger-authentication SR-53
 - show kerberos creds SR-138
 - show ppp queues SR-54
- privileged EXEC mode, summary FR-xx
- prompt, customizing FR-658
- prompt command FR-658
- prompts, system FR-xx
- propagation-delay command
 - APPN link station BR-638
 - APPN port BR-639
- protocol addresses, mapping (example) WR-65
- protocol command WR-89
- protocol groups, creating BR-354
- protocol numbers, IPX (table) P2R-208
- protocol translation
 - global options DR-511, DR-520, DR-529, DR-535
 - LAT DR-514
 - TCP DR-524
 - X.25 DR-535
 - global translation options DR-511, DR-520, DR-529
 - LAT options DR-519, DR-528
 - outgoing options, mapping to virtual interface template commands DR-515, DR-536
 - SLIP and PPP options DR-510, DR-519, DR-528
 - Telnet DR-509, DR-517, DR-523, DR-528
 - Telnet/TCP DR-509, DR-517, DR-523, DR-528
 - Telnet/TCP options DR-517, DR-523
 - X.25 options DR-509, DR-519
 - protocols, selecting terminal transport DR-467
 - proxy explorers
 - configuring BR-184
 - enabling for NetBIOS name caching BR-117
 - proxy network numbers, assigning P2R-79
 - proxy, configuring for LAT DR-405
 - pseudobroadcasting, SMDS static map WR-281
 - pu command (direct) BR-793
 - public key configuration mode, enabling SR-403, SR-412
 - pulse-time command DR-251, IR-181
 - pu-type-20 command BR-641
 - PVC
 - ATM, discovery (example) WR-19
 - resetting XOT WR-288
 - X.25
 - address maps, displaying WR-310
 - encapsulation, establishing WR-361
 - HIC WR-331
 - HOC WR-332
 - HTC WR-336
 - LIC WR-340
 - LOC WR-342
 - LTC WR-343
 - serial interfaces on (example) WR-365
 - states WR-320
 - switched WR-364
 - switched options (table) WR-367
 - tunneled WR-369
 - pvc command WR-92
 - pwd command FR-182

Q

- QLLC
 - APPN
 - configuring BR-706
 - partner node, specifying BR-705
 - configured for DLSw BR-455, BR-459
 - data link
 - defining, SNA host BR-520
 - enabling, SNA BR-515
 - qllc accept-all-calls command BR-424

qllc dlsw command BR-285
qllc npsi-poll command BR-427
qllc partner command BR-429
qllc sap command BR-431
qllc srb command BR-433
qllc xid command BR-435
QoS group ID QR-54
query mode, enabling SR-366
query url command SR-384
question command FR-xv
queue
 byte count QR-40
 custom QR-5
 length limit QR-42
 maximum packets QR-32
 packet priorities QR-26, QR-36
 priorities, assigning QR-34
 priority QR-24
 protocol priorities QR-28, QR-38
 status QR-74
 weighted fair queueing QR-7
queue size, exponential weight factor QR-45
queued host-initiated connections, deleting entries from,
 LAT DR-367
queue-list default command QR-34, QR-36
queue-list interface command QR-36
queue-list protocol bstun command BR-337
queue-list protocol command QR-38
queue-list protocol ip tcp command BR-338
queue-list queue byte-count command QR-40
queue-list queue limit command QR-42
queues
 holding packets for modem connection DR-688
 length, SNMP trap queues FR-471
queuing priorities
 BSTUN
 based on header BR-332
 based on TCP port BR-333
 configuring BR-210, BR-213
 STUN
 based on a TCP port BR-333
 based on address BR-335

R

R2 signaling DR-265
RA mode, enabling SR-378
radius-server attribute nas-port extended command SR-89
radius-server configure-nas command SR-90
radius-server deadtime command SR-91
radius-server extended-portnames command SR-92
radius-server host command SR-93
radius-server host non-standard command SR-96
radius-server key command SR-98

radius-server optional passwords command SR-97
radius-server timeout command SR-101
radius-server vsa send command SR-102
RAND compression algorithm DR-240, DR-576, IR-58,
 IR-59, IR-60
random-detect command QR-43
random-detect exponential-weighting-constant command
 QR-45
random-detect precedence command QR-47
RARP, router, configuring as server FR-328
RAs
 configuration, (example) SR-378
 enabling SR-378
rate-limit command QR-50
raw queue size, ATM
 example) WR-35
 configuring WR-35
rcp
 configuring FR-332, FR-336
 copying files FR-331
 DNS, enabling security FR-330
 remote username FR-293
RDPU
 configuring for sending, ISO CLNS P3R-235
 interval to disable P3R-220
Real-time Transport Protocol, Multilink PPP interleaving
 DR-585
rearranging entries in BOOT environment variable FR-293
receive buffers
 setting for host, LAT DR-389
 setting for server, LAT DR-396
receiver not ready (RNR) frames BR-387
receiver ready (RR) frames BR-379, BR-387
redirect messages, VINES P3R-79
redistribute (IPX) command P2R-421
redistribute (ISO CLNS) command P3R-257
redistribute command P1R-521, P2R-421
redistribute static clns command P3R-257
redistribute static ip command P1R-521
redistribution
 AppleTalk, Enhanced IGRP P2R-83
 assigning metrics for P1R-194, P1R-244, P1R-383
 IP address P1R-526
 IP Enhanced IGRP
 metrics for P1R-295
 of default routes P1R-294
 IP redistribution P1R-525
 IPX Enhanced IGRP P2R-421
 IS-IS P3R-257
 ISO IGRP P3R-257
 match criteria
 address P3R-249
 interface P3R-252
 metric P3R-253
 next-hop P3R-250

- route source P3R-251
route-type P3R-254
NLSP P2R-421
one protocol to another P1R-525
one routing domain into another P1R-521
routes, using same metric value P1R-194, P1R-244,
 P1R-383
routing information P1R-440, P1R-446, P1R-448,
 P3R-251
set criteria
 level P3R-261
 metric P3R-263
 metric-type P3R-265
 tag P3R-266
using route maps P1R-440, P1R-446, P1R-448
references and recommended reading FR-747
Reflexive Access Lists
configuring, (examples) SR-149, SR-153
temporary entries, characteristics SR-153
timeouts, global, (examples) SR-150
refuse-message command FR-142
regular expressions
 alternative DR-905
 characters with special meaning (table) DR-903
 creating DR-902
 using multipliers DR-904
 using parentheses for recall DR-906
 with anchoring DR-905
 description DR-901
 examples DR-907
 recalling DR-906
 special characters
 anchoring (table) DR-905
 multipliers (table) DR-904
reject timer BR-390
relative line number DR-21
reload command FR-302
reloading the operating system FR-302
remote peer, specifying frame size BR-230, BR-232
remote username, rcp requests
 default values FR-293
 overriding default value FR-293
rename command FR-183
reporting link number, specifying threshold BR-97
req-qos command VR-42
request-data-size command FR-374
reserved-inbound command BR-642
reserved-outbound command BR-643
response-data-size command FR-375
resume command DR-417, DR-557, DR-896, FR-127
retransmission interval, setting for IP IS-IS P1R-339
retransmission limit, LAT DR-395
retry count, LLC2 BR-381
retry interval, terminal port queue FR-93
retry-limit command
- APPN link station BR-644
APPN port BR-645
reverse connections DR-26, DR-30
Reverse Path Forwarding (RPF) P1R-665
 displaying P1R-683
RFC 1034, domain name servers FR-323
RFC 1035, domain names FR-633
RFC 1042
 ARP packets P1R-5
 SNAP P1R-81
RFC 1045, Ethernet type code for Versatile Message
 Translation Protocol BR-939
RFC 1084
 BootP extensions DR-4
 BOOTP requests for asynchronous interfaces FR-322
RFC 1144
 TCP header compression P1R-146
 TCP/IP header compression DR-640, WR-354
RFC 1178, choosing a name for your computer FR-633
RFC 1191, Path MTU Discovery P1R-147
RFC 1195, IP addresses P1R-73
RFC 1247
 authentication P1R-228
 poll interval P1R-262
RFC 1293 WR-193
RFC 1323, TCP timestamp P1R-151
RFC 1334, PPP PAP authentication DR-575
RFC 1356 BR-81, WR-350
 X.25 and ISDN multiprotocol interconnect BR-456,
 WR-344
 X.25 encapsulation WR-292
 X.25 PVC encapsulation WR-362
RFC 1406 WR-131
RFC 1406, degraded minute calculation IR-244
RFC 1407, calculating unavailable seconds IR-243
RFC 1447, predefined SNMP views FR-477
RFC 1490 WR-171
RFC 1516 FR-456
RFC 1531, DHCP P1R-26, P1R-32
RFC 1570, PPP callback DR-805
RFC 1577, classical IP over ATM WR-7
RFC 1661, PPP DR-575
RFC 1717, MLP DR-575
RFC 1757
 RMON alarm group FR-379
 RMON MIB FR-376, FR-380
RFC 1994, PPP CHAP DR-575
RFC 2018, TCP selective acknowledgment P1R-149
RFC 2125, BACP DR-781
RFC 2281, Cisco Hot Standby Router Protocol (HSRP)
 P1R-180
RFC 742, Finger protocol FR-664
RFC 826, ARP P1R-5
RFC 865, Quote of the Day servers FR-323
RFC 868, time servers FR-322

- RFC 877 BR-81
 IP datagram transmission BR-456, WR-346, WR-350
- RFC 887, RLP servers FR-323
- RFC 903, RARP FR-329
- RFC 950, subnet masks FR-322
- RFCs, Cisco-supported (table) FR-753
- RIF
 cache contents, displaying BR-160
 enabling BR-202
 for routed protocols BR-111
 information, enabling collection of BR-111
 ring groups, establishing BR-131
 static information, entering BR-131
- rif command BR-131
- rif timeout command BR-133
- rif validate-age command BR-134
- rif validate-enable command BR-135
- rif validate-enable-age command BR-137
- rif validate-enable-route-cache command BR-138
- ring cadence command VR-123
- ring frequency command VR-125
- ring number command VR-127
- ring-speed command IR-182
- RIP
 IP
 adjust input queue P1R-195
 administrative distance P1R-298, P1R-480
 automatic summarization P1R-192, P1R-292
 default metric values, setting P1R-194, P1R-383
 default network P1R-487
 delay between packets in update P1R-205
 enabling P1R-206
 metric offset P1R-204
 offsets, applying P1R-204
 redistribution P1R-483, P1R-485
 version, global P1R-210
 version, interface basis, receiving P1R-198
 version, interface basis, sending P1R-199
- IP authentication
 accept lifetime P1R-478, P1R-495, P1R-497, P1R-499
 clear text P1R-197
 displaying key information P1R-573
 enabling P1R-196
 key P1R-495
 key chain P1R-497
 key string P1R-499
 MD5 P1R-197
 send lifetime P1R-529
- IPX
 delay field P2R-270
 enabling P2R-365
 updates P2R-334
- XNS
 enabling P3R-359
- update timers P3R-362
updates, advertising P3R-355
updates, receiving P3R-348
- rlogin
 connections to server DR-419, DR-421, DR-422
 description DR-419
 login string DR-415
 rlogin username DR-421
- rlogin command DR-419
- rlogin trusted-localuser-source local command DR-421
- rlogin trusted-remoteuser-source local command DR-422
- rmdir command FR-184
- RMON
 agent status, displaying FR-403
 alarms, enabling FR-378
 enabling FR-382
 event table FR-380
 interface, enabling FR-376
- rmon alarm command FR-378
- rmon command FR-376
- rmon event command FR-380
- rmon queuesize command FR-382
- RNR frames BR-387
- ROA lists BR-82, BR-457, WR-351
- role command
 APPN link station BR-646
 APPN port BR-647
- ROM monitor mode, summary FR-xx
- ROM, booting automatically FR-290
- root bridge, configuring BR-51
- rotary command DR-36
- rotary groups
 and DDR dialer hold queues DR-688
 DDR group leader IR-121
 in-use message FR-146
 services and port numbers (table) DR-36
- rotary line configuration DR-36
- route map, BGP, applying to incoming and outgoing routes P1R-419
- route reflector P1R-365, P1R-366, P1R-420
- route summarization
 automatic P1R-192, P1R-292, P1R-358
 IS-IS addresses P1R-293, P1R-352
 OSPF addresses P1R-233
- route-aggregation command P2R-424
- route-map (ISO CLNS) command P3R-259
- route-map command P1R-525
- router, host name FR-633
- router bgp command P1R-435
- router configuration commands
 bgp bestpath med-confed P1R-362
 neighbor shutdown P1R-423
- router eigrp command P1R-311
- router igrp command P1R-220
- router isis command P1R-343

BR	Bridging and IBM Networking	P1R	Network Protocols, Part 1	SR	Security
DR	Dial Solutions	P2R	Network Protocols, Part 2	VR	Voice, Video, and Home Applications
FR	Configuration Fundamentals	P3R	Network Protocols, Part 3	WR	Wide-Area Networking
IR	Cisco IOS Interface	QR	Quality of Service Solutions	XR	Cisco IOS Switching Services

router iso-igrp command P3R-260
 router odr command P1R-188
 router ospf command P1R-271
 router rip command P1R-206
 router, parallel P1R-15
 router-additional-resistance command BR-648
 router-idf command P1R-270
 routes
 poisoned P2R-158, P2R-160
 static
 Apollo Domain P3R-7
 IPX P2R-349
 VINES P3R-80
 XNS P3R-356
 routing
 and bridging, concurrent BR-16
 and bridging, integrated BR-47
 manual configuration on asynchronous interfaces DR-9
 routing cache
 ISO CLNS
 clearing P3R-184
 displaying entries P3R-269
 reinitializing P3R-184
 routing information, ISO CLNS P3R-257
 routing table
 Apollo Domain
 entries, adding P3R-7
 updating P3R-9
 AppleTalk
 entries, displaying P2R-156
 timers, changing P2R-95
 update timers, setting P2R-95
 DECnet P3R-142
 default network in IP P1R-487
 IPX P2R-227, P2R-285
 VINES
 deleting P3R-23
 displaying P3R-38
 static routes, creating P3R-80
 XNS P3R-352
 routing translate option, mapping to virtual interface
 template command DR-515, DR-536
 RPF P1R-665, P1R-683
 RR frames BR-379, BR-387
 RSA encrypted nonces, requirements SR-391
 RSA keys
 deleting SR-376
 (example) SR-376
 general purpose keys SR-374, SR-401
 (example) SR-375
 generating SR-373, SR-401
 (example) SR-374, SR-375, SR-402
 sample times required SR-374, SR-402
 IP address, specifying SR-388
 manually specifying SR-403
 (modulus length SR-374, SR-402)
 pairs SR-373, SR-401
 public key record SR-362
 remote peer, specifying SR-408
 special usage keys SR-373, SR-401
 (example) SR-374
 generating SR-401
 specifying SR-389
 specifying SR-389, SR-412
 (example) SR-388, SR-390
 viewing SR-417, SR-418
 (example) SR-417, SR-418
 RSA signatures, requirements SR-391
 rsh command FR-341
 rsh server
 (access, granting FR-332)
 (commands, executing FR-337, FR-341)
 (DNS, enabling security FR-330)
 RSRB
 (combining transport methods BR-452)
 FRAS, DLCI number BR-537
 (size of the backup queue, modifying BR-234)
 transport methods, combining BR-229
 rsrb remote-peer lsap-output-list command BR-215
 rsrb remote-peer netbios-output-list command BR-216
 rsrb-virtual-station command BR-649
 RSVP
 (configuration statistics (table) QR-63)
 (enabling for IP QR-13)
 (fair queueing QR-9)
 (filters information, displaying QR-63)
 (interface information, displaying QR-65)
 (neighbor reservation, allowing QR-15)
 (neighbors, displaying QR-66)
 (receiver information (table) QR-69)
 (request information, displaying QR-67)
 (reservation statistics (table) QR-66, QR-67)
 (sender information (table) QR-71)
 (UDP-encapsulated multicasts, generating QR-21)
 RSVP PATH, message reception, simulating QR-19
 RSVP RESV, message reception, simulating QR-17
 RTMP
 (routes, advertising P2R-81)
 routing table update timers, changing P2R-95
 routing updates, disabling transmission P2R-89
 stub mode, enabling P2R-87
 touring updates, strict checking P2R-94
 RTP header compression
 (and TCP header compression, enabling P1R-584)
 (connections supported P1R-644)
 (enabling P1R-645)
 (Frame Relay encapsulation, using P1R-585)
 (Frame Relay statistics, displaying P1R-654)

- Frame Relay, enabling for maps P1R-583
statistics
 clearing P1R-581
 displaying P1R-684
 Frame Relay P1R-654
- RTR**
application information, displaying FR-427
configuration information, displaying FR-432
history
 collection FR-352
 displaying FR-435
 filters FR-362
 lives kept FR-369
 samples kept FR-394
operational state, displaying FR-437
probe
 configuring FR-383
 frequency FR-364
 owner FR-371
 scheduling FR-392
 type FR-486
reaction trigger
 configuring FR-388, FR-390
 displaying FR-439
request data size FR-374
resetting FR-391
response data size FR-375
statistics
 displaying FR-429, FR-433, FR-480
 hops kept FR-366
 hours kept FR-368
 kept FR-360
 paths kept FR-372
tags FR-482
threshold FR-483
timeout FR-484
verify data FR-487
- rtr command FR-383
rtr reaction-configuration command FR-386
rtr reaction-trigger command FR-390
rtr reset command FR-391
rtr schedule command FR-392
running configuration file
 backing up on the server FR-254
 copying to the server (example) FR-260
rxboot ROM, streamlined setup facility FR-37
rxspeed command DR-180
- S**
- safe-store-cycle command BR-650
safe-store-host command BR-651
safe-store-interval command BR-652
samples command FR-705
- samples-of-history-kept command FR-394
SAP
access list, named P2R-248
broadcast, sending P2R-398
definition P2R-205
delay between packets
 setting on a single interface P2R-338
 setting on all interfaces P2R-263
filters, creating P2R-216, P2R-287, P2R-340
maximum queue length, setting P2R-376
table, adding static entries P2R-366
triggered updates, setting delay between packets on a
 single interface P2R-388
update interval, setting P2R-396
updates P2R-370
- sap-priority command BR-218
sap-priority-list command BR-219
SAs
 lifetimes, configuring SR-410
 parameters SR-399
 viewing SR-415
 (example) SR-415
saving configuration changes FR-xxi
scheduler allocate command FR-660
scheduler-interval command FR-661
SCI cards, loopback on IR-144
scramble command IR-183
scrambling, DS3, (example) WR-10
screen
length
 changing for session FR-88
 setting for line FR-63
output, pausing FR-61
width
 changing for session FR-108
 setting for line FR-109
script activation DR-38
script arap-callback command DR-815
script callback command DR-817
script connection DR-40
script dialer command DR-672
 regular expressions DR-902
script reset command DR-42
script startup command DR-44
SDLC
 APPN
 configuring BR-654
 partner node, specifying BR-653
 broadcast, enabling BR-340
 configuring routing device
 as a primary SDLC station BR-371
 as a secondary SDLC station BR-373
 local acknowledgment for STUN, enabling BR-354,
 BR-361
 maximum incoming frame size, setting BR-401

- multidrop configuration BR-412
secondary descriptions (table) IR-266
secondary stations, assigning to serial link BR-393
T1 timer BR-418
sdlc address command BR-393
sdlc address FF ack-mode command BR-395
sdlc dlsw command BR-287
sdlc dte-timeout command BR-396
sdlc frmr-disable command BR-397
sdlc holdq command BR-398
sdlc k command BR-399
sdlc n2 command BR-402
sdlc partner command BR-403
sdlc poll-limit-value command BR-405
sdlc poll-wait-timeout command BR-409
sdlc qlle-prtnr command BR-411
sdlc role command BR-412
sdlc saps command BR-414
sdlc simultaneous command BR-416
sdlc slow-poll command BR-417
sdlc t1 command BR-418
sdlc test serial command BR-419
sdlc virtual multidrop command BR-340
sdlc vmac command BR-421
sdlc xid command BR-422
sdlc xid-pause-timer command BR-423
sdlc-dest-address command BR-653
sdlc-sec-addr command BR-654
SDLLC
 device-initiated connections, enabling BR-437
 enabling use of BR-443
 local acknowledgment, enabling BR-454
 on serial interfaces, configuring BR-443
sdllc partner command BR-437
sdllc ring-largest-frame command BR-439
sdllc sap command BR-441
sdllc sdlc-largest-frame command BR-442
sdllc traddr command BR-443
sdllc xid command BR-445
SDP, system controller FR-721
secondary address, IP, using P1R-14
secondary networks, IPX P2R-304
secondary SDLC stations
 assigning to serial link BR-393
 configuring routing device as a BR-373
security command, APPN
 link station BR-655
 port BR-656
selective acknowledgment, TCP P1R-149
send command FR-143
send-lifetime command P1R-529
serial device, location, setting FR-64
serial interfaces
 clearing IR-40
 DTR signal pulsing DR-251, IR-181
LAT compression BR-32
loopback IR-144
low-speed IR-168
low-speed, Cisco 2520 through 2523 routers DR-35
media type IR-161
monitoring synchronous IR-340
server connections
 LAT DR-382–DR-383
 PPP DR-635–DR-636
 rlogin DR-419, DR-421–DR-459
 SLIP DR-640–DR-641
 Telnet DR-457–DR-460
 TN3270 DR-468
 XRemote DR-487, DR-491, DR-495
service advertisement timer DR-407
service announcements, reenabling LAT DR-397
service compress-config command FR-209
service config command FR-204, FR-211
service decimal-tty command FR-662
service exec-callback command DR-818
service exec-wait command FR-663
service finger command FR-664
service hide-telnet-address command FR-665
service linenumber command FR-144
service nagle command FR-666
service old-slip-prompts command DR-638
service pad command DR-561, WR-303
service pad from-xot command WR-305
service pad to-xot command WR-306
service password-encryption command SR-432
 security level, (caution) SR-432
service prompt config command FR-667
service pt-vty-logging command DR-498
service slave-log command FR-533
service tcp-keepalives-in command FR-534
service tcp-keepalives-out command FR-535
service tcp-small-servers command FR-668
service telnet-zero-idle command FR-669
service timestamps command FR-536
service types
 AppleTalk (table) P2R-65
 IPX (table) P2R-217
service udp-small-servers command FR-670
service-any command BR-657
service-module 56k clock rate command IR-184
service-module 56k clock source command IR-186
service-module 56k data-coding command IR-187
service-module 56k network-type command IR-188
service-module 56k remote-loopback command IR-190
service-module t1 clock source command IR-192
service-module t1 data-coding command IR-193
service-module t1 framing command IR-195
service-module t1 lbo command IR-196
service-module t1 linecode command IR-197
service-module t1 remote-alarm-enable command IR-198

- service-module t1 remote-loopback command IR-199
service-module t1 timeslots command IR-201
services, tailoring your network FR-534, FR-535
serving-nn command BR-658
session protocol command VR-44
session target command VR-45
session-limit command DR-181
sessions, limiting number per line DR-181
session-timeout command DR-182
set algorithm 40-bit-des command SR-273
set algorithm des command SR-275
set as-path command P1R-436
set automatic-tag command P1R-531
set card-message command FR-238
set community command P1R-440
set dampening command P1R-442
set default interface command P1R-533
set interface command P1R-535
set ip default next-hop command P1R-537
set ip next-hop (BGP) command P1R-444
set ip next-hop command P1R-539
set ip precedence command P1R-541, QR-52
set ip qos-group command QR-54
set level (ISO CLNS) command P3R-261
set level command P1R-543
set local-preference command P1R-545
set metric command P3R-263
set metric command (IP Enhanced IGRP) P1R-221, P1R-312
set metric command (protocol-independent) P1R-547
set metric-type (ISO CLNS) command P3R-265
set metric-type command P1R-549
set metric-type internal command P1R-446
set next-hop command P1R-551
set origin command P1R-448, P1R-553
set peer (CET) command SR-277
set peer (IPSec) command SR-335
set peer command SR-335
set pfs command SR-337
set security-association level per-host command SR-339
set security-association lifetime command SR-341
set session-key command SR-344
set tag (ISO CLNS) command P3R-266
set tag command P1R-553
set transform-set command SR-347
set weight command P1R-450
setenv command DR-488, DR-490
set-overload-bit command P1R-345
setup command facility FR-36
asynchronous interfaces
 configuration (examples) FR-39–FR-40
 default client IP address (examples) FR-39–FR-40
configuration, (example) FR-38–FR-42
configuration command script, (example) FR-40
configuration file, saving FR-37, FR-42
entering FR-36
entering after erasing configuration FR-37
global parameters, configuration (example) FR-38
interface parameters, configuration (example) FR-38–FR-42
interface summary, viewing FR-38
prerequisite knowledge FR-36
sample configuration FR-38–FR-42
System Configuration Dialog FR-36
 (example) FR-38
 returning to privileged EXEC prompt FR-37
terminating the configuration FR-38
sgbp group command DR-768
sgbp member command DR-769
sgbp seed-bid command DR-771
shelf
 attributes FR-715, FR-734, FR-735
 discovered FR-709
 managed polling FR-719
 starting a session on FR-694
 type selection FR-707
shelf-type command FR-707
shortcut-frame-count command XR-199
shortcut-frame-time command XR-200
show FR-180
show (Flash file system) command FR-269
show access-expression command BR-139
show access-lists command P1R-159
show access-lists rate-limit command QR-55
show accounting command SR-79
show adjacency command XR-38
show aliases command FR-671
show alps ascu command BR-930
show alps circuits command BR-931
show alps peers command BR-933
show apollo arp command P3R-11
show apollo interface command BR-409, P3R-12
show apollo route command P3R-14
show apollo traffic command P3R-16
show appletalk access-lists command P2R-110
show appletalk adjacent-routes command P2R-112
show appletalk arp command P2R-114
show appletalk aarp events command P2R-116
show appletalk aarp topology command P2R-117
show appletalk cache command P2R-119
show appletalk domain command P2R-121
show appletalk eigrp interfaces command P2R-123
show appletalk eigrp neighbors command P2R-125
show appletalk eigrp topology command P2R-127
show appletalk globals command P2R-132
show appletalk interface command P2R-135
show appletalk macip-clients command P2R-139
show appletalk macip-servers command P2R-140
show appletalk macip-traffic command P2R-144
show appletalk name-cache command P2R-146

show appletalk nbp command P2R-148
show appletalk neighbors command P2R-125, P2R-150
show appletalk remap command P2R-153
show appletalk route command P2R-156
show appletalk sockets command P2R-162
show appletalk static command P2R-164
show appletalk traffic command P2R-166
show appletalk zone command P2R-173
show appn class-of-service command BR-659
show appn connection-network command BR-662
show appn directory command BR-664
show appn dlur-lu command BR-666
show appn dlur-pu command BR-668
show appn dlus command BR-670
show appn intermediate-session command BR-672
show appn link-station command BR-674
show appn mode command BR-677
show appn node command BR-678
show appn port command BR-680
show appn rtp command BR-683
show appn session command BR-685
show appn topology command BR-687
show aps command IR-202
show arap command DR-658
show arp command P1R-75
show async status command DR-46
show async-bootp command FR-343
show atm arp-server command WR-94
show atm class-links command WR-96
show atm interface atm command WR-97
show atm map command WR-100
show atm pvc command WR-103
show atm svc command WR-109
show atm traffic command WR-115
show atm vc command WR-117
show atm vp command WR-124
show bootflash command FR-270
show bootvar command FR-305
show bridge circuit group command BR-65
show bridge command BR-62
show bridge group command BR-67, IR-204
show bridge multicast command BR-68
show bridge vlan command BR-70
show bsc command BR-341
show bstun command BR-346
show buffers command FR-621
show c2600 command FR-538
show c7200 command FR-542, VR-244
show cable burst-profile command VR-219
show cable modem command VR-221
show cable modulation-profile command VR-223
show cable privacy command VR-225
show cable qos command VR-227
show cable spectrum group command VR-228
show calendar command FR-676

show call active voice command VR-48
show call history voice command VR-52
show cdp command FR-396
show cdp entry command FR-397
show cdp interface command FR-399
show cdp neighbors command FR-400
show cdp traffic command FR-402
show cef command XR-40
show cef interface command XR-42
show cef linecard command XR-44
show ces circuit command WR-126
show ces interface cbr command WR-129
show ces status command WR-132
show clns cache command P3R-269
show clns command P3R-267
show clns es-neighbors command P3R-272
show clns filter-expr command P3R-274
show clns filter-set command P3R-275
show clns interface command P3R-276
show clns is-neighbors command P3R-278
show clns neighbors command P3R-280
show clns protocol command P3R-282
show clns route command P3R-285
show clns traffic command P3R-287
show clock command FR-677
show cmns command WR-307
show compress command IR-205
show context command FR-547
show context command (for Cisco 2600 Series routers)
FR-545
show controllers (GRP image) command FR-549
show controllers (line card image) command FR-552
show controllers bri command DR-218
show controllers cable command VR-230
show controllers call-counters command DR-320, DR-322,
DR-326, DR-328
show controllers cbus command IR-207
Cisco 7000 IR-210
Cisco 7500 IR-208
show controllers channel command BR-796
show controllers e1 command DR-317
show controllers ethernet command IR-213
show controllers fastethernet command IR-216
show controllers fddi command IR-220
show controllers lex command IR-221
show controllers logging command FR-558
show controllers mci command IR-223
show controllers pcbus command IR-225
show controllers pos command IR-226
show controllers serial command DR-324, IR-230
show controllers t1 command DR-324, IR-234
show controllers t3 command IR-237
show controllers tech-support command FR-559
show controllers token (IBM) BR-140
show controllers token command IR-245

show controllers token (ibm) command BR-140
show controllers vg-anylan command IR-251
show crypto algorithms command SR-278
show crypto ca certificates command SR-385
show crypto card command SR-279
show crypto cisco algorithms command SR-281
show crypto cisco connections command SR-282
show crypto cisco key-timeout command SR-284
show crypto cisco pregen-dh-pairs command SR-285
show crypto connections command SR-287
show crypto dynamic-map command SR-354
show crypto engine brief command SR-288
show crypto engine configuration command SR-290
show crypto engine connections active command SR-292
show crypto engine connections dropped-packets command SR-294
show crypto ipsec sa command SR-349, SR-352
show crypto ipsec security-association lifetime command SR-352
show crypto ipsec transform-set command SR-353
show crypto isakmp policy command SR-414
show crypto isakmp sa command SR-415
show crypto key mypubkey dss command SR-295
show crypto key mypubkey rsa command SR-417
show crypto key pubkey-chain dss command SR-296
show crypto key pubkey-chain rsa command SR-418
show crypto key-timeout command SR-298
show crypto map (CET) command SR-299
show crypto map (IPSec) command SR-355
show crypto mypubkey command SR-302
show crypto pregen-dh-pairs command SR-303
show crypto pubkey command SR-304
show crypto pubkey name command SR-305
show crypto pubkey serial command SR-306
show dbconn connection command BR-715
show dbconn license command BR-717
show dbconn ports command BR-718
show dbconn server command BR-719
show debugging command FR-561
show decnet accounting command P3R-168
show decnet command P3R-166
show decnet interface command P3R-170
show decnet map command P3R-174
show decnet neighbors command P3R-175
show decnet route command P3R-176
show decnet static command P3R-178
show decnet traffic command P3R-180
show dhcp command DR-608
show diag command FR-562, IR-253, VR-242
show diagbus command IR-255
show dialer command DR-222, DR-709, DR-733
 display for active connection DR-223, DR-712, DR-736
 display for DTR dialing DR-711, DR-735
show dialer interface async command DR-711, DR-735

show dialer interface bri command DR-222, DR-709, DR-733
show dialer map command DR-798
show dial-peer voice command VR-55
show dialplan incall number command VR-58
show dialplan number command VR-59
show dlsw capabilities command BR-288
show dlsw circuits command BR-290
show dlsw fastcache command BR-292
show dlsw peers command BR-293
show dlsw reachability command BR-296
show dlsw statistics command BR-299
show dnsix command SR-466
show drip command BR-203
show dspu command BR-512
show dxi map command WR-133
show dxi pvc command WR-134
show entry command DR-424
show environment command FR-564
show extended channel backup command BR-797
show extended channel cmpc command BR-798
show extended channel connection-map llc2 command BR-800
show extended channel csna command BR-801
show extended channel icmp-stack command BR-805
show extended channel ip-stack command BR-807
show extended channel lan command BR-810
show extended channel llc2 command BR-812
show extended channel max-llc2-sessions command BR-821
show extended channel packing names command BR-823
show extended channel packing stats command BR-825
show extended channel statistics command BR-827
show extended channel subchannel command BR-831
show extended channel tcp-connections command BR-837
show extended channel tcp-stack command BR-840
show extended channel tg command BR-843
show extended channel tn3270-serve pu lu command BR-867
show extended channel tn3270-server client-ip-address command BR-851
show extended channel tn3270-server command BR-848
show extended channel tn3270-server dlur command BR-855
show extended channel tn3270-server dlurlink command BR-859
show extended channel tn3270-server nailed-ip command BR-861
show extended channel tn3270-server pu command BR-863
show extended channel udp-listeners command BR-871
show extended channel udp-stack command BR-872
show file descriptors command FR-186
show file information command FR-187
show file systems command FR-188
show flash command FR-270

show flash summary command FR-277
show flh-log command FR-240
show frame-relay ip rtp header-compression command P1R-654
show frame-relay ip tcp header-compression command WR-242
show frame-relay lapf command WR-244
show frame-relay lmi command WR-246
show frame-relay map command WR-248
show frame-relay pvc command WR-250
show frame-relay qos-autosense command WR-254
show frame-relay route command WR-256
show frame-relay svc maplist command WR-257
show frame-relay traffic command WR-260
show fras command BR-550
show fras map command BR-554
show fras-host command BR-552
show gsr command FR-578
show gt64010 command FR-579
show history command FR-26
show hosts command P1R-77
show hub command IR-257
show interface cable command VR-234
show interface cable-signal quality command VR-239
show interface cbr command WR-136
show interface stats command XR-115
show interfaces
 configuring interfaces IR-275
 custom queuing, output display IR-263
 disabled IR-268
 displaying configuration statistics IR-262
 displaying SDLC information IR-341
show interfaces accounting command IR-264
show interfaces atm command WR-139
show interfaces bri command DR-225
show interfaces cable sid command VR-240
show interfaces channel command BR-874
show interfaces command DR-198, DR-860, IR-261
 channelized E1 DR-290
 channelized T1 DR-290
 clearing counters IR-35
 configuring interfaces WR-76
 DDR interface DR-712, DR-736
show interfaces crb command BR-71
show interfaces ethernet accounting command IR-269
show interfaces ethernet command IR-269
show interfaces fair-queue command QR-57
show interfaces fastethernet command IR-275
show interfaces fddi accounting command IR-285
show interfaces fddi command IR-285
show interfaces hssi command IR-294
show interfaces ip-brief command IR-300
show interfaces irb command BR-73
show interfaces lex command IR-301
show interfaces loopback command IR-307

show interfaces port-channel command IR-311
show interfaces pos command IR-316
show interfaces random-detect command QR-59
show interfaces rate-limit command QR-61
show interfaces serial accounting command IR-320
show interfaces serial command IR-320
show interfaces tokenring command IR-346
 show interfaces tokenring (ibm) command BR-145
show interfaces tunnel command IR-352
show interfaces vg-anylan command IR-356
show interfaces virtual-access command DR-500
show ip access-list command P1R-161
show ip accounting command P1R-162
show ip aliases command P1R-79
show ip arp command P1R-80
show ip bgp cidr-only command P1R-455
show ip bgp command P1R-452
show ip bgp community command P1R-457
show ip bgp community-list command P1R-459
show ip bgp dampened-paths command P1R-461
show ip bgp filter-list command P1R-462
show ip bgp flap-statistics command P1R-464
show ip bgp inconsistent-as command P1R-466
show ip bgp neighbors command P1R-467
show ip bgp paths command P1R-472
show ip bgp peer-group command P1R-473
show ip bgp regexp command P1R-474
show ip bgp summary command P1R-475
show ip cache command XR-17
show ip cache flow command XR-20
show ip cef command XR-46
show ip drp command P1R-165
show ip dvmrp route command P1R-656
show ip eigrp interfaces command P1R-314
show ip eigrp neighbors command P1R-316
show ip eigrp topology command P1R-318
show ip eigrp traffic command P1R-320
show ip igmp groups command P1R-657
show ip igmp interface command P1R-659
show ip inspect command SR-200
show ip interface command FR-156, IR-360, P1R-82
show ip irdp command P1R-85
show ip local policy command P1R-556
show ip local pool command DR-610
show ip masks command P1R-86
show ip mcache command P1R-662, XR-116
show ip mds forwarding command XR-118
show ip mds interface command XR-120
show ip mds stats command XR-121
show ip mds summary command XR-123
show ip mpacket command P1R-663
show ip mroute command P1R-665
show ip nat statistics command P1R-87
show ip nat translations command P1R-89
show ip nhrp command P1R-91

show ip nhrp traffic command P1R-93
show ip ospf border-routers command P1R-274
show ip ospf command P1R-272
show ip ospf database command P1R-275
show ip ospf interface command P1R-284
show ip ospf neighbor command P1R-286
show ip ospf request-list command P1R-288
show ip ospf retransmission-list command P1R-289
show ip ospf summary-addresst command P1R-290
show ip ospf virtual-links command P1R-291
show ip pim bsr command P1R-671
show ip pim interface command P1R-673
show ip pim interface count command XR-125
show ip pim neighbor command P1R-675
show ip pim rp command P1R-677
show ip pim rp-hash command P1R-679
show ip pim vc command P1R-681
show ip policy command P1R-558
show ip protocols command P1R-560
show ip redirects command P1R-166
show ip route command P1R-565
show ip route summary command P1R-571
show ip route supernets-only command P1R-572
show ip rpf command P1R-683
show ip rsvp installed command QR-63
show ip rsvp interface command QR-65
show ip rsvp neighbor command QR-66
show ip rsvp request command QR-67
show ip rsvp reservation command QR-69
show ip rsvp sender command QR-71
show ip rtp header-compression command P1R-684
show ip sdr command P1R-686
show ip tcp header-compression command P1R-167
show ip traffic command P1R-169
show ip traffic-engineering command XR-50
show ip traffic-engineering configuration command XR-53
show ip traffic-engineering routes command XR-55
show ip trigger-authentication command SR-53
show ip wccp command FR-159
show ip wccp web-caches command FR-161
show ipx access-list command P2R-426
show ipx accounting command P2R-427
show ipx cache command P2R-429
show ipx eigrp interfaces command P2R-430
show ipx eigrp neighbors command P2R-432
show ipx eigrp topology command P2R-434
show ipx interface command P2R-439
show ipx nasi connections command DR-755
show ipx nhrp command P2R-444
show ipx nhrp traffic command P2R-446
show ipx nlsp database command P2R-448
show ipx nlsp neighbors command P2R-451
show ipx nlsp spf-log command P2R-453
show ipx route command P2R-455
show ipx servers command P2R-460

show ipx spx-protocol command DR-757
show ipx spx-spoof command P2R-462
show ipx traffic command P2R-464
show isdn active command
 field descriptions (table) DR-230, DR-332, DR-354
 output display DR-229, DR-331, DR-353
show isdn command DR-229, DR-331, DR-353
show isdn history command
 field descriptions (table) DR-230, DR-332, DR-354
 output display DR-230, DR-332, DR-354
show isdn nfas group command DR-355
 field descriptions (table) DR-356
show isdn service command DR-358
 field descriptions (table) DR-333, DR-358
 output display DR-333
show isdn status command DR-349
 field descriptions (table) DR-335
 output display DR-333
show isis database command P1R-346
show isis routes command P3R-290
show isis spf-log command P1R-350
show kerberos creds command SR-138
show key chain command P1R-573
show keymap command DR-425
show lane bus command XR-168
show lane client command XR-170
show lane command XR-164
show lane config command XR-173
show lane database command XR-176
show lane default-atm-addresses command XR-178
show lane le-arp command XR-180
show lane server command XR-182
show lat advertised command DR-426
show lat groups command DR-427
show lat nodes command DR-428
show lat services command DR-430
show lat sessions command DR-431
show lat traffic command DR-435
show line command DR-48
show llc2 command BR-424
show lnm bridge command BR-149
show lnm config command BR-150
show lnm interface command BR-152
show lnm ring command BR-155
show lnm station command BR-156, BR-158
show local-ack command BR-220, BR-449
show logging command FR-510, FR-514, FR-526, FR-581
show memory command FR-585
show microcode command FR-241
show mls rp command XR-105
show mls rp vtp-domain command XR-107
show modem at-mode command DR-125
show modem call-stats command DR-126
show modem command DR-117
show modem configuration command DR-131

show modem connect-speeds command DR-135
show modem cookie command DR-139
show modem csm command DR-140
show modem log command DR-142
show modem mapping command DR-149
show modem operational-status command DR-156
show modem summary command DR-159
show modem test command DR-160
show modem version command DR-161
show modemcap command DR-51, DR-112
show modem-pool command DR-166
show mpoa client cache command XR-203
show mpoa client command XR-201
show mpoa client statistics command XR-205
show mpoa default-atm-addresses command XR-206
show mpoa server cache command XR-210
show mpoa server name command XR-208
show mpoa server statistics command XR-212
show nbf cache command DR-54
show nbf sessions command DR-55
show ncia circuits command BR-732
show ncia client command BR-734
show ncia server command BR-736
show netbios-cache command BR-158
show network-clocks command WR-144
show node command DR-437
show ntp associations command FR-678
show ntp status command FR-682
show num-exp command VR-62
show pas eswitch address command IR-363
show pci command FR-589
show pci hardware command FR-591
show ppp bap command DR-800
show ppp multilink command DR-612, DR-771, DR-802
show ppp queues command SR-54
show privilege command SR-434
show processes command FR-593
show processes memory command FR-596
show protocols command FR-598
show qlc command BR-447
show queue command QR-72
show queueing command QR-74
show reload command FR-308
show rif command BR-160, IR-364
show rmon alarms command FR-405
show rmon capture command FR-407
show rmon command FR-403
show rmon events command FR-410
show rmon filter command FR-412
show rmon history command FR-415
show rmon hosts command FR-418
show rmon matrix command FR-420
show rmon statistics command FR-422
show rmon topn command FR-425
show route-map command P1R-574, P3R-291

show rtr application command FR-427
show rtr collection-statistics command FR-429
show rtr configuration command FR-431
show rtr distribution-statistics command FR-433
show rtr history command FR-435
show rtr operational-state command FR-437
show rtr reaction-trigger command FR-439
show rtr totals-statistics command FR-440
show running-config command FR-214
show service command DR-440
show sgbp command DR-773
show sgbp queries command DR-772, DR-774
show smds addresses command WR-265
show smds map command WR-266
show smds traffic command WR-267
show smrp forward command P2R-175
show smrp globals command P2R-177
show smrp group command P2R-179
show smrp mcache command P2R-181
show smrp neighbor command P2R-183
show smrp port command P2R-185
show smrp route command P2R-187
show smrp traffic command P2R-189
show sna command BR-514
show snapshot command DR-828
show snmp command FR-442
show snmp pending command FR-446
show snmp sessions command FR-447
show sntp command FR-684, IR-371
show source-bridge command BR-162
show span command BR-165, BR-169, BR-192
show sscop command WR-146
show sse summary command P1R-172, P2R-468
show stacks command FR-599
show standby command P1R-172
show stun command BR-348
show subsys command FR-601
show syscon discover command FR-709
show syscon mibpoll command FR-712
show syscon monitor command FR-715
show syscon perfdata command FR-717
show syscon sdp command FR-719, FR-721
show syslog-server command FR-723
show tag-switching atm-tdp bindings command XR-56
show tag-switching atm-tdp capability command XR-58
show tag-switching forwarding-table command XR-62
show tag-switching interfaces command XR-65
show tag-switching tdp bindings command XR-67
show tag-switching tdp discovery command XR-70
show tag-switching tdp neighbors XR-71
show tag-switching tdp parameters command XR-73
show tag-switching tsp-tunnels command XR-75
show tarp blacklisted-adjacencies command P3R-295
show tarp command P3R-293
show tarp host command P3R-296

show tarp interface command P3R-297
show tarp ldb command P3R-298
show tarp map command P3R-299
show tarp static-adjacencies command P3R-300
show tarp tid-cache command P3R-301
show tarp traffic command P3R-303
show tcp brief command DR-448, FR-608
show tcp command DR-443, FR-603
show tcp intercept connections command SR-171
show tcp intercept statistics command SR-173
show tcp statistics command P1R-175
show tdm connections command FR-609
show tdm connections motherboard command
 channel output, interpreting FR-609
show tdm data command FR-610
show tech-support command FR-611
show tech-support rsvp command QR-76
show terminal command DR-183
show traffic-shape command QR-77
show traffic-shape statistics command QR-79
show translate command DR-504
show ttycap command DR-451
show users command DR-57, DR-506
show version command FR-309
show vines access command P3R-25
show vines cache command P3R-26
show vines host command P3R-28
show vines interface command P3R-29
show vines ipc command P3R-32
show vines neighbor command P3R-34
show vines route command P3R-38
show vines service command P3R-42
show vines traffic command P3R-45
show vlans command BR-78
show voice call command VR-63
show voice dsp command VR-65
show voice port command VR-67
show vpdn command DR-838
show vpdn history failure command DR-840
show whoami command FR-73
show x25 interface command WR-309
show x25 map command WR-310
show x25 pad command DR-563
show x25 remote-red command WR-312
show x25 route command WR-313
show x25 services command WR-314
show x25 vc command WR-315
show x25 xot command WR-322
show xns cache command P3R-335
show xns interface command P3R-336
show xns route command P3R-338
show xns traffic command P3R-340
show xremote command DR-452
show xremote line command DR-455
shows sessions command DR-442

shutdown, enabling for SNMP FR-472
shutdown (controller) command IR-373
shutdown (dial-peer configuration) command VR-74
shutdown (DS 1 link) command VR-75
shutdown (hub) command IR-374
shutdown (interface) command IR-375
shutdown (voice-port configuration) command VR-129
shutdown command BR-878
signal command VR-130
signals
 Break DR-896
 pulsing DTR DR-251, IR-181
SIG-TS-001/1991 standard WR-270
single DDR telephone number, specifying DR-679
single DDR telephone number, specifying DR-705, DR-729
single-character patterns
 anchoring DR-905
 creating DR-902
 description DR-902
 using multipliers DR-904
slave auto-sync config command FR-315
slave default-slot command FR-316
slave image command FR-317
slave reload command FR-318
slave sync config command FR-319
slave terminal command FR-320
SLIP
 connections to server DR-640–DR-641
 session, automatic startup DR-620
slip command DR-640
SMDS
 address resolution (ARP) WR-274
 address specification WR-269
 addresses
 bridging's effect on WR-269
 broadcast WR-274, WR-276
 multicast WR-274, WR-276
 AppleTalk on WR-274
 ARP WR-272
 assigned address display WR-265, WR-266
 ATM WR-39
 bridging WR-277
 broadcast ARP messages WR-276
 DECnet on WR-274
 disabling split horizon P1R-200, P1R-212
 DXI 3.2 with heartbeat WR-270
 dynamic routing WR-273
 enabling via encapsulation WR-263
 fast switched IPX P2R-352
 general statistics WR-267
 IP address and subnet mask on WR-276
 IP on WR-275
 IPX on WR-275
 ISO CLNS on WR-274
 maximum packet size WR-263

- multiple logical IP subnetworks WR-264, WR-277, WR-279
- protocols supported WR-274
- static routing table
 - configuring WR-281
 - displaying WR-266
 - protocols supported WR-281
- subinterfaces for multiple IP subnetworks WR-264
- VINES on WR-275
- smds address command WR-269
- smds dxi command WR-270
- smds enable-arp command WR-272
- smds glean command WR-273
- smds multicast arp command WR-276
- smds multicast bridge command WR-277
- smds multicast command WR-274
- smds multicast ip command WR-279
- smds static-map command WR-281
- smds-dest-address command BR-690
- SMRP P2R-198
 - fast switching, enabling P2R-196
 - forwarding table P2R-175
 - fields (table) P2R-176
 - global information P2R-177
 - group address P2R-179
 - group table
 - displaying P2R-179
 - field descriptions (table) P2R-180
 - multicast services over AppleTalk, enabling P2R-198
 - neighbor P2R-183
 - neighbor table
 - displaying P2R-184
 - field descriptions (table) P2R-184
 - port table P2R-185
 - displaying P2R-185
 - field descriptions (table) P2R-186
 - routing table
 - displaying P2R-187
 - field descriptions (table) P2R-188
 - traffic table
 - displaying P2R-189
 - field descriptions (table) P2R-191
- smrp mroute-cache protocol appletalk command P2R-196
- smrp protocol appletalk command P2R-198
- smrp routing command P2R-200
- smt-queue-threshold command IR-376
- SNA
 - monitoring BR-514
 - Service Point
 - activating BR-529
 - Ethernet interface, defining BR-524
 - Ethernet interface, enabling BR-517
 - Frame Relay interface, defining BR-518
 - Frame Relay interface, enabling BR-517
 - monitoring BR-514
- QLLC data link
 - defining BR-520
 - enabling BR-515
- RSRB
 - activating BR-528
 - connection BR-524
 - service access point, enabling BR-527
- SDLC data link
 - defining BR-522
 - enabling BR-516
- Token Ring interface
 - defining BR-524
 - enabling BR-517
- virtual data link control connection
 - activating BR-533
 - configuration (example) BR-530
 - service access point, enabling for upstream host BR-532
 - virtual ring, defining BR-530
- traffic prioritization, configuring BR-222
- sna enable-host
 - sna enable-host (FDDI) command BR-517
- sna enable-host command
 - sna enable-host (Ethernet) command BR-517
 - sna enable-host (Frame Relay) command BR-517
 - sna enable-host (QLLC) command BR-515
 - sna enable-host (SDLC) command BR-516
 - sna enable-host (Token Ring) command BR-517
- sna host command
 - sna host (Ethernet) command BR-524
 - sna host (FDDI) command BR-524
 - sna host (Frame Relay) command BR-518
 - sna host (QLLC) command BR-520
 - sna host (RSRB) command BR-524
 - sna host (SDLC) command BR-522
 - sna host (Token Ring) command BR-524
 - sna host (VDLC) command BR-524
- sna rsrc command BR-526
- sna rsrc enable-host command BR-527
- sna rsrc start command BR-528
- sna start command BR-529
- sna vdlc command BR-530
- sna vdlc enable-host command BR-532
- sna vdlc start command BR-533
- SNAP packet encapsulation
 - assigning access list to filter
 - on input BR-177
 - on output BR-183
 - filtering
 - frames on output BR-183
 - on input BR-31
 - filtering on output BR-39
- snapshot client command DR-830
- snapshot routing DR-825–DR-832
- dialer map, defining for DDR DR-827

- quiet period, ending DR-826
when to use DR-825
snapshot server command DR-832
SNMP
 configuration parameters, displaying FR-581
 message queue length FR-471
 packet filtering FR-469
 system contact, setting FR-453
 system location, setting FR-465
 system shutdown, enabling FR-472
 trap address violation IR-377
 trap message
 source, setting FR-475
 timeout FR-476
snmp enable peer-trap poor-qov command VR-76
SNMP server
 informs, enabling FR-455
 system location, setting FR-459
 trap operation
 enabling FR-455
 recipient FR-459
snmp trap illegal-address command IR-377
snmp trap link-status command FR-479
snmp-server access-policy command FR-449
snmp-server chassis-id command FR-450
snmp-server community command FR-451
snmp-server contact command FR-453
snmp-server context command FR-454
snmp-server enable command FR-455
snmp-server enable trap command FR-514
snmp-server host command FR-459
snmp-server informs command FR-463
snmp-server location command FR-465
snmp-server manager command FR-466
snmp-server manager session-timeout command FR-467
snmp-server packet-size command FR-469
snmp-server party FR-470
snmp-server party command FR-470
snmp-server queue-length command FR-471
snmp-server system-shutdown command FR-472
snmp-server tftp-server-list command FR-473
snmp-server trap-authentication command FR-474
snmp-server trap-source command FR-475
snmp-server trap-timeout command FR-476
snmp-server view command FR-477
SNPA
 cluster alias P3R-199
 NSAP, mapping P3R-206, P3R-214
snntp broadcast client command FR-686
snntp server command FR-688
socket numbers (table) P2R-208
soft reconfiguration P1R-424
software compression IR-58, WR-211, WR-221
 configuring DR-240
 displaying IR-205
PPP, configuring DR-576
software configuration boot register FR-295, FR-297
software flow control
 changing for session FR-85
 changing start character FR-97
 configuring for a line DR-15
SONET PLIM, ATM
 (example) WR-40
 configuring WR-40
source-address command IR-379
source-bridge command BR-166
source-bridge connection-timeout command BR-168
source-bridge cos-enable command BR-222
source-bridge enable-80d5 command BR-169
source-bridge explorer-dup-ARE-filter command BR-171
source-bridge explorer-fastswitch command BR-172
source-bridge explorer-maxrate command BR-173
source-bridge explorerq-depth command BR-174
source-bridge fst-peername command BR-223
source-bridge input-address-list command BR-175
source-bridge input-lsap-list command BR-176
source-bridge input-type-list command BR-177
source-bridge keepalive command BR-224
source-bridge largest-frame command BR-225
source-bridge max-hops command BR-178
source-bridge max-in-hops command BR-179
source-bridge max-out-hops command BR-180
source-bridge output-address-list command BR-181
source-bridge output-lsap-list command BR-182
source-bridge output-type-list command BR-183
source-bridge passthrough command BR-226
source-bridge proxy-explorer command BR-184
source-bridge proxy-netbios-only command BR-185
source-bridge qllc-local-ack command BR-451
source-bridge remote-peer frame-relay command (direct encapsulation) BR-228
source-bridge remote-peer fst command BR-230
source-bridge remote-peer interface command BR-452
source-bridge remote-peer tcp command BR-232
source-bridge ring-group command BR-186
source-bridge route-cache cbus command BR-189
source-bridge route-cache command BR-188
source-bridge route-cache sse command BR-191
source-bridge sap-80d5 command BR-192
source-bridge sdlc-local-ack command BR-454
source-bridge spanning command
 source-bridge spanning (automatic) command BR-194
 source-bridge spanning (manual) command BR-195
source-bridge tcp-queue-max command BR-234
source-bridge transparent command BR-196
source-bridge transparent fastswitch command BR-198
source-bridge trcrf-vlan command BR-204
spanning explorer packets, definition BR-195
spanning explorers, enabling BR-194, BR-195
spanning tree

domain
 assigning BR-17
 multiple bridge loops with BR-17
 protocol
 defining type to use BR-52
 disabling BR-42
 special characters
 activation character FR-46, FR-543
 changing for session FR-80
 character width
 changing for session FR-95
 configuring for line FR-74
 defining default FR-51
 disconnect character FR-52
 dispatch character, setting for line FR-53
 escape character
 changing for session FR-83
 setting for line FR-58
 hold character
 changing for session FR-86
 configuring for line FR-61
 special-character-bits command FR-74
 Specifically FR-251
 speed command DR-187, IR-380
 spf-interval command P2R-469
 split horizon
 AppleTalk Enhanced IGRP P2R-52
 IP Enhanced IGRP P1R-305
 IPX Enhanced IGRP P2R-378, P2R-380
 ISO IGRP P3R-236
 VINES P3R-89
 spoofing
 DDR DR-712, DR-736
 IPX P2R-399
 SPX
 enabling P2R-383
 setting the idle time P2R-381
 watchdog packets P2R-381, P2R-383, P2R-399
 SPX
 enable, connections spoofing P2R-462
 spoofing
 enabling P2R-383
 setting the idle time P2R-381
 squeeze command FR-190
 squelch command IR-382
 SR/TLB
 enabling BR-196
 fast-switching mode, disabling BR-198
 SRB
 configuration, displaying BR-162
 connection timeout interval, setting BR-168
 explorer packets, configuring BR-195
 hops, limiting the number of BR-178, BR-179, BR-180
 information about, displaying BR-145

SSCOP
 ATM WR-146
 connection control timer (example) WR-148
 receiver window, (example) WR-152
 retry count (example) WR-150
 transmitter window (example) WR-153
 sscop cc-timer command WR-148
 sscop keepalive-timer command WR-149
 sscop max-cc command WR-150
 sscop poll-timer command WR-151
 sscop receive-window command WR-152
 sscop send-window command WR-153
 SSE fast switching
 SRB BR-191
 transparent bridging BR-44
 SSP, reinitializing BR-93
 stack group
 bid value on system, displaying DR-774
 bidding
 default across stack members DR-771
 offload server DR-771
 overriding offload or default DR-772
 configuration (example) DR-769
 create and name DR-768
 master bundle interface, host DR-771
 member
 assigning DR-768
 host name DR-769
 IP address DR-769
 receiver, first call, master bundle interface host DR-771
 Stacker compression IR-58
 standard access list, IP P1R-108
 named P1R-129
 standard access list, IPX
 named P2R-248
 standard OUI form, specifying BR-94
 standby ip command P1R-178
 standby mac-address command P1R-180
 standby mac-refresh command P1R-182
 standby preempt command P1R-183
 standby priority command P1R-183
 standby timers command P1R-185
 standby track command P1R-187
 standby use-bia command P1R-189
 start character
 changing flow control FR-97
 changing for session FR-97
 configuring for a line DR-59, DR-188
 default DR-15
 start-character command DR-59, DR-188
 start-chat command DR-60
 startup configuration file FR-260
 state-machine command FR-75
 state-tracks-signal command BR-880

static maps, ATM, displaying WR-100
static routes
 Apollo Domain P3R-7
 AppleTalk P2R-90, P2R-92
 CLNS
 interface P3R-221
 redistributing P3R-257
 TARP mapping P3R-312, P3R-323
 configuring P1R-493
 IP
 establishing P1R-493
 redistributing P1R-521
 IPX P2R-349
 SMDS
 configuring WR-281
 displaying WR-266
 VINES P3R-80
 XNS P3R-356
static TEI DR-863
statistics for RTR
 displaying FR-429, FR-433, FR-480
distributions kept FR-360
hops kept FR-366
hours kept FR-368
paths kept FR-372
statistics-distribution-interval command FR-480
stop bits
 changing for session FR-98
 configuring for line FR-77
stop character
 changing flow control FR-99
 changing for session FR-99
 configuring for a line DR-62
 default DR-15
stopbits command FR-77
stop-character command DR-62
streamlined setup facility FR-37
 (example) FR-43
 booting from network server, interface IP parameters,
 configuring FR-43
 configuration register FR-37
 configuration, corrupted startup FR-37
 rxboot ROM FR-37
string
 setting system location FR-459
 SNMP community access, setting FR-451
 system contact, setting FR-453
 system location, setting FR-465
stub IP multicast routing P1R-602
STUN
 connection status, displaying BR-346, BR-348
 frames, forwarding BR-359, BR-360
 interface, configuring BR-329
 placing in a group BR-350
 IP addresses, enabling BR-353
non-SDLC protocol, defining BR-365
peer connection BR-352
stun group command BR-350
stun keepalive-count command BR-352
stun peer-name command BR-353
stun protocol-group command BR-354, BR-356
stun remote-peer-keepalive command BR-358
stun route address interface dlc command BR-359
stun route address interface serial command BR-360
stun route address tcp command BR-361
stun route all interface serial command BR-363
stun route all tcp command BR-364, BR-367
stun schema offset length format command BR-365
stun sdlc-role primary command BR-367
stun sdlc-role secondary command BR-368
subinterface configuration mode, summary FR-xx
subinterfaces
 BRI multipoint, point-to-point DR-860
 configuring IR-117, IR-118, IR-120
 IPX P2R-305
 ISDN BRI DR-198, DR-860
 multipoint, point-to-point DR-198
 NLSP P2R-305
 configuring (example) P2R-306
subnet masks, using ICMP P1R-14
summary address, IP Enhanced IGRP P1R-306
summary-address (IS-IS) command P1R-352
summary-address command P1R-293
supervisory disconnect command VR-132
SVC
 clearing XOT WR-288
 disabling
 (example) WR-37
 description WR-37
svc command WR-154
switching
 autonomous XR-13
 fast XR-13
 flow XR-13
 flow switching XR-11, XR-13
 Frame Relay, specifying static route for WR-229
 IP, controlling the route cache XR-13
 NetFlow XR-2, XR-16
 enabling XR-15
 specifying static route for WR-229
 VIP distributed XR-13
switching feature (example) DR-907
synchronization command P1R-477
synchronization, definition P1R-477
syscon address command FR-725
syscon community command FR-726
syscon monitor command FR-727
syscon monitor traps command FR-729
syscon password command FR-731
syscon poll-group command FR-732

syscon shelf-id command FR-734
syscon source-interface command FR-735
Syslog Disk Logging, syslog server subfiles FR-699, FR-723
syslog history table FR-581
system contact string, setting FR-453
system controller
 configuring FR-725
 data collection FR-701, FR-703, FR-707
 shelf configuration FR-731
 shelf session FR-694
 SNMP community string FR-726
system error messages, redirecting FR-521
system ID messages, controlling MOP DR-424
system image file, copying from server to Flash (example)
 FR-256
system images
 checksum, verifying FR-193
 compressed FR-293
 copying from a server using rcp FR-293
 copying using Xmodem FR-244
 copying using Ymodem FR-244
 default filename FR-292
 invalidated FR-274
system location string, setting FR-465
system shutdown, enabling for SNMP FR-472
system software
 booting FR-290, FR-292
 displaying version of FR-309

T

t1 bert command IR-383
t1 clock source command IR-385
T1 controller, adding descriptive name IR-71
t1 external command IR-386
t1 fdl ansi command IR-388
t1 framing command IR-389
t1 linecode command IR-390
t1 test command IR-392
T1 timer, SDLC BR-418
t1 timeslot command IR-394
t1 yellow command IR-396
T3
 bert test IR-383
 cable length IR-23
 clock source IR-47
 configuration IR-63
 display controllers IR-237
 display interface IR-336
 external port IR-386
 FDL performance report IR-388, IR-396
 framing IR-100
 line coding IR-390

performance report IR-388, IR-396
T1 clock source IR-385
T1 framing IR-389
T1 test IR-392
T1 timeslots IR-394
Tab key, command completion FR-xv
table-map command P1R-478
TACACS
 command comparison SR-103
 username authentication for extended mode DR-615
tacacs-server attempts command SR-110
tacacs-server authenticate command SR-111
tacacs-server directed request command SR-113
tacacs-server extended command SR-114
tacacs-server host command SR-115
tacacs-server key command SR-117
tacacs-server last-resort command SR-118
tacacs-server login-timeout command SR-119
tacacs-server notify command SR-120
tacacs-server optional passwords command SR-121
tacacs-server retransmit command SR-122
tacacs-server timeout command SR-123
tag command FR-482
tag-switching advertise-tags command XR-77
tag-switching atm allocation-mode command XR-79
tag-switching atm control-vc command XR-80
tag-switching atm vc-merge command XR-83
tag-switching atm vpi command XR-84
tag-switching ip (configuration) command XR-85
tag-switching ip (interface) command XR-86, XR-87
tag-switching tag-range downstream command XR-89
tag-switching tdp discovery command XR-90
tag-switching tdp holdtime command XR-91
tag-switching tsp-tunnels command XR-92, XR-93
TARP
 blacklist adjacency
 listing P3R-295
 setting P3R-306
 cache
 enabling P3R-304
 setting timer P3R-307
 counters, clearing P3R-189
 enabling P3R-325
 global parameters, displaying P3R-293
 host, displaying P3R-296
 interface
 displaying P3R-297
 enabling propagation P3R-316
 loop detection buffer
 clearing table P3R-190
 displaying table P3R-298
 setting timer P3R-310
 NSAP-to-TID, querying map P3R-319
 N-selector type, setting P3R-313
 packet lifetime, setting P3R-311

- PDUs
 global propagation P3R-309
 originating P3R-314
protocol, specifying P3R-318
sequence number, setting P3R-326
static adjacency
 displaying P3R-300
 setting P3R-323
static map
 displaying P3R-299
 setting P3R-312
- TID
 assigning P3R-329
 cache, displaying P3R-301
 clearing table P3R-191
- timeouts
 type 1, setting P3R-327
 type 2, setting P3R-315, P3R-328
 type 5, setting P3R-305
- traffic, displaying P3R-303
- URC bit, setting P3R-330
- tarp allow-caching command P3R-304
tarp arp-request-timer command P3R-305
tarp blacklist-adjacency command P3R-306
tarp cache-timer command P3R-307
tarp enable command P3R-308, P3R-316
tarp global-propagate command P3R-309
tarp ldb-timer command P3R-310
tarp lifetime command P3R-311
tarp map command P3R-312
tarp nselector-type command P3R-313
tarp originate command P3R-314
tarp post-t2-response-timer command P3R-315
tarp propagate command P3R-316
tarp protocol-type command P3R-318
tarp query command P3R-319
tarp resolve command P3R-321
tarp route-static command P3R-323
tarp run command P3R-325
tarp sequence-number command P3R-326
tarp t1-response-timer command P3R-327
tarp t2-response-timer command P3R-328
tarp tid command P3R-329
tarp urc command P3R-330
- TCP
 common services (table) QR-30
 connection
 enabling MD5 authentication for BGP P1R-408
 enabling Path MTU Discovery P1R-147
 setting connection-attempt time P1R-150
- connections, clearing FR-119
description of P1R-3
encapsulation
 configuring SRB for BR-232
 enabling use on STUN interface BR-364
- specifying for STUN BR-361
header compression, disabling conflicting features P1R-149, P1R-151
keepalive protocol, activating FR-535
maximum read size P1R-144
outgoing queue size P1R-148
packet dispatch state machine FR-54
port numbers (table) QR-30
protocol translation DR-509, DR-510, DR-517, DR-519, DR-523, DR-528
selective acknowledgment P1R-149
timestamp P1R-151
window size P1R-152
- TCP idle timeout, specifying SR-193
- TCP Intercept
 enabling SR-160
 modes
 intercept mode SR-165
 watch mode SR-165
 timeouts SR-159
- TCP/IP
 rlogin connections DR-419, DR-421, DR-422
 Telnet connections DR-457
- TCP/IP header compression
 on interface WR-195
 inheritance, effect on all IP maps WR-195
 on IP map WR-217
 inheriting compression from interface WR-217
 overriding compression from interface WR-217
 on X.25 WR-354
- TCP/IP, description P1R-3
- tcp-port command BR-881
- tdm-group command VR-77
- technical publications and standards FR-750
- technical support information, displaying FR-611
- telephone delta, in PPP BACP negotiations DR-791
- Telnet
 addresses, suppressing FR-665
 changing end-of-line characters FR-104
 connections DR-457-DR-460
 configuring a line DR-463
 description DR-458
 generating Break signal DR-461
 login string DR-415
 notification of pending output DR-416, FR-67
 protocol translation DR-509, DR-510, DR-517, DR-519, DR-523, DR-528
- Remote Echo option DR-462, FR-101
special commands (table) DR-459
Suppress Go Ahead option DR-462, FR-101
- telnet break-on-ip command DR-461
telnet command DR-457
telnet refuse-negotiations command DR-462
telnet speed command DR-463
telnet sync-on-break command DR-464

telnet transparent command DR-465
term ip netmask-format command P1R-95
terminal DR-187
 absolute timeout interval, setting DR-172
 activation character, setting FR-46, FR-543
 baud rate
 receive, configuring for a line DR-180
 transmit, configuring for a line DR-195
 changing
 escape character FR-83
 line speed FR-96
 screen length FR-88
 stop character FR-99
 character
 data bits FR-79
 padding FR-91
 character padding, configuring for line FR-68
 displaying, debug messages FR-89
 end-of-line character FR-104
 escape character, defining for a line FR-58
 file download mode FR-82
 flow control FR-85
 line speed FR-96, FR-106
 location, recording FR-64
 locking FR-65
 locking access to DR-410
 message length FR-143
 output notification FR-90
 packet dispatch character FR-80
 parameter settings, displaying DR-183
 parity bit FR-92
 pausing output to screen FR-61
 port queue FR-93
 receive speed FR-94
 screen length
 changing for session FR-88
 configuring for line FR-63
 screen width
 changing for session FR-108
 configuring for line FR-109
 selecting a transport protocol DR-467
 session limits, setting DR-181
 session timeout interval, setting DR-182
 settings, saving FR-72
 specifying type FR-105
 start character FR-97
 type, configuring for a line FR-107
terminal databits command FR-78
terminal data-character-bits command FR-79
terminal dispatch-character command DR-894, FR-80
terminal dispatch-timeout command FR-81
terminal download command FR-82
terminal editing command FR-28
terminal escape-character command FR-83
terminal exec-character-bits command FR-84

terminal flowcontrol command FR-85
terminal full-help command FR-31
terminal history command FR-33
terminal hold-character command FR-86
terminal international command FR-163
terminal keymap-type command FR-87
terminal lat out-group command DR-466
terminal length command FR-88
terminal monitor command FR-89
terminal notify command FR-90
terminal padding command FR-91
terminal parity command FR-92
terminal port queue, retry interval FR-93
terminal rxspeed command FR-94, FR-106
terminal services DR-171
terminal sessions, closing FR-11
terminal special-character-bits command FR-95
terminal speed command FR-96
terminal start-character command FR-97
terminal stopbits command FR-98
terminal stop-character command FR-99
terminal telnet break-on-ip command FR-100
terminal telnet refuse-negotiations command FR-101
terminal telnet speed command FR-102
terminal telnet sync-on-break command FR-103
terminal telnet transparent command FR-104
terminal terminal-type command FR-105
terminal transport preferred command DR-467
terminal txspeed command FR-106
terminal width command FR-108
terminal-queue command FR-93
terminal-type command FR-107
test appletalk command P2R-201
test crypto initiate-session command SR-307
test flash command FR-614
test interface fastethernet command IR-397
test interfaces command FR-615
test memory command FR-616
test modem back-to-back command DR-168
test service-module command IR-398
test T1 IR-392
Texas Instruments Token Ring MAC firmware, known
 defect BR-110
TFTP
 port number BR-213
 server
 booting automatically FR-290
 router, configuring to function as FR-344
tftp FR-347
tftp-server command FR-344
tg command BR-882
tg-number command BR-691
tg-row command BR-692
threshold command FR-483
THT, FDDI IR-94

tick count, IPX P2R-270
TID
 displaying cache P3R-301
 NSAP
 mapping, enabling P3R-304
 querying P3R-319
 NSAP-to-TID, mapping P3R-312
 router, assigning P3R-329
 table, clearing P3R-191
time limit, setting for a session DR-653
time-division multiplexing, clock source IR-49, IR-53
timeout command FR-484
timeout interval FR-81
 ARP P1R-7
 EXEC process, setting DR-14, FR-124
 terminal character dispatch FR-56
 trap message FR-476
timeout login response command SR-56
timeouts
 absolute DR-172
 session, setting DR-182
 setting for DDR interface DR-684
timeouts initial command VR-133
timeouts interdigit command VR-134
timeouts wait-release command VR-135
timers
 AppleTalk Enhanced IGRP P2R-53
 BGP, adjusting P1R-480
 DECnet P3R-133, P3R-162
 Frame Relay, keepalive (ATM) WR-236
 IP Enhanced IGRP, adjusting P1R-303, P1R-304
 ISO IGRP, adjusting P3R-331
 LAPB
 interface outage WR-294
 link failure (T4) WR-302
 T1 retransmission WR-301
 T4 relation to T1 WR-302
 service advertisement, setting DR-407
 TARP
 cache entries P3R-307
 loop detection buffer table P3R-310
 type 1 response P3R-327
 type 2 response P3R-315, P3R-328
 type 5 timeout P3R-305
 token holding IR-94
X.25
 call request (t21) WR-390
 clear indication (t13) WR-388
 clear request (t23) WR-392
 hold timer, setting WR-334
 incoming call (t11) WR-386
 reset indication (t12) WR-387
 reset request (t22) WR-391
 restart indication (t10) WR-385
 restart request (t20) WR-389

timers active-time command P1R-321
timers basic (ISO CLNS) command P3R-331
timers basic command P1R-189, P1R-207, P1R-223
timers bgp command P1R-480
timers lsa-group-pacing command P1R-295
timers spf command P1R-296
timeslot command DR-252, IR-399
timeslots
 T1 IR-394
timestamp
 TCP P1R-151
timing clear-wait command VR-136
timing delay-duration command VR-138
timing delay-start command VR-140
timing delay-with-integrity command VR-142
timing dialout-delay command VR-146
timing dial-pulse min-delay command VR-144
timing digit command VR-148
timing inter-digit command VR-150
timing percentbreak command VR-152
timing pulse command VR-154
timing pulse-interdigit command VR-156
timing wink-duration command VR-158
timing wink-wait command VR-160
timing-mark command BR-885
TN3270
 character mapping
 creating DR-471
 determining DR-449
 displaying DR-450
 connections to server DR-468
 data character bits, setting DR-469, DR-470
 default keymaps DR-377
 description DR-468
 display size DR-363
 international characters
 displaying DR-449
 printing DR-471
 null processing handling DR-476
 require reset after user error DR-478
 special characters DR-376
tn3270 8bit display command DR-469
tn3270 8bit transparent-mode command DR-470
tn3270 command DR-468
tn3270 null-processing command DR-476
tn3270 optimize-cursor-move command DR-477
tn3270 reset-required command DR-478
TN3270 server
 defining, TOS values BR-770
 LU nailing, client command BR-751
 TOS
 ip precedence command BR-769
 ip tos command BR-770
tn3270 status-message command DR-479
tn3270 typeahead command DR-480

tn3270-server command BR-884
Token Ring
 APPN partner node, specifying BR-615
 controller, displaying information about BR-140
 DECnet encapsulation over P3R-132
 functional address P1R-622
 interface, displaying information about BR-145
 IP multicast routing over P1R-622
 LNM information for, displaying BR-155
 logical configuration of, monitoring BR-99
 polling frequency, configuring BR-379
 wait interval for an acknowledgment, configuring
 BR-375
 XID transmissions, specifying frequency of BR-391
TokenTalk P2R-1
topology table
 AppleTalk Enhanced IGRP P2R-127
 IPX Enhanced IGRP P2R-434
trace
 common problems FR-621
 terminating FR-621
 tracing IP routes FR-622
trace (privileged) command FR-617
trace (user) command FR-621
trace (VINES) command P3R-51
trace command
 common problems FR-617
 extended test FR-617
 IP, routes FR-618
 privileged, overview FR-617
 terminating FR-617
 user, overview FR-621
TraceRoute function, VINES P3R-51
traffic priority management, weighted fair queueing QR-8
traffic shaping
 access lists, using QR-85
 configuration information (table) QR-77
 FECN/BECN messages QR-83
 interfaces QR-86, QR-88
 outbound QR-87
 statistics (table) QR-79
 strict (example) WR-38
 strict, enabling WR-38
traffic-engineering filter command XR-94
traffic-engineering route command XR-95
traffic-shape adaptive command QR-81
traffic-shape fecn-adapt command QR-83
traffic-shape group command QR-85
traffic-shape rate command QR-87
traffic-share command P1R-225, P1R-322
transfer-mode command FR-736
transition states, FDDI IR-287
translate command DR-508, DR-517, DR-526
translate lat command DR-514
translate tcp command DR-523

translate x25 command DR-534
translation options
 LAT DR-508, DR-514, DR-518, DR-527
 outgoing options, mapping to virtual interface template
 commands DR-515, DR-536
 prevent service advertisements DR-508, DR-514
 swap outgoing X.25 connections DR-529, DR-535
TCP
 binary mode DR-523
 incoming address DR-523
TCP/IP
 PPP DR-509, DR-518, DR-527
 SLIP DR-508, DR-518, DR-527
 Telnet DR-508, DR-517, DR-527
 Telnet binary mode DR-517
 X.25 DR-508, DR-518, DR-526, DR-534
translational bridging IR-87
transmission-priority command BR-694
transmit clock signal, inverting DR-249, IR-132
transmit-clock-internal command DR-253, IR-400
transmit-interface command P1R-190
transmitter-delay command DR-254, IR-401
transparent bridging
 access-list (type-code) command IR-4
 constrained multicast flooding
 enabling BR-15
 multicast state information, clearing BR-58
 multicast state information, displaying BR-68
 interface restrictions BR-20
 on FDDI interface IR-87
 SMDS WR-277
 type-code IR-4
transport input command DR-189
transport mode SR-334
transport output command DR-191
transport preferred command DR-193
transport protocol, selecting DR-467
trap
 host, setting message queue length FR-471
 message
 address violation IR-377
 establishing timeout FR-476
 source interface FR-475
 operation, enabling FR-455
 recipient, specifying FR-459
triggers for RTR
 configuring FR-388, FR-390
 displaying FR-439
TRIP, displaying information about IR-245
TRISL
 commands
 clear drip BR-200
 encapsulating BR-201
 multiring trccf-vlan BR-202
 show drip BR-203

source-bridge trcrf-vlan BR-204
RIF, enabling BR-202
VLAN, attaching BR-204
VLANs, attaching BR-204
troubleshooting, modem access DR-884
TRT, FDDI IR-94
ts16 command DR-255, IR-402
ttypcap command DR-481
ttypcap support DR-482
tunnel, VPDN, shutting down, without unconfiguring DR-837
tunnel checksum command IR-403
tunnel command DR-485
tunnel destination command IR-404
tunnel key command IR-406
tunnel mode SR-333
tunnel mode command IR-407, P1R-96
tunnel mode tag-switching command XR-97
tunnel sequence-datagrams command IR-409
tunnel source command IR-410
tunnel tsp-hop command XR-98
tunneling
 AppleTalk, Cayman IR-407
 X.25, enabling WR-382
tunneling, AppleTalk, Cayman P1R-96
tx-queue-limit command IR-412
txspeed command DR-195
type (voice) command VR-162
type 20 packets, IPX, broadcasts P2R-278, P2R-392,
 P2R-393, P2R-394
type command FR-485

U

ubr command WR-155
ubr+ command WR-157
UDP
 common services BR-213
 common services (table) QR-30
 datagrams
 flooding P1R-30
 speeding up flooding P1R-30
 port numbers, IPTalk P2R-63
 port numbers (table) QR-30
 port prioritizing QR-30
UDP broadcasts
 BOOTP forwarding agent P1R-26, P1R-32
 DHCP P1R-26, P1R-32
UDP idle timeout, specifying SR-197
unbind-action command BR-887
undelete command FR-191
underscore character in regular expressions DR-906
UNI, version
 (example) WR-42

configuring WR-42
unicast addresses, ATM WR-39
unit numbers, interface IR-33, IR-35, IR-40, IR-117
UNIX
 compress command FR-293
 Syslog Server, message logging to FR-507
 uncompress command FR-293
unrecognized command message, help command FR-59
user EXEC commands, access-profile SR-25
user EXEC mode, summary FR-xx
user-defined-1 command
 APPN link station BR-695
 APPN port BR-696
user-defined-2 command
 APPN link station BR-697
 APPN port BR-698
user-defined-3 command
 APPN link station BR-699
 APPN port BR-700
username command DR-615, SR-435
username, authentication DR-615

V

V.120
 answer all calls, static configuration DR-643
 dynamic detection and setting DR-642
V.120, automatic detection DR-258, DR-338
V.25bis
 DDR Options (table) DR-680, DR-706
 options DR-680, DR-706
vacant-message command FR-146
vad (dial-peer configuration) command VR-79
vad (voice-port configuration) command VR-164
validate-update-source command P1R-209
variance command P1R-323
vbr-nrt command WR-159
vbr-rt command WR-161
VC
 maximum, configuring WR-23
 maximum, configuring (example) WR-23
vc-class atm command WR-163
vc-per-vp, (example) WR-43
vdlc command BR-701
verify bootflash command FR-242
verify command FR-193
verify flash command FR-243
verify-adjacent-node-type command BR-703
verify-data command FR-487
version command P1R-210
views, predefined, described in RFC 1447 FR-477
VINES
 access control P3R-57–P3R-59
 access lists

- displaying P3R-25
- extended, creating P3R-54
- interface, applying to P3R-53
- simple, creating P3R-57
- standard, creating P3R-59
- addresses P3R-64, P3R-68
- application layer support, displaying P3R-42
- ARP packets, processing P3R-62
- bandwidth, determining P3R-72
- Banyan distributed naming system P3R-68
- broadcast packets P3R-89
- broadcasts
 - encapsulation P3R-65
 - forwarding P3R-78
 - serverless networks P3R-86
 - zero-hop P3R-86
- class field P3R-78
- encapsulation P3R-65
- fast switching
 - cache entries, deleting P3R-20
 - cache entries, displaying P3R-26
 - configuring P3R-82
- filters
 - access lists
 - extended P3R-55
 - simple P3R-57
 - standard P3R-60
 - input network P3R-70
 - input router P3R-71
 - interface, applying to P3R-53
 - output network P3R-77
- flash updates P3R-66
- floating static routes P3R-80
- hello messages P3R-101
- hop count field P3R-78
- host names
 - addresses, assigning P3R-68
 - entries, displaying P3R-28
- interfaces, displaying status of P3R-29
- IP header P3R-78
- IPC connections
 - blocks, deleting P3R-21
 - displaying information P3R-32
 - port numbers (table) P3R-56, P3R-60
- load sharing P3R-82
- metrics
 - interface, specifying on P3R-72
 - routing, determining P3R-80
- neighbor table
 - deleting P3R-22
 - displaying P3R-34
 - static paths, creating P3R-75
- NIST clock P3R-99
- NTP P3R-98, P3R-99
- packet's path, determining P3R-51
- protocol names P3R-54, P3R-59
- router network address, redetermining P3R-84
- routing
 - enabling P3R-84
 - on serverless networks P3R-86
 - single route P3R-88
- routing table
 - deleting P3R-23
 - displaying P3R-38
- routing updates P3R-89
 - filtering P3R-70, P3R-71, P3R-77
 - flash updates P3R-66
 - frequency P3R-103
 - propagation P3R-101
 - redirect messages P3R-79
 - split horizon P3R-66, P3R-89
- RTP
 - enabling P3R-91
 - messages, redirecting P3R-79
- serverless networks P3R-62
- single route P3R-88
- SMDS, configuring over WR-275
- split horizon P3R-66, P3R-89
- SRTP, enabling P3R-91
- static paths P3R-75
- static routes P3R-80
- StreetTalk P3R-68
- time
 - accepting updates P3R-57
 - synchronizing with network time P3R-98
 - synchronizing with router P3R-99
 - updates
 - accepting P3R-92
 - sending P3R-93
- TraceRoute function P3R-51
- traffic statistics
 - deleting P3R-24
 - displaying P3R-45
- vines access-group command P3R-53
- vines access-list (extended) command P3R-54
- vines access-list (simple) command P3R-57
- vines access-list (standard) command P3R-59
- vines arp-enable command P3R-62
- vines decimal command P3R-64
- vines encapsulation command P3R-65
- vines enhancements command P3R-66
- vines host command P3R-68
- vines input-network-filter command P3R-70, P3R-77
- vines input-router-filter command P3R-71
- vines metric command P3R-72
- vines neighbor command P3R-75
- vines output-network-filter command P3R-77
- vines propagate command P3R-78
- vines redirect command P3R-79
- vines route command P3R-80

- vines route-cache command P3R-82
vines routing command P3R-84
vines serverless command P3R-86
vines single-route command P3R-88
vines split-horizon command P3R-89
vines srtp-enabled command P3R-91
vines time access-group command P3R-92
vines time destination command P3R-93
vines time participate command P3R-94
vines time services command P3R-96
vines time set-system command P3R-98
vines time use-system command P3R-99
vines update deltas command P3R-101
vines update interval command P3R-103
virtual access interfaces, VTY line on which created,
 identifying DR-500
virtual asynchronous lines, configuring authentication
 DR-510, DR-520, DR-529
virtual circuits, X.25
 displaying address map WR-310
 facility handling WR-403
virtual data link control
 APPN
 port, defining BR-570
 ring group, specifying BR-701
 virtual MAC address option, specifying BR-701
 SNA Service Point configuration (example) BR-530
virtual interface template
 translate lat command, using with DR-514
 translate tcp command, using with DR-524
 translate x25 command, using with DR-535
virtual interfaces
 loopback interface IR-119
 Token Ring, creating BR-548
 tunnel interface IR-119
virtual MAC address P1R-180
virtual profiles DR-775–DR-778
virtual ring
 assigning BR-196, BR-198
 definition BR-186
virtual template
 configuration example DR-586
 configured as serial interface DR-763, DR-776
 multilink bundle interface, defining DR-586
 purpose DR-763, DR-776
virtual terminal lines DR-22
 configuring DR-22
virtual-profile aaa command DR-777
virtual-profile virtual-template command DR-778
VLANs, monitoring BR-78
voice confirmation-tone command VR-165
voice local-bypass command VR-83
voice-encap VR-80
voice-encap command VR-80
voice-group command VR-81
voice-port command VR-166
voice-port configuration commands
 auto-cut-through VR-90
 codec (voice-port configuration) VR-91
 comfort-noise VR-93
 compand-type VR-94
 condition VR-95
 connection VR-97
 cptone VR-100
 define VR-103
 description VR-105
 dial-type VR-106
 echo-cancel coverage VR-107
 echo-cancel enable VR-109
 ignore VR-111
 impedance VR-113
 input gain VR-115
 music-threshold VR-117
 non-linear VR-118
 operation VR-119
 output attenuation VR-120
 playout-delay VR-122
 ring cadence VR-123
 ring frequency VR-125
 ring number VR-127
 shutdown (voice-port configuration) VR-129
 signal VR-130
 supervisory disconnect VR-132
 timeouts initial VR-133
 timeouts interdigit VR-134
 timeouts wait-release VR-135
 timing clear-wait VR-136
 timing delay-duration VR-138
 timing delay-start VR-140
 timing delay-with-integrity VR-142
 timing dialout-delay VR-146
 timing dial-pulse min-delay VR-144
 timing digit VR-148
 timing inter-digit VR-150
 timing percentbreak VR-152
 timing pulse VR-154
 timing pulse-interdigit VR-156
 timing wink-duration VR-158
 timing wink-wait VR-160
 type (voice) VR-162
 vad (voice-port configuration) VR-164
 voice confirmation-tone VR-165
 voice-port VR-166
VPDN
 authenticating tunnel, remote host name and IP address
 DR-850
 connections, incoming DR-847
 connections, outgoing DR-850
 enabling DR-844
 history failure table

clearning DR-836
event logging DR-849
size DR-846
statistics DR-840
home gateway, CHAP challenge, issuing DR-845
information, displaying
logging, events DR-848
tunnel
 authorization search order DR-852
 local name, specifying DR-847
 virtual templates DR-847
vpdn enable command DR-844
vpdn history failure table-size command DR-846
vpdn incoming command DR-847
vpdn logging command DR-848
vpdn outgoing command DR-850
vpdn search-order command DR-852
vrf command BR-888
VTY lines, assigned to loopback interfaces DR-511,
 DR-520, DR-529
vty-async command DR-537
vty-async dynamic-routing command DR-539
vty-async header-compression command DR-540
vty-async ipx ppp-client loopback command DR-541
vty-async keepalive command DR-542
vty-async mtu command DR-543
vty-async ppp authentication command DR-544
vty-async ppp use-tacacs command DR-545
vty-async virtual-template command DR-546

W

watchdog packets P2R-399
spoofing P2R-381
WFQ
 configuration information, displaying QR-74
 configuration statistics (table) QR-57, QR-72
 effect of custom queueing on QR-7
 effect of priority queueing on QR-7
 enabling QR-7
 Frame Relay switching QR-9
 IP precedence weighting QR-9
 traffic priority management QR-8
 traffic stream discrimination (table) QR-8
where command DR-486, DR-565
which-route command P3R-332
whiteboard applications P1R-648
width command FR-109
wildcard command BR-704
word help, description FR-14
WRED
 configuration information, displaying QR-74
 configuration statistics (table) QR-59
 hardware support QR-43, QR-46, QR-48

interface information QR-59
minimum threshold values (table) QR-47
parameters QR-47
write FR-172, FR-180, FR-279

X

X Window System, setting display location DR-487
X.121 address
 DDN, caution not to change WR-293
 Frame Relay SVC WR-239
 numbers, codes and values WR-240
 setting WR-324
 suppressing
 called address WR-383
 calling address WR-384
 use source WR-394
X.25
 accept reverse charges WR-323
 addresses
 called, suppressing WR-383
 calling
 suppressing WR-384
 updating WR-394
 interface, setting on WR-324
 protocol-to-remote host mapping WR-344
BFE
 encapsulation WR-292
 remote-red setting WR-371
Blacker Emergency Mode WR-326, WR-327
bridging on WR-283, WR-349
compressed packet header WR-354
configuring ISDN, static TEI DR-863
CUD, interpreting calls with unknown WR-328
DCE device WR-292
DDN encapsulation WR-292
default protocol, setting WR-328
directed broadcasts, configuring BR-81, BR-456,
 WR-346, WR-350
DTE device WR-292
encapsulation
 BFE devices WR-293
 DDN WR-293
 methods supported BR-81, BR-456, WR-346,
 WR-350
facilities supported BR-456, WR-346, WR-349
facility handling WR-403
frames, bridging packets in BR-80, WR-349
hold timer, setting WR-334
hosts, limiting access DR-549, WR-397
input packet size
 maximum, setting WR-339, WR-347, WR-350
PVC
 encapsulation maximum WR-362

- switched maximum WR-365, WR-367
tunnel maximum WR-370
window WR-395
input packet size, setting with x25 map command
 BR-82, BR-457
interface statistics, displaying IR-344
Interrupt packet DR-896
ISDN over D channel DR-862
 isdn x25 static-tei command DR-863
maintaining WR-286
map options (table) BR-456
multiprotocol virtual circuits WR-344
network user ID BR-82, BR-457, WR-347, WR-351
OSPF BR-81, BR-456, WR-346, WR-350
output packet size BR-82, BR-457, WR-350
 maximum, setting WR-347, WR-350
PVC
 encapsulation maximum WR-362
 switched maximum WR-365, WR-367
 tunnel maximum WR-370
output window size WR-362, WR-396
packet acknowledgment policy WR-395, WR-396
packet hold queue WR-333
packet-by-packet compression BR-81, BR-456,
 WR-346, WR-349
packet-level restarts, forcing WR-341
pad connections, viewing DR-563
PAD link WR-356
precedence handling WR-338
protocol translation options DR-509, DR-519
protocols supported
 routing WR-283
 table WR-345
protocols supported (table) WR-362
PVC
 displaying address map WR-310
 options (table) WR-362
 states WR-320
 switched options (table) WR-365, WR-367
 tunnel options (table) WR-370
restarting WR-286
ROA
 lists BR-82, WR-351
 name and number WR-372
routing
 local switching WR-382
 remote switching WR-382
 supported protocols WR-283
routing table WR-373
 creating WR-373
 displaying WR-313
split horizon P3R-236
static host name map, defining DR-548, WR-335
subaddress, configuring BR-706
TEI restrictions DR-863
traffic over ISDN D channel
 (example) DR-861
translation options DR-534
tunneling WR-382
user facilities
 accept reverse charging BR-81, BR-456, WR-323,
 WR-346, WR-350
 closed user group BR-81, BR-456, WR-329,
 WR-347, WR-350
flow control parameter negotiation WR-329
network user ID BR-82, BR-457, WR-347,
 WR-351
reverse charging BR-81, BR-456, WR-329,
 WR-346, WR-350
ROA list name, specifying BR-82, BR-457
ROA per-call basis WR-330
ROA X.25 map options WR-347, WR-351
throughput class negotiation BR-82, BR-457,
 WR-329, WR-347, WR-351
transit delay BR-82, BR-457, WR-330, WR-347,
 WR-351
virtual circuits
 clearing WR-337
 displaying address map WR-310
 setting number of BR-81, BR-456, WR-347,
 WR-350, WR-358
window modulus WR-357, WR-395, WR-396
window size BR-82, BR-457, WR-347, WR-350
 PVC option WR-365
 PVC tunnel option WR-370
x25 map options (table) WR-346, WR-349
X.29
access list, applying to a line WR-284
Indication of Break packet DR-896
PAD profile script, creating WR-399
X.25 hosts, limiting access DR-549, WR-397
X.29 SET PARAMETER packet DR-559, DR-566
X.3, parameter settings, viewing DR-563
X.3 PAD
 description DR-566
 making connections DR-566
parameters
 changing dynamically DR-557
 default values DR-559, DR-566
 description DR-557–DR-559
 setting DR-566
X.3 PAD parameters
action upon receipt of Break signal (7) DR-895
baud rate (11) DR-896
character delete (16) DR-898
data forward character (3) DR-894
description of DR-893
device control (5) DR-895
discard output (8) DR-896
echo mask (20) DR-899

- edit PAD service signals (19) DR-899
- editing (15) DR-898
- escape from data transfer (1) DR-894
- idle timer (4) DR-895
- input flow control (12) DR-897
- line delete (17) DR-898
- line display (18) DR-899
- Line Feed insertion (13) DR-897
- Line Feed padding (14) DR-898
- line folding (10) DR-896
- local echo mode (2) DR-894
- local editing (15) DR-898
- PAD service signals (6) DR-895
- page wait (22) DR-899
- parity treatment (21) DR-899
- return padding (9) DR-896
- X.28 mode DR-569
- x25 accept-reverse command WR-323
- x25 address command WR-324
- x25 alias command WR-325
- x25 aodi command DR-870
- x25 bfe-decision command WR-326
- x25 bfe-emergency command WR-327
- x25 default command WR-328
- x25 facility command WR-329
- x25 hic command WR-331
- x25 hoc command WR-332
- x25 hold-queue command WR-333
- x25 hold-vc-timer command WR-334
- x25 host command DR-548, WR-335
- x25 htc command WR-336
- x25 idle command WR-337
- x25 ip-precedence command WR-338
- x25 ips command WR-339
- x25 lic command WR-340
- x25 linkrestart command WR-341
- x25 loc command WR-342
- x25 ltc command WR-343
- x25 map bridge command BR-80, WR-349
- x25 map cmns command WR-353
- x25 map command WR-344
- x25 map compressedtcp command WR-354
- x25 map pad command WR-356
- x25 map ppp command DR-871
- x25 map qlc command BR-455
- x25 modulo command WR-357
- x25 nvc command WR-358
- x25 ops command WR-359
- x25 pad-access command WR-360
- x25 pvc (encapsulating) command, encapsulating WR-361
- x25 pvc (switched PVC to SVC) command WR-366
- x25 pvc (switched) command, switched WR-364
- x25 pvc (XOT) command, tunnel WR-369
- x25 pvc qlc command BR-459
- x25 remote-red command WR-371
- x25 roa command WR-372
- x25 route command WR-373
- regular expressions DR-902
 (example) DR-907
- x25 routing command WR-382
- x25 subaddress command DR-568
- x25 suppress-called-address command WR-383
- x25 suppress-calling-address command WR-384
- x25 t10 command WR-385
- x25 t11 command WR-386
- x25 t12 command WR-387
- x25 t13 command WR-388
- x25 t20 command WR-389
- x25 t21 command WR-390
- x25 t22 command WR-391
- x25 t23 command WR-392
- x25 threshold command WR-393
- x25 use-source-address command WR-394
- x25 win command WR-395
- x25 wout command WR-396
- x25-dest-address command BR-705
- x25-subaddress command BR-706
- x28 command DR-569
- x29 access-list command DR-549, WR-397
- x29 profile command DR-550, WR-399
- x3 command DR-566
- X3T9.5 specification IR-94
- XDMCP, starting XRemote DR-495
- XID
- frames
 - frequency of transmission, controlling BR-391
 - value for the SDLC station, specifying BR-422
 - specifying for the SDLC station BR-445
- xid-block-number command BR-707
- xid-id-number command BR-708
- xmodem command FR-244
- XNS
 - 3Com 3+ hosts P3R-343
 - access control
 - extended P3R-330
 - standard P3R-333
 - access lists, creating
 - extended P3R-330
 - standard P3R-333
 - broadcasts
 - all-nets P3R-344
 - flooding P3R-344, P3R-345, P3R-346
 - flooding in 3Com environment P3R-345
 - forwarding P3R-347, P3R-350
 - encapsulation on Token Ring P3R-343
 - fast switching P3R-357
 - cache, displaying entries in P3R-335
 - filters
 - enabling P3R-358
 - generic, enabling P3R-342

- filters, routing table
accepting packets P3R-358
adding networks P3R-352
updates P3R-355
helpering, configuring P3R-347, P3R-350
IDP P2R-205
interfaces, displaying status P3R-336
load sharing P3R-353
metrics, routing P3R-329, P3R-360
Net/One routing, enabling P3R-348, P3R-360
network masks P3R-330
parallel paths, choosing between P3R-353
paths, setting maximum P3R-353
RIP
enabling P3R-359
updates
advertising P3R-355
receiving P3R-348
setting timers P3R-362
routes
delay metrics P3R-348, P3R-360
learning P3R-348
routing table
adding entries P3R-352
displaying entries P3R-338
updating P3R-362
SMDS, configuring over WR-275
standard routing, enabling P3R-354, P3R-359
static routes, adding to routing table P3R-356
Token Ring encapsulation P3R-343
traffic statistics, displaying P3R-340
xns access-group command P3R-342
xns encapsulation command P3R-343
xns flood broadcast allnets command P3R-344
xns flood broadcast net-zero command P3R-345
xns flood specific allnets command P3R-346
xns forward-protocol command P3R-347
xns hear-rip command P3R-348, P3R-360
xns helper-address command P3R-350
xns input-network-filter command P3R-352
xns maximum-paths command P3R-353
xns network command P3R-354
xns output-network-filter command P3R-355
xns route command P3R-356
xns route-cache command P3R-357
xns router-filter command P3R-358
xns routing command P3R-359
xns ub-emulation command P3R-360
xns update-time command P3R-362
XOT
clearing/terminating WR-288
VCs, displaying information WR-322
XRemote
automatic session startup DR-491–DR-495
buffer size, changing DR-492
- connecting to host computer DR-487
connections to servers DR-487
connections, displaying DR-455
description DR-363, DR-487, DR-491, DR-495
font servers, identifying DR-493
manual session startup DR-487
reenabling manually DR-487
returning to EXEC prompt DR-487
sessions between servers DR-489
setting X display location DR-487
starting clients DR-487
terminal line statistics, displaying DR-455
terminating the session DR-487
xremote command DR-487
xremote lat command DR-491
XRemote terminal, configuring DR-488
xremote tftp buffersize command DR-492
xremote tftp host command DR-493
xremote tftp retries command DR-494
xremote xdm command DR-495

Z

- ZIP
query interval P2R-99
reply filter, creating P2R-100
zones, NBP P2R-8