

# ExtremeWare 6.2.2 Software Quick Reference Guide

---

## Commands for Accessing the Switch

Command	Description
clear session <number>	Terminates a Telnet session from the switch.
config account <user account> {encrypted} {<password>}	Configures a user account password.
config banner	Configures the banner string that is displayed at the beginning of each login prompt of each session.
config banner netlogin	Configures the network login banner that is displayed at the beginning of each login prompt of each session.
config dns-client add <ipaddress>	Adds a DNS name server to the available server list for the DNS client.
config dns-client add domain-suffix <domain_name>	Adds a domain name to the domain suffix list.
config dns-client add name-server <ipaddress>	Adds a DNS name server to the available server list for the DNS client.
config dns-client default-domain <domain_name>	Configures the domain that the DNS client uses if a fully qualified domain name is not entered.
config dns-client delete <ipaddress>	Removes a DNS name server from the available server list for the DNS client.
config dns-client delete domain-suffix <domain_name>	Deletes a domain name from the domain suffix list.
config dns-client delete name-server <ipaddress>	Removes a DNS name server from the available server list for the DNS client.

<b>Command</b>	<b>Description</b>
config idletimeouts <minutes>	Configures the time-out for idle HTTP, console, and Telnet sessions.
config msm-failover link-action [keep-links-up   take-links-down]	Configures external port response when MSM failover occurs.
config sys-recovery-level [none   [critical   all] [shutdown   reboot   msm-failover]]	Configures a recovery option for instances where an exception occurs in ExtremeWare.
config time <date> <time>	Configures the system date and time.
config timezone {name <std_timezone_ID> <GMT_offset>} {autodst {name <dst_timezone_ID> <dst_offset>} {begins [every <floatingday>   on <absoluteday>] {at <time_of_day>}} {ends [every <floatingday>   on <absoluteday>] {at <time_of_day>}}}   noautodst}	Configures the Greenwich Mean Time (GMT) offset and Daylight Saving Time (DST) preference.
create account [admin   user] <username> {encrypted} <password>	Creates a new user account.
delete account <username>	Deletes a specified user account.
disable clipaging	Disables pausing at the end of each show screen.
disable idletimeouts	Disables the timer that disconnects idle sessions from the switch.
enable clipaging	Enables the pause mechanism and does not allow the display to print continuously to the screen.
enable idletimeouts	Enables a timer that disconnects Telnet and console sessions after 20 minutes of inactivity.
enable license [basic_L3   advanced_L3   full_L3 ] <license_key>	Enables a particular software feature license.
history	Displays a list of the previous 49 commands entered on the switch.
nslookup <hostname>	Displays the IP address of the requested host.
ping {udp} {continuous} {size <start_size> {<end_size>} [<ip_address>   <hostname>] {from <src_ipaddress>   with record-route   from <src_ipaddress> with record-route}}	Enables you to send User Datagram Protocol (UDP) or Internet Control Message Protocol (ICMP) echo messages or to a remote IP device.
reboot {time <date> <time>   cancel} {slot <slot>}	Reboots the switch at a specified date and time.
run msm-failover	Causes a user-specified MSM failover.
show accounts	Displays user account information for all users on the switch.

---

Command	Description
show banner	Displays the user-configured banner string.
show dns-client	Displays the DNS configuration.
show switch	Displays the current switch information.
traceroute [<ip_address>   <hostname>] {from <src_ipaddress>} {ttl <TTL>} {port <port>}	Enables you to trace the routed path between the switch and a destination endstation.

---

## Commands for Managing the Switch

---

Command	Description
config cpu-dos-protect [alert-threshold <packets per second>] [notice-threshold <packets per second>] [timeout <seconds>] [messages [on   off]] [filter-precedence <number>]	Configures denial of service protection.
config radius [primary   secondary] server [<ipaddress>   <hostname>] {<udp_port>} client-ip [<ipaddress>]	Configures the primary and secondary RADIUS authentication server.
config radius [primary   secondary] shared-secret {encrypted} [<string>]	Configures the authentication string used to communicate with the RADIUS authentication server.
config radius-accounting [primary   secondary] server [<ipaddress>   <hostname>] {<udp_port>} client-ip [<ipaddress>]	Configures the RADIUS accounting server.
config radius-accounting [primary   secondary] shared-secret {encrypted} [<string>]	Configures the authentication string used to communicate with the RADIUS accounting server.
config snmp access-profile readonly [<access-profile>   none]	Assigns an access profile that limits which stations have read-only access to the switch.
config snmp access-profile readwrite [<access-profile>   none]	Assigns an access profile that limits which stations have read/write access to the switch.
config snmp add <ipaddress> {<mask>}	Adds the IP address or a set of IP addresses of an SNMP management station to the access list.
config snmp add community [readonly   readwrite] {encrypted} <alphanumeric string>	Adds an SNMP read or read/write community string.
config snmp add trapreceiver <ip address> {port <udp_port>} community <community string> {from <source ip address>} {mode [enhanced   standard]}	Adds the IP address of a specified trap receiver to the trap receiver list.

---

<b>Command</b>	<b>Description</b>
config snmp community [readonly   readwrite] {encrypted} <alphanumeric string>	Configures the value of the default SNMP read or read/write community string.
config snmp delete [<ip address> {<mask>}   all]	Deletes an IP address or range of IP addresses of a specified SNMP management station or all SNMP management stations.
config snmp delete community [readonly   readwrite] {encrypted} [all   <alphanumeric string>]	Deletes an SNMP read or read/write community string.
config snmp delete trapreceiver [<ip address> {community <community string>}   all]	Deletes a specified trap receiver or all authorized trap receivers.
config snmp syscontact <alphanumeric string>	Configures the name of the system contact.
config snmp syslocation <alphanumeric string>	Configures the location of the switch.
config snmp sysname <alphanumeric string>	Configures the name of the switch.
config sntp-client [primary   secondary] server [<ipaddress>   <host_name>]	Configures an NTP server for the switch to obtain time information.
config sntp-client update-interval <seconds>	Configures the interval between polls for time information from SNTP servers.
config ssh2 key {pregenerated}	Generates the Secure Shell 2 (SSH2) host key.
config tacacs [primary   secondary] server [<ipaddress>   <hostname>] {<tcp_port>} client-ip <ipaddress>	Configures the server information for a TACACS+ authentication server.
config tacacs [primary   secondary] shared-secret {encrypted} <string>	Configures the shared secret string used to communicate with the TACACS+ authentication server.
config tacacs-accounting [primary   secondary] server [<ipaddress>   <hostname>] {<udp_port>} client-ip <ipaddress>	Configures the TACACS+ accounting server.
config tacacs-accounting [primary   secondary] shared-secret {encrypted} <string>	Configures the shared secret string used to communicate with the TACACS+ accounting server.
config vlan <name> dhcp-address-range <ipaddress1> - <ipaddress2>	Configures a set of DHCP addresses for a VLAN.
config vlan <name> dhcp-lease-timer <lease-timer>	Configures the timer value in seconds returned as part of the DHCP response.
config vlan <name> dhcp-options [default-gateway   dns-server   wins-server] <ipaddress>	Configures the DHCP options returned as part of the DHCP response by a switch configured as a DHCP server.

---

<b>Command</b>	<b>Description</b>
config vlan <vlan_name> netlogin-lease-timer <lease-timer>	Configures the timer value returned as part of the DHCP response for clients attached to network enabled ports.
disable cpu-dos-protect	Disables denial of service protection.
disable dhcp ports <portlist> vlan <name>	Disables DHCP on a specified port in a VLAN.
disable netlogin ports <portlist> vlan <vlan_name>	Disables network login on a specified port in a VLAN.
disable radius	Disables the RADIUS client.
disable radius-accounting	Disables RADIUS accounting.
disable snmp access	Disables SNMP on the switch.
disable snmp dot1dpfdbtable	Disables SNMP GetNext responses for the dot1dTpFdbTable in the BRIDGE-MIB.
disable snmp traps {port-up-down ports [<portlist>   all]}	Prevents SNMP traps from being sent from the switch.
disable sntp-client	Disables the SNTP client.
disable ssh2	Enables incoming SSH2 Telnet sessions.
disable system-watchdog	Disables the system watchdog timer.
disable tacacs	Disables TACACS+ for authentication and authorization.
disable tacacs-accounting	Disables TACACS+ accounting.
disable tacacs-authorization	Disables CLI command authorization.
disable telnet	Disables Telnet services on the system.
disable web	Disables web access to the switch.
enable cpu-dos-protect	Enables denial of service protection.
enable cpu-dos-protect simulated	Enables simulated denial of service protection.
enable dhcp ports <portlist> vlan <name>	Enables DHCP on a specified port in a VLAN.
enable netlogin ports <portlist> vlan <vlan_name>	Enables network login on a specified port in a VLAN.
enable radius	Enables the RADIUS client on the switch.
enable radius-accounting	Enables RADIUS accounting.
enable snmp access	Turns on SNMP support for the switch.
enable snmp dot1dpfdbtable	Enables SNMP GetNext responses for the dot1dTpFdbTable in the BRIDGE-MIB.
enable snmp traps {port-up-down ports [<portlist>   all]}	Turns on SNMP trap support.
enable sntp-client	Enables the SNTP client.

---

<b>Command</b>	<b>Description</b>
enable ssh2 {access-profile [ <i>access_profile</i> ]   none} {port <tcp_port_number>}	Enables incoming SSH2 Telnet sessions.
enable system-watchdog	Enables the system watchdog timer.
enable tacacs	Enables TACACS+.
enable tacacs-accounting	Enables TACACS+ accounting.
enable tacacs-authorization	Enables CLI command authorization.
enable telnet {access-profile [ <i>access_profile</i> ]   none} {port <tcp_port_number>}	Enables Telnet access to the switch.
enable web {access-profile [<access_profile>   none]} {port <tcp_port_number>}	Enables ExtremeWare Vista web access to the switch.
exit	Logs out the session of a current user for CLI or Telnet.
logout	Logs out the session of a current user for CLI or Telnet.
quit	Logs out the session of a current user for CLI or Telnet.
scp2 {cipher [3des   blowfish]} {port <portnum>} {debug <debug_level>} <user>@ [<hostname>   <ipaddress>] :<remote_file> [configuration {incremental}   image [primary   secondary]   bootrom]	Copies a file from a remote system to the switch using SCP2.
scp2 {cipher [3des   blowfish]} {port <portnum>} {debug <debug_level>} configuration <user>@ [<hostname>   <ipaddress>]:<remote_file>	Copies the configuration file from the switch to a remote system using SCP2.
show cpu-dos-protect	Displays the status of denial of service protection.
show management	Displays the SNMP settings configured on the switch.
show netlogin info {ports <portlist>} vlan <vlan_name>}	Disables network login on a specified port in a VLAN.
show odometer	Displays a counter for each component of a switch that shows how long it has been functioning since it was manufactured.
show radius	Displays the current RADIUS client configuration and statistics.
show radius-accounting	Displays the current RADIUS accounting client configuration and statistics.
show session	Displays the currently active Telnet, console, and web sessions communicating with the switch.
show sntp-client	Displays the DNS configuration.
show tacacs	Displays the current TACACS+ configuration and statistics.

Command	Description
show tacacs-accounting	Displays the current TACACS+ accounting client configuration and statistics.
ssh2 {cipher [3des   blowfish]} {port <portnumber>} {compression [on   off]} {user <username>} {debug <debug_level>} {<username>@} [<host>   <ipaddress>] {<remote command>}	Transmits a command to a remote system using an SSH2 connection.
telnet [<ipaddress>   <hostname>] <port_number>	Allows you to Telnet from the current command-line interface session to another host.
unconfig management	Restores default values to all SNMP-related entries.
unconfig radius {server [primary   secondary]}	Unconfigures the RADIUS client configuration.
unconfig radius-accounting {server [primary   secondary]}	Unconfigures the RADIUS accounting client configuration.
unconfig tacacs {server [primary   secondary]}	Unconfigures the TACACS+ client configuration.
unconfig tacacs-accounting {server [primary   secondary]}	Unconfigures the TACACS+ accounting client configuration.

## Commands for Configuring Slots and Ports on a Switch

Command	Description
clear slot <slot>	Clears a slot of a previously assigned I/O module type.
config ip-mtu <size> vlan <vlan name>	Sets the maximum transmission unit (MTU) for the VLAN.
config jumbo-frame size <number>	Sets the maximum jumbo frame size for the switch chassis.
config mirroring add [<mac_address>   vlan <vlan name> {ports <port number>}   ports <portnumber> {vlan <vlan name>}]	Adds a particular mirroring filter definition on the switch.
config mirroring delete [<mac_address>   vlan <vlan name> {ports <portnumber>}   ports <portnumber> {vlan <vlan name>}]	Deletes a particular mirroring filter definition on the switch.
config ports [<portlist> vlan <name>   all] [limit-learning <number>   lock-learning   unlimited-learning   unlock-learning]	Configures virtual ports for limited or locked MAC address learning.
config ports [<portlist>   all   mgmt] auto off {speed [10   100   1000]} duplex [half   full]	Manually configures port speed and duplex setting configuration on one or more ports on a switch.
config ports [<portlist>   mgmt   all] auto on	Enables autonegotiation for the particular port type.

Command	Description
config ports [<portlist>   mgmt] display-string <alphanumeric string>	Configures a user-defined string for a port or group of ports.
config ports [<portlist>   <portid>   mgmt] redundant [<portlist>   <portid>]	Configures a software-controlled redundant port.
config sharing address-based [L2   L2_L3   L2_L3_L4]	Configures the part of the packet examined by the switch when selecting the egress port for transmitting load-sharing data.
config slot <slot> module <module name>	Configures a slot for a particular I/O module card in a modular switch.
disable edp ports [<portlist>   all]	Disables the Extreme Discovery Protocol (EDP) on one or more ports.
disable flooding ports <portlist>	Disables packet flooding on one or more ports.
disable g1-module support	Disables I/O modules that do not have the "i" series chipset in a BlackDiamond switch.
disable jumbo-frame ports [<portlist>   all]	Disables jumbo frame support on a port.
disable learning ports <portlist>	Disables MAC address learning on one or more ports for security purposes.
disable mirroring	Disables port-mirroring.
disable ports [<portlist>   all]	Disables one or more ports on the switch.
disable sharing [<port>]	Disables a load-sharing group of ports.
disable slot [<slot number>   all]	Disables one or all slots on a BlackDiamond or Alpine switch, and leaves the blade in a power down state.
disable smartredundancy [<portlist>]	Disables the smart redundancy feature.
enable edp ports [<portlist>   all]	Enables the Extreme Discovery Protocol (EDP) on one or more ports.
enable flooding ports <portlist>	Enables packet flooding on one or more ports.
enable g1-module support	Enables I/O modules that do not have the "i" series chipset in a BlackDiamond switch.
enable jumbo-frame ports [<portlist>   all]	Enables support on the physical ports that will carry jumbo frames.
enable learning ports <portlist>	Enables MAC address learning on one or more ports.
enable mirroring to port [<portlist>] [tagged   untagged]	Dedicates a port on the switch to be the mirror output port.
enable ports [<portlist>   all]	Enables a port.
enable sharing <port number> grouping <portlist> algorithm {port-based   address-based   round-robin}	Defines a load-sharing group of ports. The ports specified in <portlist> are grouped to the master port.
enable slot [<slot number>   all]	Enables one or all slots on a BlackDiamond or Alpine switch.

---

<b>Command</b>	<b>Description</b>
enable smartredundancy <portlist>	Enables the Smart Redundancy feature on the redundant Gigabit Ethernet port.
restart ports [<portlist>]	Resets autonegotiation for one or more ports by resetting the physical link.
show edp {<portlist>}	Displays connectivity and configuration information for neighboring Extreme Networks switches.
show mirroring	Displays the port-mirroring configuration on the switch.
show ports {<portlist>} collisions	Displays real-time collision statistics.
show ports {<portlist>} configuration	Displays port configuration statistics.
show ports {<portlist>} info {detail}	Displays detailed system-related information.
show ports sharing	Displays port loadsharing groups.
show ports {<portlist>} packet	Displays a histogram of packet statistics.
show ports {<portlist>} utilization	Displays real-time port utilization information.
show sharing address-based	Displays the address-based load sharing configuration.
show slot <slot number>	Displays the slot-specific information.
unconfig ports <portlist> display-string	Clears the user-defined display string from one or more ports.
unconfig ports [<portlist>   <port id>   mgmt] redundant	Clears a previously configured software-controlled redundant port.
unconfig slot <slot number>	Clears a slot of a previously assigned module type.

---

## VLAN Commands

---

<b>Command</b>	<b>Description</b>
config cpu-transmit-priority [high   normal]	Configures the CPU transmit priority.
config dot1q ethertype <ethertype>	Configures an IEEE 802.1Q Ethertype.
config gvrp {listen   send   both   none} port <portlist>	Configures the sending and receiving of Generic VLAN Registration Protocol (GVRP) information on a port.
config mac-vlan add mac-address [any   <mac_address>] mac-group [any   <group_number>] vlan <name>	Adds a MAC address as a potential member of a MAC-based VLAN.
config mac-vlan delete [all   mac-address [<mac_address>   any]]	Removes a MAC address from any MAC-based VLANs with which it was associated.
config ports <portlist> monitor vlan <name>	Configures VLAN statistic monitoring on a per-port basis.

---

Command	Description
config protocol <protocol_name> add <protocol_type> <hex_value> {<protocol_type> <hex_value>} ...	Configures a user-defined protocol filter.
config protocol <protocol_name> delete <protocol_type> <hex_value> {<protocol_type> <hex_value>} ...	Deletes the specified protocol type from a protocol filter.
config vlan <name> add ports <portlist> {tagged   untagged} {nobroadcast} {soft-rate-limit}	Adds one or more ports in a VLAN.
config vlan <name> add ports <portlist> loopback-vid <vlan-id>	Adds a loopback port to a VLAN.
config vlan <name> delete port <portlist>	Deletes one or more ports in a VLAN.
config vlan <name> ipaddress <ipaddress> {<netmask>   <mask length>}	Assigns an IP address and an optional subnet mask to the VLAN.
config vlan <old_name> name <new_name>	Renames a previously configured VLAN.
config vlan <name> protocol [<protocol_name>   any]	Configures a VLAN to use a specific protocol filter.
config vlan <name> tag <vlanid>	Assigns a unique 802.1Q tag to the VLAN.
create protocol <protocol_name>	Creates a user-defined protocol filter.
create vlan <name>	Creates a named VLAN.
delete protocol <protocol_name>	Deletes a user-defined protocol.
delete vlan <name>	Deletes a VLAN.
disable gvrp	Disables the Generic VLAN Registration Protocol (GVRP).
disable mac-vlan port <portlist>	Disables a port from using the MAC-based VLAN algorithm.
enable gvrp	Enables the Generic VLAN Registration Protocol (GVRP).
enable mac-vlan mac-group [any   <group_number>] port <portlist>	Enables a port to use the MAC-based VLAN algorithm.
show gvrp	Displays the current configuration and status of GVRP.
show mac-vlan {configuration   database}	Displays the MAC-based VLAN configuration and MAC address database content.
show protocol <protocol>	Displays protocol filter definitions.
show vlan <name>   detail   stats {<name>}	Displays information about VLANs.
unconfig ports <portlist> monitor vlan <name>	Removes port-based VLAN monitoring.
unconfig vlan <name> ipaddress	Removes the IP address of the VLAN.

## FDB Commands

Command	Description
clear fdb {<mac_address>   broadcast-mac   locked-mac <mac_address>   vlan <name>   ports <portlist>}	Clears dynamic FDB entries that match the filter.
config fdb agingtime <seconds>	Configures the FDB aging time for dynamic entries.
create fdbentry <mac_address> vlan <name> blackhole {source-mac   dest-mac   both}	Creates a blackhole FDB entry.
create fdbentry [<mac_address>   broadcast-mac   any-mac] vlan <name> dynamic {qosprofile <qosprofile>   {ingress-qosprofile <inqosprofile>}   ingress-qosprofile <inqosprofile> {qosprofile <qosprofile>}}	Creates a permanent dynamic FDB entry, and associates it with an ingress and/or egress QoS profile.
create fdbentry <mac_address> vlan <name> ports [<portlist>   all] {qosprofile <qosprofile>} {ingress-qosprofile <inqosprofile>}	Creates a permanent static FDB entry, and optionally associates it with an ingress and/or egress QoS profile.
delete fdbentry [<mac_address>   broadcast-mac] vlan <name>   all]	Deletes one or all permanent FDB entries.
run fdb-check [index <bucket> <entry>   [<mac_address>   broadcast-mac] <vlan-name>] {extended} {detail}	Checks MAC FDB entries for consistency.
show fdb {<mac_address>   broadcast-mac   vlan <name>   <portlist>   permanent}	Displays FDB entries.

## QoS Commands

Command	Description
clear dlcs	Clears all learned DLCS data.
config diffserv examination code-point <code_point> qosprofile <qosprofile> ports [<portlist>   all] {low-drop-probability   high-drop-probability}	Configures the default ingress Diffserv code points (DSCP) to QoS profile mapping.
config diffserv replacement priority <value> code-point <code_point> ports [<portlist>   all]	Configures the default egress Diffserv replacement mapping.
config dot1p type <dot1p_priority> qosprofile <qosprofile>	Configures the default QoS profile to 802.1p priority mapping.
config ipqos add {tcp   udp   other   all} <dest_ipaddress>/<mask_length> {l4-dstport <tcp/udp_port_number>} {<ip_src_address>/<mask_length>} {l4-srcport <tcp/udp_port_number>} [qosprofile <qosname>   blackhole]	Applies a set of destination IP addresses to an IPQoS traffic grouping by specifying a network address and subnet mask.
config ipqos delete {tcp   udp   other   all} <dest_ipaddress>/<mask_length> {l4-dstport <tcp/udp_port_number>} {<ip_src_address>/<mask_length>} {l4-srcport <tcp/udp_port_number>} [qosprofile <qosname>   blackhole]	Removes a set of destination IP addresses from an IPQoS traffic grouping.
config ports <portlist> qosprofile <qosprofile>	Configures one or more ports to use a particular QoS profile.
config qosmode [ingress   egress]	Changes the QoS mode to ingress mode or egress mode.
config qosprofile <qosprofile> minbw <min_percent> maxbw <max_percent> priority <level> {[minbuf <percent> maxbuf <number> [K   M]   maxbuff <number> [K   M]   <portlist>]}	Modifies the default QoS profile parameters.
config qostype priority [source-mac   dest-mac   access-list   vlan   diffserv   dot1p] <priority>	Configures the priority of the specified QoS traffic grouping.
config red drop-probability <percent>	Configures the Random Early Detect (RED) drop-probability.
config vlan <name> priority <priority>	Configures the 802.1p priority value for 802.1Q VLAN tags.
config vlan <name> qosprofile <qosprofile>	Configures a VLAN to use a particular QoS profile.
create qosprofile <qosprofile>	Creates a QoS profile.
delete qosprofile <qosprofile>	Deletes a QoS profile created in egress mode.

---

Command	Description
disable diffserv examination ports [<portlist>   all]	Disables the examination of the Diffserv field in an IP packet.
disable diffserv replacement ports [<portlist>   all]	Disables the replacement of diffserv code points in packets transmitted by the switch.
disable dlcs {fast-ethernet-ports   ports [all   <port_number>]}	This command disables WINS snooping for ports on this switch.
disable dot1p replacement ports [<portlist>   all]	Disables the ability to overwrite 802.1p priority values for a given set of ports.
disable isq vlan <name>	Disables Intra-subnet QoS (ISQ) on a VLAN.
disable qosmonitor	Disables the QoS monitoring capability.
disable red ports <portlist>	Disables Random Early Detection (RED) on the specified ports.
enable diffserv examination ports [<portlist>   all]	Enables the Diffserv field of an ingress IP packet to be examined in order to select a QoS profile.
enable diffserv replacement ports [<portlist>   all]	Enables the diffserv code point to be overwritten in packets transmitted by the switch.
enable dlcs {fast-ethernet-ports   ports [all   <port_number>]}	This command enables WINS snooping for ports on the switch.
enable dot1p replacement ports [<portlist>   all]	Allows the 802.1p priority field to be overwritten on egress according to the QoS profile to 802.1p priority mapping for a given set of ports.
enable isq vlan <name>	Enables Intra-Subnet QoS (ISQ) on a per-VLAN basis.
enable qosmonitor {port <port>}	Enables the QoS monitoring capability on the switch.
enable red ports [mgmt   <portlist>]	Enables Random Early Detection (RED) on a port.
show dlcs	Displays the status of DLCS (enabled or disabled) and the status of ports that are snooping WINS packets.
show dot1p	Displays the 802.1p-to-QoS profile mappings.
{<ip_destination_address>/<mask>}	Displays the IP QoS table.
show ports [<portlist>] qosmonitor	Displays real-time QoS statistics for egress packets on one or more ports.
show qosprofile {<qosprofile>}	Displays QoS information on the switch.
show qostype priority	Displays QoS traffic grouping priority settings.
unconfig diffserv examination ports [<portlist>   all]	Removes the Diffserv examination code point from a port.
unconfig diffserv replacement ports [<portlist>   all]	Removes the diffserv replacement mapping from a port.

---

Command	Description
unconfig qos-type priority	Resets all traffic grouping priority values to their defaults.

## Access Policy Commands

Command	Description
config access-profile <access_profile> add {<seq_number>} {permit   deny} [ipaddress <ip_address> <mask> {exact}   as-path <path-expression>   bgp-community [internet   no-export   no-advertise   no-export-subconfed   <as_no:number>   number <community>]   ipxnet <netid> <netid> mask>   ipxsap <sap_type> <service_name>   vlan]	Adds an entry to the access profile.
config access-profile <access_profile> delete <seq_number>	Deletes an access profile entry using the sequence number.
config access-profile <access_profile> mode [permit   deny   none]	Configures the access profile mode to permit or deny access, or to require per-entry access control.
config route-map <route_map> <seq_number> add goto <new_route_map>	Configures a route map <code>goto</code> statement to transfer evaluation to another route map.
config route-map <route_map> <seq_number> delete goto <new_route_map>	Deletes a route map <code>goto</code> statement.
config route-map <route_map> delete <seq_number>	Deletes an entry from the route map.
config route-map <route_map> <seq_number> add match [nlri-list <nlri_access_profile>   as-path [access-profile <as_access_profile>   <as_number>]   community [access-profile <com_access_profile>   <as_number>:<number>   number <community>   no-advertise   no-export   no-export-subconfed]   next-hop <ip address>   med <number>   tag <number>   origin [igp   egp   incomplete]]	Configures a route map <code>match</code> statement.

---

<b>Command</b>	<b>Description</b>
<pre>config route-map &lt;route-map&gt; &lt;seq_number&gt; add set [as-path &lt;as_number&gt;   community [[access-profile &lt;access-profile&gt;   &lt;as_number&gt;:&lt;number&gt;    number &lt;community&gt;   no-advertise   no-export   no-export-subconfed]   remove   [add   delete] [access-profile &lt;access-profile&gt;   &lt;as_no&gt; : &lt;number&gt;   number &lt;community&gt;   no-advertise   no-export   no-export-subconfed]]   next-hop &lt;ip address&gt;   med [internal   &lt;med_number&gt;   remove   [add   delete] &lt;med_number&gt;] local-preference &lt;number&gt;   weight &lt;number&gt;   origin [igp   egp   incomplete]   tag &lt;tag_number&gt;   accounting index &lt;index_number&gt; value &lt;value_number&gt;   cost &lt;number&gt;   cost-type [ase-type-1   ase-type-2]]</pre>	Configures a route map set entry.
<pre>config route-map &lt;route-map&gt; &lt;seq_number&gt; delete match [nlri-list &lt;access-profile&gt;   as-path [access-profile &lt;access-profile&gt;   &lt;as_number&gt;]   community [access-profile &lt;access-profile&gt;   &lt;as_number&gt;:&lt;number&gt;   number &lt;community&gt;   no-advertise   no-export   no-export-subconfed]   next-hop &lt;ip address&gt;   med &lt;number&gt;   tag &lt;number&gt;   origin [igp   egp   incomplete]]</pre>	Deletes a route map match statement.
<pre>config route-map &lt;route-map&gt; &lt;seq_number&gt; delete set [as-path &lt;as_number&gt;   community [[access-profile &lt;access-profile&gt;   &lt;as_number&gt;:&lt;number&gt;    number &lt;community&gt;   no-advertise   no-export   no-export-subconfed]   remove   [add   delete] [access-profile &lt;access-profile&gt;   &lt;as_number&gt;:&lt;number&gt;   number &lt;community&gt;   no-advertise   no-export   no-export-subconfed]]   next-hop &lt;ip address&gt;   med &lt;number&gt;   local-preference &lt;number&gt;   weight &lt;number&gt;   origin [igp   egp   incomplete]   tag &lt;number&gt;   accounting index &lt;number&gt; value &lt;number&gt;   cost &lt;number&gt;   cost-type [ase-type-1   ase-type-2]]</pre>	Deletes a route map set entry.

---

Command	Description
config route-map <route-map> add <seq_number> [permit   deny] {match-one   match-all}	Adds an entry in the route map with the specified sequence number and action.
config vlan <name> access-profile [<access_profile>   none]	Configures a BlackDiamond 6800 running ExtremeWare 4.1 to control the routing of traffic between VLANs.
create access-list <name> icmp destination [<dest_ipaddress>/<mask>   any] source [<src_ipaddress>/<source_mask>   any] type <icmp_type> code <icmp_code> [permit   deny] {<portlist>} {precedence <number>}	Creates a named IP access list that applies to ICMP traffic.
create access-list <name> ip destination [<dest_ipaddress>/<mask>   any] source [<src_ipaddress>/<src_mask>   any] [permit   deny] ports [<portlist>   any] {precedence <prec_number>}	Creates a named IP access list that applies to all IP traffic.
create access-list <name> tcp destination [<dest_ipaddress>/<mask>   any] ip-port [<dst_port>   range <dst_port_min> <dst_port_max>   any] source [<src_ipaddress>/<src_mask>   any] ip-port [<src_port>   range <src_port_min> <src_port_max>   any] [permit <qosprofile>   permit-established   deny] ports [<portlist>   any] {precedence <precedence_num>}	Creates a named IP access list that applies to TCP traffic.
create access-list <name> udp destination [<dest_ipaddress>/<mask>   any] ip-port [<dst_port>   range <dst_port_min> <dst_port_max>   any] source [<src_ipaddress>/<src_mask>   any] ip-port [<src_port>   range <src_port_min> <src_port_max>   any] [permit <qosprofile>   deny] ports [<portlist>   any] {precedence <prec_number>}	Creates a named IP access list that applies to UDP traffic.
create access-profile <access_profile> type [ipaddress   ipx-node   ipx-net   ipx-sap   as-path   bgp-community   vlan]	Creates an access profile.
create route-map <route_map>	Creates a route map statement.
delete access-list [<name>   all]	Deletes an access list.
delete access-profile <access_profile>	Deletes an access profile.
delete route-map <route_map>	Deletes a route map statement from the route map.
disable access-list <name> [counter   log]	Disables message logging or the collection of access-list statistics.
enable access-list <name> [counter   log]	Enables message logging or the collection of access-list statistics.

---

Command	Description
show access-list {<name>   port <portlist>}	Displays access list information and real-time statistics.
show access-list-fdb	Displays the hardware access control list mapping.
show access-list-monitor	Initiates the access-list information display, and refreshes it until discontinued.
show access-profile {<access_profile>}	Displays access-profile related information for the switch.

---

## NAT Commands

---

Command	Description
config nat add vlan <name> map source [any   <source_ipaddress>/<mask>] {l4-port [any   <port> {- <port>}]} {destination <dest_ipaddress>/<mask> {l4-port [any   <port> {- <port>}]}{}} to <ip address> [/<mask>   - <ip address>] [tcp   udp   both] [portmap {<min> - <max>}   auto-constrain]	Adds a NAT translation rule that translates private IP addresses to public IP addresses on the outside VLAN.
config nat delete [all   vlan <name> map source [any   <ip address>/<mask>] {l4-port [any   <port> {- <port>}]} {destination <ip address>/<mask> {l4-port [any   <port> {- <port>}]}{}} to <ip address> [/<mask>   - <ip address>] [tcp   udp   both] [portmap {<min> - <max>}   auto-constrain]	Deletes a NAT translation rule.
config nat finrst-timeout <seconds>	Configures the timeout for a TCP session that has been torn down or reset.
config nat icmp-timeout <seconds>	Configures the timeout for an ICMP packet.
config nat syn-timeout <seconds>	Configures the timeout for an entry with an unacknowledged TCP SYN state.
config nat tcp-timeout <seconds>	Configures the timeout for a fully setup TCP SYN session.
config nat timeout <seconds>	Configures the timeout for any IP packet that is not TCP, UDP, or ICMP.
config nat udp-timeout <seconds>	Configures the timeout for a UDP session.
config nat vlan <vlan_name> [inside   outside   none]	Configures a VLAN to participate in NAT.
disable nat	Disables network address translation on the switch.
enable nat	Enables network address translation on the switch.

---

Command	Description
show nat {timeout   stats   connections   rules {vlan <outside_vlan>}}	Displays NAT settings.

## SLB Commands

Command	Description
clear slb connections {ipaddress <ip address> : <port>   vip <vipname>}	Clears all existing SLB connections.
clear slb vip [<vipname>   all] persistence	Clears the connection information in the persistence table.
config flow-redirect <flow redirect> add next-hop <ip address>	Adds the next hop host (gateway) that is to receive the packets that match the flow redirect policy.
config flow-redirect <flow redirect> delete next-hop <ip address>	Deletes the next hop host (gateway).
config flow-redirect <flow redirect> service-check ftp user <user name> <password>	Configures the flow redirect FTP check.
config flow-redirect <flow redirect> service-check http url <url> match-string <alphanumeric string>	Configures the flow redirect HTTP check.
config flow-redirect <flow redirect> service-check L4-port	Configures the flow redirect layer 4 port check.
config flow-redirect <flow redirect> service-check nntp <newsgroup>	Configures the flow redirect NNTP check.
config flow-redirect <flow redirect> service-check ping	Configures the flow redirect ping check.
config flow-redirect <flow redirect> service-check pop3 user <user name> <password>	Configures the flow redirect POP3 check.
config flow-redirect <flow redirect> service-check smtp <dns domain>	Configures the flow redirect SMTP check.
config flow-redirect <flow redirect> service-check telnet user <user name> <password>	Configures the flow redirect Telnet check.
config flow-redirect timer ping-check frequency <seconds> timeout <seconds>	Configures the flow redirect ping-check frequency and timeout.
config flow-redirect timer service-check frequency <seconds> timeout <seconds>	Configures the flow redirect service-check frequency and timeout.

Command	Description
config flow-redirect timer tcp-port-check frequency <seconds> timeout <seconds>	Configures the flow redirect TCP port check frequency and timeout.
config slb esrp vlan <vlan name> [add   delete] unit [number]	Configures all virtual servers with the specified unit number to match the state of the specified ESRP VLAN.
config slb failover alive-frequency <seconds> timeout <seconds>	Configures the frequency at which the local SLB device polls the remote SLB device.
config slb failover dead-frequency <seconds>	Configures the frequency at which the local switch attempts to re-establish communication with the unresponsive remote switch.
config slb failover fallback-now	Configures the local SLB to release the remote SLB resources if the remote SLB is alive.
config slb failover ping-check <ip address> {frequency <seconds> timeout <seconds>}	Configures the SLB device to actively determine if a remote gateway is reachable by performing a ping.
config slb failover unit <number> remote-ipaddress <ip address> local-ipaddress <ip address> {L4-port <port number>}	Configures the switch for active-active operation.
config slb global connection-block <number>	Configures the number of SLB connections to allocate in memory, which improves performance.
config slb global connection-timeout <seconds>	Configures the connection timeout for transparent and translation modes.
config slb global ftp user <user name> {password {encrypted} <password>}	Configures the default parameters for layer 7 FTP service checking.
config slb global http url <url> match-string [<any-content>   alphanumeric string]	Configures the default parameters for layer 7 HTTP service checking.
config slb global nntp <newsgroup>	Configures the default parameters for layer 7 NNTP service checking.
config slb global persistence-level [same-vip-same-port   same-vip-any-port   any-vip]	Configures the persistence level globally.
config slb global persistence-method [per-packet   per-session]	Configures the behavior of the persistence timer.
config slb global ping-check frequency <seconds> timeout <seconds>	Configures default health checking frequency and timeout period using layer 3-based pinging of the physical node.
config slb global pop3 user <user name> {password {encrypted} <password>}	Configures the default parameters for layer 7 POP3 service checking.
config slb global service-check frequency <seconds> timeout <seconds>	Configures default health checking frequency and timeout period using layer 7-based application-dependent checking.

Command	Description
config slb global smtp <dns domain>	Configures the default parameters for layer 7 SMTP service checking.
config slb global synguard max-unacknowledged-SYNs <number>	Configures the the SYN-guard feature.
config slb global tcp-port-check frequency <seconds> timeout <seconds>	Configures default health checking frequency and timeout period using layer 4-based TCP port testing.
config slb global telnet userid <userid> password {encrypted} {<password>}	Configures the default parameters for layer 7 telnet service checking.
config slb gogo-mode <port number> health-check <ip address>	Configures the health checker with the common IP addresses of the GoGo mode servers in this group.
config slb gogo-mode <port number> ping-check frequency <seconds> timeout <seconds>	Overrides the global default ping-check frequency and timeout values for this GoGo mode group.
config slb gogo-mode <port number> service-check ftp {<L4-port>} {user <user>   password {encrypted} <password>}	Configures the FTP service check parameters for a GoGo mode group.
config slb gogo-mode <port number> service-check http {<L4-port>} {url <url> match-string [any-content   <alphanumeric string>]}	Configures the HTTP service check parameters for a GoGo mode group.
config slb gogo-mode <port number> service-check pop3 {<L4-port>} {userid <userid>   password {encrypted} <password>}	Configures the service check parameters for a GoGo mode group.
config slb gogo-mode <port number> service-check smtp {<L4-port>} {<dns domain>}	Configures the service check parameters for a GoGo mode group.
config slb gogo-mode <port number> service-check telnet {<L4-port>} {user <user name>   password {encrypted} <password>}	Configures the service check parameters for a GoGo mode group.
config slb gogo-mode <port number> service-check timer [all   ftp   http   telnet   smtp   nntp   pop3   <TCP port number>] frequency <seconds> timeout <seconds>	Overrides the global service-check frequency and timeout values.
config slb gogo-mode <port number> tcp-port-check add [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP port number>]	Adds the specified layer 4 port.

---

Command	Description
config slb gogo-mode <port number> tcp-port-check delete [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP port number>]	Deletes the specified layer 4 port.
config slb gogo-mode <port number> tcp-port-check timer [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP port number>] frequency <seconds> timeout <seconds>	Overrides the global TCP-port-check frequency and timeout values.
config slb L4-port [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>] [treaper-timeout <seconds> ] udp-idle-timeout <seconds>]	Configures the inactive period for TCP or UDP before the connection is aged out.
config slb node <ip address>:[ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>] max-connections <number>	Configures the maximum number of simultaneous connections that can be established to a node.
config slb node <ip address> ping-check frequency <seconds> timeout <seconds>	Overrides the global default frequency and timeout values for this node.
config slb node <ip address>:[ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>] tcp-port-check frequency <seconds> timeout <seconds>	Overrides the global default frequency and timeout values for this node.
config slb pool <pool name> add <ip address>:[ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>] {ratio <number>   priority <number>}	Adds a node to a pool.
config slb pool <pool name> delete <ip address>:[ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]	Deletes a node from a pool.
config slb pool <pool name> lb-method [round-robin   ratio   priority   least-connections]	Configures the SLB load balancing method.

---

Command	Description
config slb pool <pool name> member <ip address>:[ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>] [ratio <number>   priority <number>]	Configures the ratio or priority of an existing pool member.
config slb proxy-client-persistence [add   delete] <ip address>/<netmask>	Configures a client subnet that should be treated as one persistent entity.
config slb vip <vip name> unit [number]	Configures the unit number for active-active failover.
config slb vip [<vip name>   all] client-persistence-timeout <seconds>	Configures the client persistence timeout value.
config slb vip <vip name> max-connections <number>	Configures the maximum connections allowed to a particular virtual server.
config slb vip <vip name> service-check frequency <seconds> timeout <seconds>	Configures the layer 7 service check frequency and timeout for a particular virtual server.
config slb vip <vip name> service-check ftp {user <user name> password {encrypted} <password>}	Configures layer 7 FTP service checking for a specific virtual server.
config slb vip <vip name> service-check http {url <url> match-string [any-content   <alphanumeric string>]}	Configures layer 7 HTTP service checking for a specific virtual server.
config slb vip <vip name> service-check nntp <newsgroup>	Configures layer 7 NNTP service checking for a specific virtual server.
config slb vip <vip name> service-check pop3 user <user name> password {encrypted} {password}	Configures layer 7 POP3 service checking for a specific virtual server.
config slb vip <vip name> service-check smtp {<dns domain>}	Configures layer 7 SMTP service checking for a specific virtual server.
config slb vip <vip name> service-check telnet {user <user name> password {encrypted} <password>}	Configures layer 7 telnet service checking for a specific virtual server.
config vlan <vlan name> slb-type [server   client   both   none]	Marks a VLAN as either a server VLAN or a client VLAN.
create flow-redirect <flow redirect> [any   tcp   tup   udp] destination [<ip address> / <mask>   any] ip-port [<port>   any] source [<ip address> / <mask>   any]	Creates a flow redirect policy.
create slb pool <pool name> {lb-method [least-connections   priority   ratio   round-robin]}	Creates a server pool and optionally assigns a load-balancing method to the pool.

---

Command	Description
create slb vip <vip name> pool <pool name>	Creates one or more new virtual servers.
mode [transparent   translation   port-translation] <ip address> {- <upper range>} : <L4 port> {unit <number>}	
delete flow-redirect <flow redirect>	Deletes a flow redirect policy.
delete slb pool [<pool name>   all]	Deletes a server pool.
delete slb vip [<vip name>   all]	Deletes one or all virtual servers.
disable flow-redirect [all   <flow redirect>]	Disables flow redirect.
disable slb	Disables SLB processing.
disable slb 3dns iquery-client	Disables 3DNS support.
disable slb failover	Disables the SLB failover mechanism.
disable slb failover manual-failback	Disables manual failback.
disable slb failover ping-check	Disables ping-check to an external gateway.
disable slb global synguard	Disables the TCP SYN-guard feature.
disable slb gogo-mode <port number>	Disables GoGo mode processing.
disable slb gogo-mode <port number> ping-check	Disables layer-3 ping-check to this GoGo mode group.
disable slb gogo-mode <port number> service-check [all   ftp   http   nntp   pop3   smtp   telnet   <TCP port number>]	Disables layer 7 service check to this GoGo mode group.
disable slb gogo-mode <port number> tcp-port-check [all   ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP port number>]	Disables layer 4 TCP-port-check to this GoGo mode group.
disable slb L4-port [all   ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]	Disables one or all SLB ports.
disable slb node [all   <ip address> : [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]] {close-connections-now}]	Disables one or all nodes.
disable slb node [all   <ip address>] ping-check	Disables layer 3 ping-check.
disable slb node [all   <ip address> : [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]] tcp-port-check	Disables layer 4 TCP-port-checking.

---

Command	Description
disable slb proxy-client-persistence	Disables proxy client persistence.
disable slb vip [all   <vip name>   ipaddress <ip address> : [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]] {close-connections-now}	Disables one or all virtual servers.
disable slb vip [all   <vip name>] client-persistence	Disables client persistence.
disable slb vip [all   <vip name>] service-check	Disables layer 7 service-check.
disable slb vip [all   <vip name>] sticky-persistence	Disables sticky persistence.
disable slb vip [all   <vip name>] svcdown-reset	Disables svcdown-reset.
enable flow-redirect [all   <flow redirect>]	Enables flow redirect.
enable slb	Enables SLB processing.
enable slb 3dns iquery-client	Enables 3DNS support.
enable slb failover	Enables SLB failover.
enable slb failover manual-failback	Enables manual failback.
enable slb failover ping-check	Enables ping-check.
enable slb global synguard	Enables the TCP SYN-guard feature.
enable slb gogo-mode <port number> grouping <port list>	Enables GoGo mode processing for a group of ports.
enable slb gogo-mode <port number> ping-check <ip address>	Enables layer-3 ping-check for the GoGo mode group.
enable slb gogo-mode <port number> service-check [all   ftp   http   nntp   pop3   smtp   telnet   <TCP port number>]	Enables layer 7 service checking for the GoGo mode group.
enable slb gogo-mode <port number> tcp-port-check [all   ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP port number>]	Enables layer 4 TCP-port-check for the GoGo mode group.
enable slb L4-port [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]	Enables an SLB port.
enable slb node [all   <ip address> : [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]]	Enables one or all nodes.

<b>Command</b>	<b>Description</b>
enable slb node [all   <ip address>] ping-check	Enables layer 3 ping-check.
enable slb node [all   <ip address> : [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]] tcp-port-check	Enables layer 4 TCP-port-check.
enable slb proxy-client-persistence	Enables proxy client persistence.
enable slb vip [all   <vip name>   ipaddress <ip address> : [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]]	Enables one or all virtual servers.
enable slb vip [all   <vip name>] client-persistence {netmask <netmask>}	Enables client persistence.
enable slb vip [all   <vip name>] service-check	Enables layer 7 service check.
config slb vip [all   <vip name>] sticky-persistence {netmask <netmask>}	Enables the sticky persistence feature and specifies the client address mask.
enable slb vip [all   <vipname>] svcdown-reset	Enables svcdown-reset.
show flow-redirect <flow redirect>	Displays the current flow redirect configuration and statistics.
show slb 3dns members	Displays the current connection information between the switch and the 3DNS querier.
show slb connections [ipaddress <ip address>: [ftp   http   https   imap4   ldap   ntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]   vip <vip name>]	Displays information on current connections.
show slb esrp	Displays SLB configuration for ESRP.
show slb failover	Displays SLB failover configuration and status.
show slb global	Displays the current SLB global configuration information.
show slb gogo-mode <port number> {configuration}	Displays GoGo mode ping-check, TCP-port-check, and service-check status.
show slb L4-port [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]	Displays the SLB configuration for the active layer 4 ports.
show slb node {<ip address> [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]}	Displays node configuration and status.

Command	Description
show slb persistence	Displays persistence status of existing clients.
show slb pool <pool name>	Displays the current SLB pool configuration and status.
show slb stats [pool <pool name>   vip <vip name>]	Displays the current SLB pool connection status.
show slb vip [<vip name>   ipaddress <ip address> : [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   www   <TCP or UDP port number>]] {detail}	Displays the current virtual server configuration and statistics.
unconfig slb all	Resets SLB global defaults and clears the SLB configuration.
unconfig slb gogo-mode <port number> health-check	Disables and deletes all the ping-check, TCP-port-check, and service-check configurations for this GoGo mode group.
unconfig slb gogo-mode <port number> service-check [all   ftp   http   nntp   pop3   smtp   telnet   <TCP port number>]	Disables and deletes the GoGo mode service-check configuration.
unconfig slb vip [all   <vip name>] service-check	Disables and deletes the service check configuration.

## EAPS Commands

Command	Description
config eaps <name> add control vlan <vlan_name>	Adds the specified control VLAN to the specified EAPS domain.
config eaps <name> add protect vlan <vlan_name>	Adds the specified protected VLAN to the specified EAPS domain.
config eaps <name> delete control vlan <vlan_name>	Deletes the specified control VLAN from the specified EAPS domain.
config eaps <name> delete protect vlan <vlan_name>	Deletes the specified protected VLAN from the specified EAPS domain.
config eaps <name> failtime <seconds>	Configures the value of the fail timer the master node used for the EAPS health-check packet.
config eaps <name> helotime <seconds>	Configures the value of the hello timer the master node used for the EAPS health-check packet.
config eaps <name> mode [master   transit]	Configures the switch as either the EAPS master node or as an EAPS transit node for the specified domain.
config eaps <name> [primary   secondary] port <port number>	Configures a node port as the primary or secondary port for the specified EAPS domain.
config eaps <old_name> name <new_name>	Renames an existing EAPS domain.

---

Command	Description
create eaps <name>	Creates an EAPS domain with the specified name.
delete eaps <name>	Deletes the EAPS domain with the specified name.
disable eaps {<name>}	Disables the EAPS function for a named domain or for an entire switch.
enable eaps {<name>}	Enables the EAPS function for a named domain or for an entire switch.
show eaps {<name>} {detail   summary}	Displays EAPS status information.
unconfig eaps <name> [primary   secondary] port	Sets the specified port's internal configuration state to INVALID.

---

## Commands for Status Monitoring and Statistics

---

Command	Description
clear counters	Clears all switch statistics and port counters, including port packet statistics, bridging statistics, and IP statistics.
clear log {diag-status   static}	Clears the log database.
config flowstats export <group#> add [<ipaddress>   <hostname>] port <udp_port>	Adds a flow-collector device to an export group to which NetFlow datagrams are exported.
config flowstats export <group#> delete [<ipaddress>   <hostname>] port <udp_port>	Removes a flow-collector device from an export group to which NetFlow datagrams are exported.
config flowstats filter-ingress <filter#> ports <portlist> export <group#> {aggregation} [<filterspec>   match-all-flows]	Configures a flow record filter for the specified ports.
config flowstats source <ipaddress>	Configures the IP address that is to be used as the source IP address for NetFlow datagrams to be exported.
config flowstats timeout <minutes> ports [<portlist>   any]	Configures the timeout value for flow records on the specified ports.
config log display {<severity>}	Configures the real-time log display.
config sys-health-check alarm-level [log   system-down   traps   auto-recovery <number of tries> [online   offline]]	Configures the system health checker.
config sys-health-check auto-recovery <number of tries> [offline   online]	Configures the system health checker.
config syslog {add} [<hostname>   <ip_address>] <facility> {<severity>}	Configures the syslog host address, and filters messages to be sent to the syslog host.
config syslog delete [<hostname>   <ip_address>] <facility> {<severity>}	Deletes a syslog host address.

---

---

<b>Command</b>	<b>Description</b>
disable cli-config-logging	Disables the logging of CLI configuration commands to the switch Syslog.
disable flowstats	Disables the flow statistics feature on the switch.
disable flowstats filter <filter#> ports <portlist> {ingress   egress}	Disables a specified flow record filter for the specified ports.
disable flowstats ping-check <group#>	Disables the flow statistics ping-check function for a specified group of collector devices.
disable flowstats ports <portlist>	Disables the flow statistics function on the specified ports.
disable log display	Disables the log display.
disable rmon	Disables the collection of RMON statistics on the switch.
disable sys-backplane-diag	Disables system run time backplane diagnostics.
disable sys-health-check	Disables the BlackDiamond system health checker.
disable syslog	Disables logging to a remote syslog host.
enable cli-config-logging	Enables the logging of CLI configuration commands to the Syslog for auditing purposes.
enable flowstats	Enables the flow statistics feature on the switch.
enable flowstats filter <filter#> ports <portlist> {ingress   egress}	Enables a specified flow record filter for the specified ports.
enable flowstats ping-check <group#>	Enables the flow statistics ping-check function for a specified group of collector devices.
enable flowstats ports <portlist>	Enables the flow statistics function on the specified ports.
enable log display	Configures the system to maintain a running real-time display of log messages on the console.
enable rmon	Enables the collection of RMON statistics on the switch.
enable sys-backplane-diag	Enables system run time backplane diagnostics, which is done by periodically sending diagnostic packets between MSM and I/O modules while the system is running.
enable sys-health-check	Enables the BlackDiamond system health checker.
enable syslog	Enables logging to a remote syslog host.
show flowstats {detail}	Displays status information for the flow statistics function.
show flowstats group <group#>	Displays configuration information for an export group.
show flowstats ports <portlist>	Displays status information for the flow statistics function.
show log {chronological} {<priority>} {time}	Displays the current snapshot of the log.
show log config	Displays the log configuration.
show memory {detail}	Displays the current system memory information.

---

Command	Description
show ports {<portlist>} rxerrors	Displays real-time receive error statistics.
show ports {<portlist>} stats	Displays real-time port statistics.
show ports {<portlist>} txerrors	Displays real-time transmit error statistics.
show version {detail}	Displays the hardware serial numbers and versions, and software versions currently running on the switch.
unconfig flowstats filter <filter#>	Removes the filter specification for the specified filter.
unconfig flowstats ports <portlist>	Resets the flow statistics configuration parameters for the specified ports to their default values.

## STP Commands

Command	Description
config stpd <spanning tree name> add vlan <vlan name> {ports <portlist> [dot1d   emistp   pvst-plus]}	Adds one or more VLANs, or a list of ports within a VLAN, to a specified STPD.
config stpd <spanning tree name> delete vlan <vlan name> {ports <portlist>}	Deletes one or more ports in the specified VLAN from an STPD.
config stpd <spanning tree name> forwarddelay <seconds>	Specifies the time (in seconds) that the ports in this STPD spend in the listening and learning states when the switch is the Root Bridge.
config stpd <spanning tree name> helldelay <seconds>	Specifies the time delay (in seconds) between the transmission of Bridge Protocol Data Units (BPDUs) from this STPD when it is the Root Bridge.
config stpd <spanning tree name> maxage <seconds>	Specifies the maximum age of a BPDU in the specified STPD.
config stpd <spanning tree name> ports cost <cost> [<portlist>]	Specifies the path cost of the port in the specified STPD.
config stpd <spanning tree name> ports mode {dot1d   emistp   pvst-plus} [<portlist>]	Configures the STP mode of operation for the specified port list.
config stpd <spanning tree name> ports priority <priority> [<portlist>]	Specifies the port priority of the port in the specified STPD.
config stpd <spanning tree name> priority <priority>	Specifies the bridge priority of the STPD.
config stpd <spanning tree name> tag <vlan tag>	Assigns an StpdID to an STPD.
config vlan <vlan name> add ports <portlist> stpd <spanning tree name> [dot1d   emistp   pvst-plus]	Adds a list of ports within a VLAN to a specified STPD.

Command	Description
create stpd <name>	Creates a user-defined STPD.
delete stpd <spanning tree name>	Removes a user-defined STPD from the switch.
disable ignore-bpdu vlan <name>	Allows the switch to recognize STP BDUs.
disable ignore-stp vlan <name>	Allows a VLAN to use STP port information.
disable stpd {<spanning tree name>}	Disables the STP mechanism on a particular STPD or for all STPDs.
disable stpd <spanning tree name> ports [<portlist>]	Disables STP on one or more ports.
disable stpd <spanning tree name> rapid-root-failover	Disables rapid root failover for STP recovery times.
enable ignore-bpdu vlan <vlan name>	Configures the switch to ignore the STP BPDUs, which prevents ports in the VLAN from becoming part of an STPD.
enable ignore-stp vlan <vlan name>	Configures the switch to ignore the STP protocol and not block traffic for the VLAN(s).
enable stpd {<spanning tree name>}	Enables the STP protocol for one or all STPDs.
enable stpd <spanning tree name> rapid-root-failover	Enables rapid root failover for faster STP recovery times.
enable stpd ports <portlist>	Enables the STP protocol on one or more ports.
show stpd {detail   <spanning tree name>}	Displays STPD settings on the switch.
show stpd <spanning tree name> ports [<portlist>   all] {detail}	Displays the STP state of a port.
unconfig stpd {<spanning tree name>   all}	Restores default STP values to a particular STPD or all STPDs.

## ESRP Commands

Command	Description
config esrp port-mode [host   normal] ports <portlist> {don't-count}	Configures the ESRP port mode for ESRP host attach.
config vlan <super_esrp_vlan> add domain-member vlan <sub_esrp_vlan>	Adds a VLAN to an ESRP domain.
config vlan <name> add ports [<portlist>   all] no-restart	Disables port restart for a port.
config vlan <name> add ports [<portlist>   all] restart	Configures ESRP or VRRP to restart ports if those ports are members of a VLAN that becomes a slave.

<b>Command</b>	<b>Description</b>
config vlan <name> add track-bgp failover <priority>	Configures an ESRP-enabled VLAN to track any available BGP route.
config vlan <name> add track-diagnostic failover <priority>	Configures backplane diagnostics failure tracking for an ESRP-enabled VLAN.
config vlan <name> add track-environment failover <priority>	Configures an ESRP-enabled VLAN to track environmental failures.
config vlan <name> add track-iproute <ipaddress>/<masklength>	Configures an ESRP-enabled VLAN or a VRRP VLAN to track a route entry in the kernel route table.
config vlan <name> add track-ospf failover <priority>	Configures an ESRP-enabled VLAN to track any available OSPF route.
config vlan <name> add track-ping <ipaddress> frequency <seconds> miss <number>	Configures an ESRP-enabled VLAN or VRRP VLAN to track an external gateway using ping.
config vlan <name> add track-rip failover <priority>	Configures an ESRP-enabled VLAN to track any available RIP route.
config vlan <name> add track-vlan <vlan_tracked>	Configures an ESRP-enabled VLAN or a VRRP VLAN to track port connectivity to a specified VLAN.
config vlan <super_esrp_vlan> delete domain-member vlan <sub_esrp_vlan>	Deletes a VLAN from an ESRP domain.
config vlan <name> delete track-bgp	Disables BGP route tracking for an ESRP-enabled VLAN.
config vlan <name> delete track-diagnostic	Disables backplane diagnostics failure tracking for an ESRP-enabled VLAN.
config vlan <name> delete track-environment	Disables backplane environmental failure tracking.
config vlan <name> delete track-iproute <ipaddress>/<masklength>	Disables route table entry tracking for an ESRP-enabled VLAN or a VRRP VLAN.
config vlan <name> delete track-ospf	Disables OSPF route tracking for an ESRP-enabled VLAN.
config vlan <name> delete track-ping <ipaddress>	Disables the tracking of an external gateway using ping.
config vlan <name> delete track-rip	Disables RIP route tracking for an ESRP-enabled VLAN.
config vlan <name> delete track-vlan <vlan_tracked>	Disables the tracking of port connectivity to a specified VLAN.
config vlan <name> esrp esrp-election [ports-track-priority   ports-track-priority-mac   track-ports-priority   track-ports-priority-mac   priority-ports-track-mac   priority-track-ports-mac   priority-mac-only]	Configures the election algorithm on the switch.
config vlan <name> esrp priority <value>	Configures the ESRP priority.

Command	Description
config vlan <name> esrp timer <timervalue> {esrp-nbr-timeout <timeoutvalue>}	Configures the ESRP timer values.
config vlan <name> esrp group <group_number>	Configures the group number to be used for the ESRP VLAN.
disable esrp vlan <name>	Disables ESRP on a VLAN.
enable esrp vlan <name>	Enables ESRP on a VLAN.
show esrp {detail}	Displays ESRP configuration information.
show esrp vlan <name> {counters}	Displays ESRP configuration information for a specific VLAN.

## VRRP Commands

Command	Description
config vrrp add vlan <name>	Enables VRRP on a particular VLAN.
config vrrp delete [vlan <name>   all]	Disables VRRP on one or all VLANs.
config vrrp vlan <name> add [master   backup] vrid <number> <ip address>	Configures the VRID instance on the VRRP VLAN as master or backup.
config vrrp vlan <name> authentication [none   simple-password <simple password>]	Configures VRRP authentication.
config vrrp vlan <name> delete vrid [<number>   all]	Deletes one or all VRIDs.
config vrrp vlan <name> vrid <number> [priority <priority_number>   advertisement-interval <ad_interval_number>   dont_preempt   preempt]	Configures VRRP parameters.
disable vrrp	Disables VRRP on the switch.
enable vrrp	Enables VRRP on the switch.
show vrrp [vlan <name>   all] {detail}	Displays VRRP configuration information for one or all VLANs.
show vrrp vlan <name> stats	Displays VRRP statistics for a particular VLAN.

## IP Unicast Commands

Command	Description
clear iparp {<ip address>   vlan <name>}	Removes dynamic entries in the IP ARP table.
clear ipfdb {<ip address> <netmask>} vlan <name>	Removes the dynamic entries in the IP forwarding database.

---

<b>Command</b>	<b>Description</b>
config bootprelay add <ip address>	Configures the addresses to which BOOTP requests should be directed.
config bootprelay delete [<ip address>   all]	Removes one or all IP destination addresses for forwarding BOOTP packets.
config iparp add <ip address> <mac_address>	Adds a permanent entry to the ARP table. Specify the IP address and MAC address of the entry.
config iparp add proxy <ip address> {<mask>} {<mac_address>} {always}	Configures the switch to respond to ARP Requests on behalf of devices that are incapable of doing so. Up to 64 proxy ARP entries can be configured.
config iparp delete <ip address>	Deletes an entry from the ARP table. Specify the IP address of the entry.
config iparp delete proxy [<ip address> {<mask>}   all]	Deletes one or all proxy ARP entries.
config iparp max-entries <number>	Configures the maximum allowed IP ARP entries.
config iparp max-pending-entries <number>	Configures the maximum allowed incomplete IP ARP entries.
config iparp timeout <minutes>	Configures the IP ARP timeout period.
config ip-down-vlan-action [consume   drop   forward]	Configures the forwarding functionality destined to nonworking IP interfaces.
config iproute add <ip address> <mask> <gateway> <metric>	Adds a static address to the routing table.
config iproute add blackhole <ip address> <mask>	Adds a blackhole address to the routing table. All traffic destined for a configured blackhole IP address is silently dropped, and no Internet Control Message Protocol (ICMP) message is generated.
config iproute add blackhole default	Adds a default blackhole route to the routing table. All traffic destined for an unknown IP destination is silently dropped, and no Internet Control Message Protocol (ICMP) message is generated.
config iproute add default <gateway> {<metric>}	Adds a default gateway to the routing table.
config iproute delete <ip address> <mask> <gateway>	Deletes a static address from the routing table.
config iproute delete blackhole <ip address> <mask>	Deletes a blackhole address from the routing table.
config iproute delete blackhole default	Deletes a default blackhole route from the routing table.
config iproute delete default <gateway>	Deletes a default gateway from the routing table.

---

Command	Description
config iproute priority [rip   bootp   icmp   static   ospf-intra   ospf-inter   ospf-as-external   ospf-extern1   ospf-extern2] <priority>	Changes the priority for all routes from a particular route origin.
config iproute route-map [bgp   direct   e-bgp   i-bgp   ospf   ospf-extern1   ospf-extern2   ospf-inter   ospf-intra   rip   static] [<route map>   none]	Configures the contents of the IP routing table.
config irdp [multicast   broadcast]	Configures the destination address of the router advertisement messages.
config irdp <mininterval> <maxinterval> <lifetime> <preference>	Configures the router advertisement message timers, using seconds.
config tcp-sync-rate <number_sync_per_sec>	Configures a limit for the switch to process TCP connection requests.
config udp-profile <profile_name> add <udp_port> [vlan <name>   ip address <dest_ipaddress>]	Configures a UDP-forwarding profile.
config udp-profile <profile_name> delete <udp_port> [vlan <name>   ip address <dest_ipaddress>]	Deletes a forwarding entry from the specified UDP-profile.
config vlan <name> subvlan-address-range <ip address1> - <ip address2>	Configures sub-VLAN address ranges on each sub-VLAN to prohibit the entry of IP addresses from hosts outside of the configured range.
config vlan <name> udp-profile <profile_name>	Assigns a UDP-forwarding profile to the source VLAN.
config vlan <super-vlan name> [add   delete] secondary-ip <ip address> {<mask>}	Adds or deletes a secondary IP address to the super-VLAN for responding to ICMP ping requests.
config vlan <super-vlan name> [add   delete] subvlan <sub-vlan name>	Adds or deletes a sub-VLAN to a super-VLAN.
create udp-profile <profile_name>	Creates a UDP-forwarding destination profile that describes the types of UDP packets (by port number) that are used, and where they are to be forwarded.
delete udp-profile <profile_name>	Deletes a UDP-forwarding profile.
disable bootp vlan [<name>   all]	Disables the generation and processing of BOOTP packets on a VLAN to obtain an IP address for the VLAN from a BOOTP server.
disable bootprelay	Disables the BOOTP relay function.
disable icmp address-mask {vlan <name>}	Disables the generation of an ICMP address-mask reply on one or all VLANs.

---

<b>Command</b>	<b>Description</b>
disable icmp parameter-problem {vlan <name>}	Disables the generation of an ICMP parameter-problem message on one or all VLANs.
disable icmp port-unreachables {vlan <name>}	Disables the generation of ICMP port unreachable messages on one or all VLANs.
disable icmp redirects {vlan <name>}	Disables generation of ICMP redirect messages on one or all VLANs.
disable icmp time-exceeded {vlan <name>}	Disables the generation of ICMP time exceeded messages on one or all VLANs.
disable icmp timestamp {vlan <name>}	Disables the generation of an ICMP timestamp response on one or all VLANs.
disable icmp unreachables {vlan <name>}	Disables the generation of ICMP unreachable messages on one or all VLANs.
disable icmp useredirects	Disables the modification of route table information when an ICMP redirect message is received.
disable iparp checking	Disable checking if the ARP Request source IP address is within the range of the local interface or VLAN domain.
disable iparp refresh	Disables IP ARP to refresh its IP ARP entries before timing out.
disable ipforwarding {[broadcast   fast-direct-broadcast   ignore-broadcast]} {vlan <name>}	Disables routing (or routing of broadcasts) for one or all VLANs. If no argument is provided, disables routing for all VLANs.
disable ip-option loose-source-route	Disables the loose source route IP option.
disable ip-option record-route	Disables the record route IP option.
disable ip-option record-timestamp	Disables the record timestamp IP option.
disable ip-option strict-source-route	Disables the strict source route IP option.
disable ip-option use-router-alert	Disables the generation of the router alert IP option.
disable iproute sharing	Disables load sharing if multiple routes to the same destination are available. When multiple routes to the same destination are available, load sharing can be enabled to distribute the traffic to multiple destination gateways. Only paths with the same lowest cost will be shared.
disable irdp {vlan <name>}	Disables the generation of ICMP router advertisement messages on one or all VLANs.
disable loopback-mode vlan [<name>   all]	Disallows a VLAN to be placed in the UP state without an external active port. This allows (disallows) the VLANs routing interface to become active.
disable multinetting	Disables IP multinetting on the system.

---

---

<b>Command</b>	<b>Description</b>
disable subvlan-proxy-arp vlan [<super-vlan name>   all]	Disables the automatic entry of sub-VLAN information in the proxy ARP table.
enable bootp vlan [<name>   all]	Enables the generation and processing of BOOTP packets on a VLAN to obtain an IP address for the VLAN from a BOOTP server.
enable bootprelay	Enables the BOOTP relay function.
enable icmp address-mask {vlan <name>}	Enables the generation of an ICMP address-mask reply on one or all VLANs.
enable icmp parameter-problem {vlan <name>}	Enables the generation of an ICMP parameter-problem message on one or all VLANs.
enable icmp port-unreachables {vlan <name>}	Enables the generation of ICMP port unreachable messages on one or all VLANs.
enable icmp redirects {vlan <name>}	Enables generation of ICMP redirect messages on one or all VLANs.
enable icmp time-exceeded {vlan <name>}	Enables the generation of ICMP time exceeded messages on one or all VLANs.
enable icmp timestamp {vlan <name>}	Enables the generation of an ICMP timestamp response on one or all VLANs.
enable icmp unreachable {vlan <name>}	Enables the generation of ICMP unreachable messages on one or all VLANs.
enable icmp useredirects	Enables the modification of route table information when an ICMP redirect message is received.
enable iparp checking	Enables checking if the ARP Request source IP address is within the range of the local interface or VLAN domain.
enable iparp refreshenable iparp refresh	Enables IP ARP to refresh its IP ARP entries before timing out.
enable ipforwarding {[broadcast   fast-direct-broadcast   ignore-broadcast]} {vlan <name>}	Enables IP routing or IP broadcast forwarding for one or all VLANs. If no argument is provided, enables IP routing for all VLANs that have been configured with an IP address.
enable ip-option loose-source-route	Enables the loose source route IP option.
enable ip-option record-route	Enables the record route IP option.
enable ip-option record-timestamp	Enables the record timestamp IP option.
enable ip-option strict-source-route	Enables the strict source route IP option.
enable ip-option use-router-alert	Enables the generation of the router alert IP option.

---

---

Command	Description
enable iproute sharing	Enables load sharing if multiple routes to the same destination are available. When multiple routes to the same destination are available, load sharing can be enabled to distribute the traffic to multiple destination gateways. Only paths with the same lowest cost will be shared.
enable irdp {vlan <name>}	Enables the generation of ICMP router advertisement messages on one or all VLANs.
enable loopback-mode vlan [<name>   all]	Allows a VLAN to be placed in the UP state without an external active port. This allows (disallows) the VLANs routing interface to become active.
enable multinetting	Enables IP multinetting on the system.
enable subvlan-proxy-arp vlan [<super-vlan name>   all]	Enables the automatic entry of sub-VLAN information in the proxy ARP table.
rtlookup [<ip address>   <hostname>]	Performs a look-up in the route table to determine the best route to reach an IP address or host.
run ipfdb-check [index <bucket> <entry>   <ip-address> {<ip-address>}] {extended} {detail}	Checks IP FDB entries for consistency.
show iparp {<ip address>   <mac_address>}   vlan <name>   permanent	Displays the IP Address Resolution Protocol (ARP) table. You can filter the display by IP address, MAC address, VLAN, or permanent entries.
show iparp proxy {<ip address> {<mask>}}	Displays the proxy ARP table.
show ipconfig {vlan <name>} {detail}	Displays configuration information for one or more VLANs.
show ipfdb {<ip address> <netmask>}   vlan <name>	Displays the contents of the IP forwarding database (FDB) table. Used for technical support purposes. If no option is specified, all IP FDB entries are displayed.
show iproute {priority   vlan <vlan>   permanent   <ip address> <netmask>   route-map   origin [direct   static   blackhole   rip   bootp   icmp   ospf-intra   ospf-inter   ospf-as-external   ospf-extern1   ospf-extern2]} {mpls} {sorted}	Displays the contents of the IP routing table or the route origin priority.
show ipstats {vlan <name>}	Displays IP statistics for the CPU for the switch or for a particular VLAN.
show udp-profile {<profile_name>}	Displays the UDP profile information.
unconfig icmp	Resets all ICMP settings to the default values.
unconfig iparp	Resets IP ARP timeout, IP ARP max-entries, and IP ARP max-pending-entries to their default values.
unconfig irdp	Resets all router advertisement settings to the default values.

---

Command	Description
unconfig udp-profile vlan [<name>   all]	Removes the UDP-forwarding profile configuration for one or all VLANs.

## IGRP Commands

Command	Description
config ospf [area <areaid>   vlan [<name>   all] cost [automatic   <number>]]	Configures the cost metric of one or all interface(s).
config ospf [area <areaid>   vlan [<name>   all]] priority <priority>	Configures the priority used in the designated router-election algorithm for one or all OSPF interface(s) for all the interfaces within the area.
config ospf [vlan <name>   area <areaid>   virtual-link <routerrid> <areaid>] authentication [simple-password <password>   md5 <md5_key_id> <md5_key>  none   encrypted [simple-password <password>   md5 <md5_key_id> <md5_key>]	Specifies the authentication password (up to eight characters) or Message Digest 5 (MD5) key for one or all interfaces in an area.
config ospf [vlan <name>   area <areaid>   virtual-link <routerrid> <areaid>] timer <retransmit interval> <transit delay> <hello interval> <dead interval>	Configures the timers for one interface or all interfaces in the same OSPF area.
config ospf add virtual-link <routerrid> <areaid>	Adds a virtual link connected to another ABR.
config ospf add vlan [<name>   all] area <areaid> {passive}	Enables OSPF on one or all VLANs (router interfaces).
config ospf add vlan [<name>   all] area <areaid> link-type [auto   broadcast   point-to-point] {passive}	Configures the OSPF link type.
config ospf area <area_id> external-filter [<access_profile>  none]	Configures an external filter policy.
config ospf area <area_id> interarea-filter [<access_profile>   none]	Configures a global inter-area filter policy.
config ospf area <areaid> add range <ipaddress> <mask> [advertise   noadvertise] {type-3   type-7}	Configures a range of IP addresses in an OSPF area to be aggregated.
config ospf area <areaid> delete range <ipaddress> <mask>	Deletes a range of aggregated IP addresses in an OSPF area.
config ospf area <areaid> normal	Configures an OSPF area as a normal area.

Command	Description
config ospf area <areaid> nssa [summary   nosummary] stub-default-cost <cost> {translate}	Configures an OSPF area as an NSSA.
config ospf area <areaid> stub [summary   nosummary] stub-default-cost <cost>	Configures an OSPF area as a stub area.
config ospf asbr-filter [<access_profile>   none]	Configures a route filter for all ASBR routers.
config ospf ase-limit <number> {timeout <seconds>}	Configures the AS-external LSA limit and overflow duration associated with OSPF database overflow handling.
config ospf ase-summary add <ipaddress> <mask> cost <cost> {<tag_number>}	Aggregates AS-external routes in a specified address range.
config ospf ase-summary delete <ipaddress> <mask>	Deletes an aggregated OSPF external route.
config ospf delete virtual-link <routerid> <areaid>	Removes a virtual link.
config ospf delete vlan [<name>   all]	Disables OSPF on one or all VLANs (router interfaces).
config ospf direct-filter [<access_profile>   none]	Configures a route filter for direct routes.
config ospf lsa-batching-timer <timer_value>	Configures the OSPF LSA batching interval.
config ospf metric-table 10m <cost> 100m <cost> 1g <cost>	Configures the automatic interface costs for 10 Mbps, 100 Mbps, and 1 Gbps interfaces.
config ospf routerid [automatic   <routerid>]	Configures the OSPF router ID. If automatic is specified, the switch uses the largest IP interface address as the OSPF router ID.
config ospf spf-hold-time <seconds>	Configures the minimum number of seconds between Shortest Path First (SPF) recalculations.
config ospf vlan <name> area <areaid>	Associates a VLAN (router interface) with an OSPF area. By default, all router interfaces are associated with area 0.0.0.0.
config ospf vlan <name> neighbor add <ipaddress>	Configures the IP address of a point-to-point neighbor.
config ospf vlan <name> neighbor delete <ipaddress>	Deletes the IP address of a point-to-point neighbor.
config ospf vlan <vlan> timer <rxmtinterval> <transitdelay> <hellointerval> <routerdeadinterval> [<waitinterval>]	Configures the OSPF wait interval.
config rip add vlan [<name>   all]	Configures RIP on an IP interface.
config rip delete vlan [<name>   all]	Disables RIP on an IP interface.
config rip garbagetime <seconds>	Configures the RIP garbage time.

Command	Description
config rip routetimeout {<seconds>}	Configures the route timeout period.
config rip rxmode [none   v1only   v2only   any] {vlan <name>}	Changes the RIP receive mode for one or more VLANs.
config rip txmode [none   v1only   v1comp   v2only] {vlan <name>}	Changes the RIP transmission mode for one or more VLANs.
config rip updatetime {<seconds>}	Specifies the time interval in seconds within which RIP sends update packets.
config rip vlan [<name>   all] cost <number>	Configures the cost (metric) of the interface.
config rip vlan [<name>   all] export-filter [<access_profile>   none]	Configures RIP to suppress certain routes when performing route advertisements.
config rip vlan [<name>   all] import-filter [<access_profile>   none]	Configures RIP to ignore certain routes received from its neighbor.
config rip vlan [<name>   all] trusted-gateway [<access_profile>   none]	Configures a trusted neighbor policy, which uses an access profile to determine trusted RIP router neighbors for the VLAN on the switch running RIP.
create ospf area <areaid>	Creates an OSPF area.
delete ospf area [<areaid>   all]	Deletes an OSPF area.
disable ospf	Disables the OSPF process for the router.
disable ospf capability opaque-lsa	Disables opaque LSAs across the entire system.
disable ospf export [bgp   i-bgp   e-bgp] [cost <number> [ase-type-1   ase-type-2] {tag <number>}   <route_map>]	Disables redistribution of routes to OSPF.
disable ospf export direct [cost <metric> [ase-type-1   ase-type-2] {tag <number>}   <route_map>]	Disables the redistribution of local interface (direct) routes into the OSPF domain. This will not export the loopback address of 127.0.0.1.
disable ospf export rip [cost <metric> [ase-type-1   ase-type-2] {tag <number>}   <route_map>]	Disables the redistribution of RIP to OSPF.
disable ospf export static [cost <metric> [ase-type-1   ase-type-2] {tag <number>}   <route_map>]	Disables the redistribution of static routes to OSPF.
disable ospf export vip [cost <metric> [ase-type-1   ase-type-2] {tag <number>}   <route_map>]	Disables the redistribution of virtual IP addresses into the OSPF domain.
disable rip	Disables RIP for the whole router.
disable rip aggregation	Disables the RIP aggregation of subnet information on a RIP version 2 (RIPv2) interface.

Command	Description
disable rip export [static   direct   ospf   ospf-intra   opst-inter   ospf-extern1   ospf-extern2   vip] metric <metric> {tag <number>}	Disables RIP to redistribute routes from other routing functions.
disable rip exportstatic	Enables the redistribution of static routes.
disable rip originate-default {always} cost <metric> {tag<number>}	Unconfigures a default route to be advertised by RIP if no other default route is advertised. If always is specified, RIP always advertises the default route to its neighbors. If always is not specified, RIP adds a default route if a reachable default route is not in the route table.
disable rip poisonreverse	Disables poison reverse algorithm for RIP.
disable rip splithorizon	Disables the split horizon algorithm for RIP.
disable rip triggerupdate	Disables the trigger update mechanism. Triggered updates are a mechanism for immediately notifying a router's neighbors when the router adds or deletes routes or changes their metric.
enable ospf	Enables the OSPF process for the router.
enable ospf capability opaque-lsa	Enables opaque LSAs across the entire system.
enable ospf export [bgp   i-bgp   e-bgp] [cost <number> [ase-type-1   ase-type-2] {tag <number>}   <route_map>]	Enables redistribution of routes to OSPF.
enable ospf export direct [cost <metric> [ase-type-1   ase-type-2] {tag <number>}   <route_map>]	Enables the redistribution of local interface (direct) routes into the OSPF domain. This will not export the loopback address of 127.0.0.1.
enable ospf export rip [cost <metric> [ase-type-1   ase-type-2] {tag <number>}   <route_map>]	Enables the redistribution of RIP to OSPF.
enable ospf export static [cost <metric> [ase-type-1   ase-type-2] {tag <number>}   <route_map>]	Enables the redistribution of static routes to OSPF.
enable ospf export vip [cost <metric> [ase-type-1   ase-type-2] {tag <number>}   <route_map>]	Enables the redistribution of virtual IP addresses into the OSPF domain.
enable ospf originate-default {always} cost <metric> [ase-type-1   ase-type-2] {tag <number>}	Enables a default external LSA to be generated by OSPF, if no other default route is originated by OSPF by way of RIP and static route re-distribution.
enable rip	Enables RIP for the whole router.
enable rip aggregation	Enables the RIP aggregation of subnet information on a RIP version 2 (RIPv2) interface.

Command	Description
enable rip export [static   direct   ospf   ospf-intra   opst-inter   ospf-extern1   ospf-extern2   vip] metric <metric> {tag <number>}	Enables RIP to redistribute routes from other routing functions.
enable rip exportstatic	Enables the redistribution of static routes.
enable rip originate-default {always} cost <metric> {tag<number>}	Configures a default route to be advertised by RIP if no other default route is advertised. If always is specified, RIP always advertises the default route to its neighbors. If always is not specified, RIP adds a default route if a reachable default route is not in the route table.
enable rip poisonreverse	Enables poison reverse algorithm for RIP.
enable rip splithorizon	Enables the split horizon algorithm for RIP.
enable rip triggerupdate	Enables the trigger update mechanism. Triggered updates are a mechanism for immediately notifying a router's neighbors when the router adds or deletes routes or changes their metric.
show ospf	Displays global OSPF information.
show ospf area <areaid>	Displays information about a particular OSPF area.
show ospf area detail	Displays information about all OSPF areas.
show ospf ase-summary	Displays the OSPF external route aggregation configuration.
show ospf interfaces detail	Displays detailed information about all OSPF interfaces.
show ospf interfaces {vlan <name>   area <areaid>}	Displays information about one or all OSPF interfaces.
show ospf lsdb [detail   summary   stats] area [all   <areaid>[/<len>]] lstype [all   as-external   external-type7   network   router   summary-asb   summary-net] [lsid <id>/[<len>]] [routerid <id>/[<len>]]	Displays a table of the current LSDB.
show ospf virtual-link {<areaid> <routerid>}	Displays virtual link information about a particular router or all routers.
show rip {detail}	Displays RIP specific configuration and statistics for all VLANs.
show rip stat {detail}	Displays RIP-specific statistics for all VLANs.
show rip stat vlan <name>	Displays RIP specific statistics for a VLAN.
show rip vlan <name>	Displays RIP configuration and statistics for a VLAN.
unconfig ospf {vlan <name>   area <areaid>}	Resets one or all OSPF interfaces to the default settings.
unconfig rip {vlan <name>}	Resets all RIP parameters to the default VLAN.

## BGP Commands

Command	Description
clear bgp neighbor [<ip address>   all] counters	Resets the BGP counters for one or all BGP neighbor sessions to zero.
config bgp add aggregate-address <ip address>/<masklength> {as-set} {summary-only} {advertise-route-map <route-map>} {attribute-route-map <route-map>}	Configures a BGP aggregate route.
config bgp add confederation-peer sub-AS-number <sub_as_number>	Specifies the list of sub-ASs that belong to a confederation.
config bgp add network <ip address>/<mask_length> <route_map>	Adds a network to be originated from this router.
config bgp as-number <as_number>	Changes the local AS number used by BGP.
config bgp cluster-id <cluster_id>	Appends a BGP route reflector cluster ID to the cluster list of a router.
config bgp confederation-id <confederation_id>	Specifies a BGP routing confederation ID.
config bgp delete aggregate-address [<ip address/masklength>   all]	Deletes one or all BGP aggregated route.
config bgp delete confederation-peer sub-AS-number <sub_as_number>	Specifies a sub-AS that should be deleted from a confederation.
config bgp delete network [all   <ip address>/<masklength>]	Deletes a network to be originated from this router.
config bgp local-preference <local_preference>	Changes the default local preference attribute.
config bgp med [<number>   none]	Configures the metric to be included in the Multi-Exit-Discriminator (MED) path attribute. The MED path attribute is included in route updates sent to external peers if a value is configured.
config bgp neighbor [<ip address>   all] as-path-filter [in   out] [none   <access_profile>]	Configures the AS path filter for a neighbor.
config bgp neighbor [<ip address>   all] maximum-prefix <number> {[threshold <percent>} {teardown {holddown-interval <seconds>}} {send-traps}}	Configures the maximum number of IP prefixes accepted from a BGP neighbor.
config bgp neighbor [<ip address>   all] [next-hop-self   no-next-hop-self]	Configures the next hop address used in the updates to be the address of the BGP connection originating the update.

Command	Description
config bgp neighbor [<ip address>   all] nlri-filter [in   out] [none   <access_profile>]	Configures an NLRI filter for a neighbor.
config bgp neighbor [all   <ip address>] password [none   {encrypted} <password>]	Configures a password for a neighbor.
config bgp neighbor [all   <ip address>] peer-group [<peer group>   none] {acquire-all }	Configures an existing neighbor as the member of a peer group.
config bgp neighbor [<ip address>   all] route-map-filter [in   out] [none   <route_map>]	Configures a route map filter for a neighbor.
config bgp neighbor [<ip address>   all] [route-reflector-client   no-route-reflector-client]	Configures a BGP neighbor to be a route reflector client.
config bgp neighbor [<ip address>   all] [send-community   dont-send-community]	Configures whether the community path attribute associated with a BGP NLRI should be included in the route updates sent to the BGP neighbor.
config bgp neighbor [<ip address>   all] soft-reset {input   output}	Applies the current input or output routing policy to the routing information already exchanged with the neighbor.
config bgp neighbor [<ip address>   all] source-interface [any   vlan <name>]	Changes the BGP source interface for TCP connections.
config bgp neighbor [<ip address>   all] timer <keepalive> <holdtime>	Configures the BGP neighbor timers.
config bgp neighbor [<ip address>   all] weight <weight>	Assigns a locally-used weight to a neighbor connection for the route selection algorithm.
config bgp peer-group <name> maximum-prefix <number> {{threshold <percent>} {teardown {holddown-interval <seconds>}} {send-traps}}	Configures the maximum number of IP prefixes accepted from a peer group.
config bgp peer-group <peer group> [next-hop-self   no-next-hop-self]	Configures the next hop address used in the updates to be the address of the BGP connection originating the update.
config bgp peer-group <peer group> [route-reflector-client   no-route-reflector-client]	Configures a peer group to be a route reflector client.
config bgp peer-group <peer group> [send-community   dont-send-community]	Configures whether communities should be sent to neighbors as part of route updates.
config bgp peer-group <peer group> as-path-filter [in   out] [none   <access profile>]	Configures the AS-path filters for a peer group and all neighbors of the peer group.
config bgp peer-group <peer group> nlri-filter [in   out] [none   <access profile>]	Configures the NLRI filter for a peer group and all the neighbors of the peer group.

---

<b>Command</b>	<b>Description</b>
config bgp peer-group <peer group> password [<password>   none]	Configures the password for a peer group and all neighbors of the peer group.
config bgp peer-group <peer group> remote-AS-number <number>	Configures the remote AS number for a peer group and all the neighbors of the peer group.
config bgp peer-group <peer group> route-map-filter [in   out] [none   <access profile>]	Configures the route maps for a peer group and all the neighbors of the peer group.
config bgp peer-group <peer group> soft-reset {[in   out]}	Applies the current input/output routing policy to the neighbors in the peer group.
config bgp peer-group <peer group> source-interface [any   vlan]	Configures the source interface for a peer group and all the neighbors of the peer group.
config bgp peer-group <peer group> timer keep-alive <seconds> hold-time <seconds>	Configures the keepalive timer and hold timer values for a peer group and all the neighbors of the peer group.
config bgp peer-group <peer group> weight <number>	Configures the weight for the peer group and all the neighbors of the peer group.
config bgp router-id <router_id>	Changes the router identifier.
config bgp soft-reconfiguration	Immediately applies the route map associated with the network command, aggregation, and redistribution.
create bgp neighbor <ip address> peer-group <peer group> {multi-hop}	Creates a new neighbor and makes it part of the peer group.
create bgp neighbor <ip address> remote-as <as_number> {multihop}	Creates a new BGP peer.
create bgp peer-group <peer group>	Creates a new peer group.
delete bgp neighbor [<ip address>   all]	Deletes one or all BGP neighbors.
delete bgp peer-group <peer group>	Deletes a peer group.
disable bgp	Disables BGP.
disable bgp aggregation	Disables BGP route aggregation.
disable bgp always-compare-med	Disables Multi Exit Discriminator (MED) from being used in the route selection algorithm.
disable bgp community format <as-number:number>	Disables the AS-number:number format of display for communities in the output of show and upload commands.
disable bgp export [direct   static   rip   ospf   ospf-intra   ospf-inter   ospf-extern1   ospf-extern2   vip]	Disables BGP from exporting routes from other protocols to BGP peers.
disable bgp neighbor [<ip address>   all]	Disables the BGP session.
disable bgp neighbor [<ip address>   all] remove-private-as-numbers	Disables the removal of private AS numbers from the AS path in route updates sent to EBGP peers.

---

Command	Description
disable bgp neighbor [all   <ip address>] soft-in-reset	Disables the soft recognition feature.
disable bgp peer-group <peer group>	Disables a BGP peer group and all the neighbors of the peer group.
disable bgp synchronization	Disables the synchronization between BGP and IGP.
disable peer-group {soft-in-reset}	Disables the soft recognition feature of a peer group and all the neighbors of a peer group.
enable bgp	Enables BGP.
enable bgp aggregation	Enables BGP route aggregation filtering.
enable bgp always-compare-med	Enables BGP to use the Multi Exit Discriminator (MED) from neighbors in different autonomous systems (ASs) in the route selection algorithm.
enable bgp community format <as-number:number>	Enables the as-number:number format of display for the communities in the output of show and upload commands.
enable bgp export [direct   static   rip   ospf   ospf-intra   ospf-inter   ospf-extern1   ospf-extern2   vip] {<route map>}	Enables BGP to export routes from other protocols to BGP peers.
enable bgp neighbor [<ip address>   all]	Enables the BGP session. The neighbor must be created before the BGP session can be enabled.
enable bgp neighbor [<ip address>   all] remove-private-as-numbers	Enables the removal of private AS numbers from the AS path in route updates sent to EBGP peers.
enable bgp neighbor [all   <ip address>] soft-in-reset	Enables the soft recognition feature.
enable bgp peer-group <peer group>	Enables a new peer group and all the neighbors of a peer group.
enable bgp peer-group <peer group> soft-in-reset	Enables the soft recognition feature on the peer group and all the neighbors of the peer group.
enable bgp synchronization	Enables synchronization between BGP and IGP.
enable peer-group {soft-in-reset}	Enables the soft reconfiguration feature on the peer group and all the neighbors of the peer group.
show bgp	Displays BGP configuration information.

---

Command	Description
<pre>show bgp neighbor &lt;ip address&gt; {[accepted-routes   received-routes   rejected-routes   transmitted-routes] {detail} [community [access-profile &lt;access_profile&gt;   no-advertise   no-export   no-export-subconfed   number &lt;community_number&gt;   &lt;as_id&gt;]   as-path [&lt;as-path-expression&gt;   access-profile &lt;access_profile&gt;]   route-map &lt;route map&gt;   network &lt;ip address&gt;/&lt;mask&gt; {exact}   all]}</pre>	Displays information about a specified neighbor.
<pre>show bgp peer-group {detail   &lt;peer group&gt; {detail}}</pre>	Displays the peer groups configured in the system.
<pre>show bgp routes {detail} [community [access-profile &lt;access_profile&gt;   no-advertise   no-export   no-export-subconfed   number &lt;community_number&gt;   &lt;as_id&gt;]   as-path [&lt;as-path-expression&gt;   access-profile &lt;access_profile&gt;]   route-map &lt;route map&gt;   network &lt;ip address&gt;/&lt;mask&gt; {exact}   all]</pre>	Displays the BGP route information base (RIB).

---

## IP Multicast Commands

---

Command	Description
clear igmp snooping {vlan <name>}	Removes one or all IGMP snooping entries.
clear ipmc cache {<group> {<source> <netmask>}}	Resets the IP multicast cache table.
clear ipmc fdb [group <ipaddress> [sender <ipaddress/mask>]]	Resets the IP multicast forwarding database entry.
config dvmrp add vlan [<name>   all]	Enables DVMRP on one or all IP interfaces.
config dvmrp delete vlan [<name>   all]	Disables DVMRP on one or all IP interfaces.
config dvmrp timer <route_report_interval> <route_replacement_time>	Configures the global DVMRP timers.
config dvmrp vlan [<name>   all] cost <number>	Configures the cost (metric) of the interface.
config dvmrp vlan [<name>   all] export-filter [<access_profile>   none]	Configures DVMRP to filter out certain routes when performing the route advertisement.

---

<b>Command</b>	<b>Description</b>
config dvmrp vlan [<name>   all] import-filter [<access_profile>   none]	Configures DVMRP to filter certain routes received from its neighbor, and uses an access profile to determine which DVMRP routes are accepted as valid routes.
config dvmrp vlan [<name>   all] trusted-gateway [<access_profile>   none]	Configures DVMRP to use the access policy to determine which DVMRP neighbor is trusted and to receive routes from.
config dvmrp vlan <name> timer <probe_interval> <neighbor_timeout_interval>	Configures DVMRP interface timers.
config igmp <query_interval> <query_response_interval> <last_member_query_interval>	Configures the Internet Group Management Protocol (IGMP) timers.
config igmp snooping flood-list [<access profile>   none]	Configures certain multicast addresses to be slow path flooded within the VLAN.
config igmp snooping leave-timeout <leave_timeout>	Configures the IGMP snooping leave timeout.
config igmp snooping timer <router_timeout> <host_timeout>	Configures the IGMP snooping timers.
config pim add vlan [<name>   all] {dense   sparse}	Enables PIM on an IP interface.
config pim cbsr [vlan <name> {priority <priority>   none}]	Configures a candidate bootstrap router for PIM sparse-mode operation.
config pim crp static <rp address> [none   <access profile>] <priority>	Configures an RP address and its associated groups statically, for PIM sparse mode operation.
config pim crp timer <crp_adv_interval>	Configures the candidate rendezvous point advertising interval.
config pim crp vlan <name> access-policy <access_policy> <priority>	Configures the candidate rendezvous point for PIM sparse-mode operation.
config pim delete vlan [<name>   all]	Disables PIM on an interface.
config pim register-rate-limit-interval <time>	Configures the initial PIM periodic register rate in case register-stops are not received.
config pim register-suppress-interval <time> register-probe-interval <time>	Configures an interval for periodically sending null-registers.
config pim register-checksum-to [include-data   exclude-data]	Configures the checksum mode to either include data (for compatibility with Cisco Systems products) or to exclude data (for RFC-compliant operation).
config pim spt-threshold <leaf_threshold> <rp_threshold>	Configures the threshold, in kbps, for switching to SPT. On leaf routers, this setting is based on data packets. On the RP, this setting is based on register packets.
config pim timer <hello_interval> <jp_interval> vlan [<vlan>   all]	Configures the global PIM timers.

Command	Description
config pim vlan [<name>   all] trusted-gateway [<access_profile>   none]	Configures a trusted neighbor policy.
disable dvmrp	Disables DVMRP on the system.
disable dvmrp rxmode vlan [<name>   all]	Disables the receive capability of DVMRP packets on one or all VLANs.
disable dvmrp txmode vlan [vlan <name>   all]	Disables the transmit capability of DVMRP packets on one or all VLANs.
disable igmp {vlan <name>}	Disables IGMP on a router interface. If no VLAN is specified, IGMP is enabled on all router interfaces.
disable igmp snooping {forward-mcrouter-only}	Disables IGMP snooping on the switch. If forward-mcrouter-only is specified, the switch forwards all multicast traffic to the multicast router only. Otherwise, the switch forwards all multicast traffic to any IP router.
disable igmp snooping with-proxy	Disables the IGMP snooping proxy. If snooping is not enabled, enabling the proxy also enables snooping. The default setting is enabled.
disable ipmcforwarding {vlan <name>}	Disables IP multicast forwarding on an IP interface.
disable pim	Disables PIM on the system.
enable dvmrp	Enables DVMRP on the system.
enable dvmrp rxmode vlan [<name>   all]	Enables the receive capability of DVMRP packets on one or all VLANs.
enable dvmrp txmode vlan [vlan <name>   all]	Enables the transmit capability of DVMRP packets on one or all VLANs.
enable igmp {vlan <name>}	Enables IGMP on a router interface. If no VLAN is specified, IGMP is enabled on all router interfaces.
enable igmp snooping {forward-mcrouter-only}	Enables IGMP snooping on the switch. If forward-mcrouter-only is specified, the switch forwards all multicast traffic to the multicast router only. Otherwise, the switch forwards all multicast traffic to any IP router.
enable igmp snooping with-proxy	Enables the IGMP snooping proxy. If snooping is not enabled, enabling the proxy also enables snooping. The default setting is enabled.
enable ipmcforwarding {vlan <name>}	Enables IP multicast forwarding on an IP interface.
enable pim	Enables PIM on the system.
run ipmcfdb-check [index <bucket> <entry>   <ip-multicast-group> <ip-source-address> vlan <vlan-name>] {extended} {detail}	Checks IP multicast FDB entries for consistency.
show dvmrp {vlan <name>   route {detail}}	Displays the DVMRP configuration and statistics, or the unicast route table.

Command	Description
show igmp group [<group_address> [sender <sender_address>]] [vlan <name>]	Lists the IGMP group membership for the specified VLAN.
show igmp snooping {vlan <name>} {detail}	Displays IGMP snooping registration information and a summary of all IGMP timers and states.
show ipmc cache {detail} {<group>} {<source> <netmask>}	Displays the IP multicast forwarding cache.
show ipmc fdb	Displays the IP multicast forwarding database.
show l2stat [vlan <name>]	Displays the counters for the number of packets bridged, switched, and snooped.
show pim {vlan <name>}	Displays the PIM configuration and statistics.
show pim rp-set {group}	Displays the RP-set for one or all groups.
unconfig dvmrp {vlan <name>}	Resets the DVMRP timers to their default settings.
unconfig igmp	Resets all IGMP settings to their default values and clears the IGMP group table.
unconfig pim {vlan <name>}	Resets all PIM settings on one or all VLANs to their default values.

## IPX Commands

Command	Description
config ipxmaxhops <number>	Configures the IPX maximum hop count when forwarding IPX packets.
config ipxrip add vlan [<name>   all]	Configures one or all IPX VLANs to run IPX/RIP.
config ipxrip delete vlan [<name>   all]	Disables IPX/RIP on one or all interfaces.
config ipxrip vlan [<name>   all] delay <msec>	Configures the time between each IPX/RIP packet within an update interval.
config ipxrip vlan [<name>   all] export-filter [none   <access_profile>]	Assigns an export route filter to an ingress VLAN.
config ipxrip vlan [<name>   all] import-filter [none   <access_profile>]	Assigns an import route filter to an ingress VLAN.
config ipxrip vlan [<name>   all] max-packet-size <size>	Configures the maximum transmission unit (MTU) size of the IPX/RIP packet.
config ipxrip vlan [<name>   all] trusted-gateway [none   <access_profile>]	Assigns an export route filter to the egress VLAN.
config ipxrip vlan [<name>   all] update-interval <time> {hold-multiplier <number>}	Configures the update interval and hold multiplier for IPX/RIP updates.

Command	Description
config ipxroute add [<dest_netid>   default] <next_hop_id> <next_hop_node_addr> <hops> <tics>	Adds a static IPX route entry in the IPX route table.
config ipxroute delete [<dest_netid>   default] <next_hop_netid> <next_hop_node_addr>	Removes a static IPX route entry from the route table.
config ipxsap add vlan [<name>   all]	Configures an IPX VLAN to run IPX/SAP routing.
config ipxsap delete vlan [<name>   all]	Disables IPX/SAP on an interface.
config ipxsap vlan [<name>   all] delay <msec>	Configures the time between each SAP packet within an update interval.
config ipxsap vlan [<name>   all] export-filter [none   access_profile]	Assigns an export route filter to an ingress VLAN.
config ipxsap vlan [<name>   all] import-filter [none   access_profile]	Assigns an import route filter to an ingress VLAN.
config ipxsap vlan [<name>   all] max-packet-size <number>	Configures the MTU size of the IPX/SAP packets.
config ipxsap vlan [<name>   all] trusted-gateway [none   <access_profile>]	Assigns an export SAP service filter to the egress VLAN.
config ipxsap vlan [<name>   all] update-interval <time> {hold-multiplier <number>}	Configures the update interval and hold multiplier for IPX/SAP updates.
config ipxsap vlan <name> gns-delay <msec>	Configures the amount of time the switch waits before answering a GNS request.
config ipxservice add <service_type> <service_name> <netid> <mac_address> <socket> <hops>	Adds a static entry to the IPX service table.
config ipxservice delete <service_type> <service_name> <netid> <mac_address> <socket>	Deletes an IPX service from the service table.
config vlan <name> xnetid <netid> [enet_ii   enet_8023   enet_8022   enet_snap]	Configures a VLAN to use a particular encapsulation type.
disable ipxrip	Disables IPX/RIP on the router.
disable ipxsap	Disables IPX/SAP on the router.
disable ipxsap gns-reply {vlan <name>}	Disables Get Nearest Server (GNS) reply on one or all IPX interfaces.
disable type20 forwarding {vlan <name>}	Disables the forwarding of IPX type 20 packets.
enable ipxrip	Enables IPX/RIP on the router.
enable ipxsap	Enables IPX/SAP on the router.
enable ipxsap gns-reply {vlan <name>}	Enables GNS reply on one or all IPX interfaces.

Command	Description
enable type20 forwarding {vlan <name>}	Enables the forwarding of IPX type 20 packets.
show ipxconfig {vlan <name>}	Displays IPX configuration information for one or all VLANs.
show ipxfdb {vlan <name>   xnetid <netid>}	Displays the hardware IPX FDB information.
show ipxrip {vlan <name>}	Displays IPX/RIP configuration and statistics for one or all VLANs.
show ipxroute {vlan <name>   xnetid <netid>   origin [static   rip   local]}	Displays the IPX routes in the route table.
show ipxsap {vlan <name>}	Displays the enable status of IPX/SAP for the VLAN, and its operational and administrative status (including the GNS reply service). It also lists any identified IPX/SAP neighbors, SAP packet statistics, and several other timer settings.
show ipxservice {vlan <name>   xnetid <netid>   origin [static   sap   local]}	Displays IPX services learned by way of SAP.
show ipxstats {vlan <name>}	Displays IPX packet statistics for the IPX router, and one or all VLANs.
unconfig ipxrip {vlan <name>}	Resets the IPX/RIP settings on one or all VLANs to the default.
unconfig ipxsap {vlan <name>}	Resets the IPX/SAP settings on one or all VLANs to the default.
unconfig vlan <name> xnetid	Removes the IPX NetID of a VLAN.
xping {continuous} {size <n>} <netid> <node_address>	Pings an IPX node specified by the network ID and the node address.

## Configuration and Image Commands

Command	Description
config download server [primary   secondary] [<ip address>   <hostname>] <filename>	Configures the TFTP server(s) used by a scheduled incremental configuration download.
download bootrom [<ip address>   <hostname>] <filename> {slot <slot>}	Downloads a BootROM image from a TFTP server after the switch has booted. The downloaded image replaces the BootROM in the onboard FLASH memory.
download configuration [<ip address>   <hostname>] <filename> {incremental}	Downloads a previously saved ASCII configuration file from a specific TFTP server host.
download configuration cancel	Cancels a scheduled incremental configuration download.
download configuration every <time>	Automatically does an incremental configuration download every day at the specified time, or immediately after switch bootup, based on the parameters specified in the config download server command.

---

Command	Description
download image [<ip address>   <hostname>] <filename> {primary   secondary}	Downloads a new version of the ExtremeWare software image.
save configuration {primary   secondary}	Saves the current configuration from the switch's runtime memory to non-volatile memory.
show configuration	Displays the currently active configuration to the terminal.
synchronize	Replicates all saved images and configurations from the master MSM to the slave MSM on the BlackDiamond.
unconfig switch {all}	Returns the switch configuration to its factory default settings.
upload configuration [<ip address>   <hostname>] <filename> {every <time>}	Uploads the current configuration to a TFTP server on your network.
upload configuration cancel	Cancels a previously scheduled configuration upload.
use configuration [primary   secondary]	Configures the switch to use a previously saved configuration on the next reboot.
use image [primary   secondary]	Configures the switch to use a saved image on the next reboot.

---

## Troubleshooting Commands

---

Command	Description
clear debug-trace	Resets the debug-trace levels to the factory settings of level 0.
config debug-trace access-list <debug level>	This command is not currently supported.
config debug-trace bgp-events <debug level>	This command records debug information to the syslog.
config debug-trace bgp-keepalive <debug level>	This command records debug information to the syslog.
config debug-trace bgp-misc <debug level>	This command records debug information to the syslog.
config debug-trace bgp-msgs <debug level>	This command records debug information to the syslog.
config debug-trace bgp-neighbor <ip address> <debug level>	This command records debug information to the syslog.
config debug-trace bgp-update-in <debug level>	This command records debug information to the syslog.
config debug-trace bgp-update-out <debug level>	This command records debug information to the syslog.
config debug-trace bootprelay <debug level> vlan <vlan name>	This command records debug information to the syslog.

---


Command	Description
config debug-trace bridge-learning <debug level>	This command records address learning debug information to the syslog.
config debug-trace bridging <debug level>	This command records layer 2 CPU processing debug information to the syslog.
config debug-trace card-state-change <debug level>	This command is not currently supported.
config debug-trace dvmrp-cache <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace dvmrp-hello <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace dvmrp-message <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace dvmrp-neighbor <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace dvmrp-route <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace dvmrp-timer <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace eaps-system <debug level>	This command records debug information to the syslog.
config debug-trace esrp-message <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace esrp-state-change <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace esrp-system <debug level>	This command records debug information to the syslog.
config debug-trace fdb <debug level> vlan <vlan name>	This command is not currently supported.
config debug-trace flow-redirect <debug level>	This command records debug information to the syslog.
config debug-trace flowstats <debug level>	This command records debug information to the system log.
config debug-trace health-check [<debug level>   {filter [real   virtual] <ip address> [ftp   http   https   imap4   ldap   nntp   pop3   smtp   socks   telnet   tftp   web   wildcard   www   <tcp port number>]}]	This command records debug information to the syslog.
config debug-trace igmp-snooping <debug level>	This command records debug information to the system log.

Command	Description
config debug-trace iparp <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace ip-forwarding <debug level>	This command records IP forwarding debug information to the syslog.
config debug-trace ipxgns-message <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace ipxrip-message <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace ipxrip-route <debug level>	This command records debug information to the syslog.
config debug-trace ipxsap-entry <debug level>	This command is not currently supported.
config debug-trace ipxsap-message <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace mpls <level>	This command records debug information to the syslog.
config debug-trace mpls-signalling <level>	This command records debug information to the syslog.
config debug-trace ospf-hello <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace ospf-lsa <debug level>	This command records debug information to the syslog.
config debug-trace ospf-neighbor <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace ospf-spf <debug level>	This command records debug information to the syslog.
config debug-trace pim-cache <debug level>	This command records debug information to the syslog.
config debug-trace pim-hello <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace pim-message <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace pim-neighbor <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace pim-rp-mgmt <debug level>	This command records debug information to the syslog.
config debug-trace rip-message <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace rip-route-change <debug level> vlan <vlan name>	This command is not currently supported.
config debug-trace rip-triggered-update <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace slb-3dns <debug level>	This command records debug information to the syslog.

Command	Description
config debug-trace slb-connection <debug level>	This command records debug information to the syslog.
config debug-trace slb-failover <debug level>	This command records debug information to the syslog.
config debug-trace stp-in-pdu <debug level> mgmt <slot number>	This command records debug information to the syslog.
config debug-trace stp-out-pdu <debug level> mgmt <slot number>	This command records debug information to the syslog.
config debug-trace udp-forwarding <debug level> vlan <vlan name>	This command is not currently supported.
config debug-trace vrrp <debug level> vlan <vlan name>	This command records debug information to the syslog.
config debug-trace vrrp-hello <debug level> vlan <vlan name>	This command records debug information to the syslog.
config diagnostics [extended   fastpost   normal   off]	Runs switch diagnostics at boot-up.
run diagnostics [extended   normal] slot [<slot number>   msm-a   msm-b]	Runs normal or extended diagnostics on the switch, slot, or management module.
run diagnostics packet-memory slot <slot number>	Executes packet memory scanning for all packet memory associated with the specified I/O slot on a BlackDiamond 6808 or 6816.
show debug-trace [access-list   bgp-events   bgp-keepalive   bgp-misc   bgp-msgs   bgp-neighbor   bgp-update-in   bgp-update-out   bootprelay   card-state-change   dvmrp-cache   dvmrp-hello   dvmrp-message   dvmrp-neighbor   dvmrp-route   dvmrp-timer   esrp-message   esrp-state-change   esrp-system   fdb   flow-redirect   health-check   iparp   ipxrip-message   ipxrip-route   ipxgns-messages   ipxsap-message   ipxsap-entry   ospf-hello   ospf-lsa   ospf-neighbor   ospf-spf   pim-cache   pim-hello   pim-neighbor   pim-message   pim-rp-mgmt   rip-message   rip-route-change   rip-triggered-update   slb-connection   slb-failover   slb-3dns   stp-in-pdu   stp-out-pdu   udp-forwarding] vlan <vlan name>	Displays the configured debug-trace levels.

Command	Description
show diagnostics backplane mpls mapping {active}	Displays diagnostic information related to the MPLS module internal backplane switch ports. This command also displays the external I/O port to internal MPLS module backplane switch port mappings.
show diagnostics backplane utilization	Displays backplane link utilization information.
show diagnostics packet-memory slot <slot number>	Displays the results of the packet memory scan on BlackDiamond 6808 and BlackDiamond 6816 I/O modules.
show diagnostics {slot [<slot number>   msm-a   msm-b]}	Displays the status of the system health checker as well as information from the last diagnostic test run on the switch.
show tech-support	Displays the output of various show commands to assist in monitoring and troubleshooting the switch.
top	Displays real-time CPU utilization information by process.



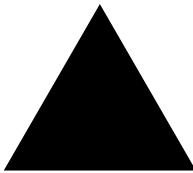

# Index of Commands

---

clear bgp neighbor counters	43	config bgp delete aggregate-address	43
clear counters	27	config bgp delete confederation-peer	
clear debug-trace	53	sub-AS-number	43
clear dlc	12	config bgp delete network	43
clear fdb	11	config bgp local-preference	43
clear igmp snooping	47	config bgp med	43
clear iparp	32	config bgp neighbor as-path-filter	43
clear ipfdb	32	config bgp neighbor maximum-prefix	43
clear ipmc cache	47	config bgp neighbor next-hop-self	43
clear ipmc fdb	47	config bgp neighbor nlri-filter	44
clear log	27	config bgp neighbor password	44
clear session	1	config bgp neighbor peer-group	44
clear slb connections	18	config bgp neighbor route-map-filter	44
clear slb vip persistence	18	config bgp neighbor route-reflector-client	44
clear slot	7	config bgp neighbor send-community	44
config access-profile add	14	config bgp neighbor soft-reset	44
config access-profile delete	14	config bgp neighbor source-interface	44
config access-profile mode	14	config bgp neighbor timer	44
config account	1	config bgp neighbor weight	44
config banner netlogin	1	config bgp peer-group as-path-filter	44
config banner	1	config bgp peer-group maximum-prefix	44
config bgp add aggregate-address	43	config bgp peer-group next-hop-self	44
config bgp add confederation-peer		config bgp peer-group nlri-filter	44
sub-AS-number	43	config bgp peer-group password	45
config bgp add network	43	config bgp peer-group remote-AS-number	45
config bgp as-number	43	config bgp peer-group route-map-filter	45
config bgp cluster-id	43	config bgp peer-group route-reflector-client	44
config bgp confederation-id	43	config bgp peer-group send-community	44

config bgp peer-group soft-reset	45	config debug-trace mpls	55
config bgp peer-group source-interface	45	config debug-trace mpls-signalling	55
config bgp peer-group timer	45	config debug-trace ospf-hello	55
config bgp peer-group weight	45	config debug-trace ospf-lsa	55
config bgp router-id	45	config debug-trace ospf-neighbor	55
config bgp soft-reconfiguration	45	config debug-trace ospf-spf	55
config bootprelay add	33	config debug-trace pim-cache	55
config bootprelay delete	33	config debug-trace pim-hello	55
config cpu-dos-protect	3	config debug-trace pim-message	55
config cpu-transmit-priority	9	config debug-trace pim-neighbor	55
config debug-trace access-list	53	config debug-trace pim-rp-mgmt	55
config debug-trace bgp-events	53	config debug-trace rip-message	55
config debug-trace bgp-keepalive	53	config debug-trace rip-route-change	55
config debug-trace bgp-misc	53	config debug-trace rip-triggered-update	55
config debug-trace bgp-msgs	53	config debug-trace slb-3dns	55
config debug-trace bgp-neighbor	53	config debug-trace slb-connection	56
config debug-trace bgp-update-in	53	config debug-trace slb-failover	56
config debug-trace bgp-update-out	53	config debug-trace stp-in-pdu	56
config debug-trace bootprelay	53	config debug-trace stp-out-pdu	56
config debug-trace bridge-learning	54	config debug-trace udp-forwarding	56
config debug-trace bridging	54	config debug-trace vrrp	56
config debug-trace card-state-change	54	config debug-trace vrrp-hello	56
config debug-trace dvmrp-cache	54	config diagnostics	56
config debug-trace dvmrp-hello	54	config diffserv examination code-point qosprofile ports	12
config debug-trace dvmrp-message	54	config diffserv replacement priority	12
config debug-trace dvmrp-neighbor	54	config dns-client add domain-suffix	1
config debug-trace dvmrp-route	54	config dns-client add name-server	1
config debug-trace dvmrp-timer	54	config dns-client add	1
config debug-trace eaps-system	54	config dns-client default-domain	1
config debug-trace esrp-message	54	config dns-client delete domain-suffix	1
config debug-trace esrp-state-change	54	config dns-client delete name-server	1
config debug-trace esrp-system	54	config dns-client delete	1
config debug-trace fdb	54	config dot1p type	12
config debug-trace flow-redirect	54	config dot1q ethertype	9
config debug-trace flowstats	54	config download server	52
config debug-trace health-check	54	config dvmrp add	47
config debug-trace igmp-snooping	54	config dvmrp delete vlan	47
config debug-trace iparp	55	config dvmrp timer	47
config debug-trace ip-forwarding	55	config dvmrp vlan cost	47
config debug-trace ipxgns-message	55	config dvmrp vlan export-filter	47
config debug-trace ipxrip-message	55	config dvmrp vlan import-filter	48
config debug-trace ipxrip-route	55	config dvmrp vlan timer	48
config debug-trace ipxsap-entry	55	config dvmrp vlan trusted-gateway	48
config debug-trace ipxsap-message	55		

config eaps add control vlan	26	config ipqos add	12
config eaps add protect vlan	26	config ipqos delete	12
config eaps delete control vlan	26	config iproute add blackhole default	33
config eaps delete protect vlan	26	config iproute add blackhole	33
config eaps failtime	26	config iproute add default	33
config eaps helotime	26	config iproute add	33
config eaps mode	26	config iproute delete blackhole default	33
config eaps name	26	config iproute delete blackhole	33
config eaps port	26	config iproute delete default	33
config esrp port-mode ports	30	config iproute delete	33
config fdb agingtime	11	config iproute priority	34
config flow-redirect add next-hop	18	config iproute route-map	34
config flow-redirect delete next-hop	18	config ipxmaxhops	50
config flow-redirect service-check ftp	18	config ipxrip add vlan	50
config flow-redirect service-check http	18	config ipxrip delete vlan	50
config flow-redirect service-check L4-port	18	config ipxrip vlan delay	50
config flow-redirect service-check nntp	18	config ipxrip vlan export-filter	50
config flow-redirect service-check ping	18	config ipxrip vlan import-filter	50
config flow-redirect service-check pop3	18	config ipxrip vlan max-packet-size	50
config flow-redirect service-check smtp	18	config ipxrip vlan trusted-gateway	50
config flow-redirect service-check telnet	18	config ipxrip vlan update-interval	50
config flow-redirect timer ping-check	18	config ipxroute add	51
config flow-redirect timer service-check	18	config ipxroute delete	51
config flow-redirect timer tcp-port-check	19	config ipxsap add vlan	51
config flowstats export add port	27	config ipxsap delete vlan	51
config flowstats export delete port	27	config ipxsap vlan delay	51
config flowstats filter-ingress ports export	27	config ipxsap vlan export-filter	51
config flowstats source	27	config ipxsap vlan gns-delay	51
config flowstats timeout ports	27	config ipxsap vlan import-filter	51
config gvrp	9	config ipxsap vlan max-packet-size	51
config idletimeouts	2	config ipxsap vlan trusted-gateway	51
config igmp snooping flood-list	48	config ipxsap vlan update-interval	51
config igmp snooping leave-timeout	48	config ipxservice add	51
config igmp snooping timer	48	config ipxservice delete	51
config igmp	48	config irdp	34
config iparp add proxy	33	config irdp	34
config iparp add	33	config jumbo-frame size	7
config iparp delete proxy	33	config log display	27
config iparp delete	33	config mac-vlan add mac-address	9
config iparp max-entries	33	config mac-vlan delete	9
config iparp max-pending-entries	33	config mirroring add	7
config iparp timeout	33	config mirroring delete	7
config ip-down-vlan-action	33	config msm-failover link-action	2
config ip-mtu vlan	7	config nat add vlan map	17

config nat delete	17	config pim register-rate-limit-interval	48
config nat finrst-timeout	17	config pim register-suppress-interval	
config nat icmp-timeout	17	register-probe-interval	48
config nat syn-timeout	17	config pim spt-threshold	48
config nat tcp-timeout	17	config pim timer vlan	48
config nat timeout	17	config pim vlan trusted-gateway	49
config nat udp-timeout	17	config ports auto off	7
config nat vlan	17	config ports auto on	7
config ospf add virtual-link	38	config ports display-string	8
config ospf add vlan area link-type	38	config ports monitor vlan	9
config ospf add vlan area	38	config ports qosprofile	12
config ospf area add range	38	config ports redundant	8
config ospf area delete range	38	config ports	7
config ospf area external-filter	38	config protocol add	10
config ospf area interarea-filter	38	config protocol delete	10
config ospf area normal	38	config qosmode	12
config ospf area nssa stub-default-cost	39	config qosprofile	12
config ospf area stub stub-default-cost	39	config qostype priority	12
config ospf asbr-filter	39	config radius server	3
config ospf ase-limit	39	config radius shared-secret	3
config ospf ase-summary add	39	config radius-accounting server	3
config ospf ase-summary delete	39	config radius-accounting shared-secret	3
config ospf cost	38	config red drop-probability	12
config ospf delete virtual-link	39	config rip add vlan	39
config ospf delete vlan	39	config rip delete vlan	39
config ospf direct-filter	39	config rip garbagetime	39
config ospf lsa-batching-timer	39	config rip routetimeout	40
config ospf metric-table	39	config rip rxmode	40
config ospf priority	38	config rip txmode	40
config ospf routerid	39	config rip updatetime	40
config ospf spf-hold-time	39	config rip vlan cost	40
config ospf timer	38	config rip vlan export-filter	40
config ospf virtual-link authentication password	38	config rip vlan import-filter	40
config ospf vlan area	39	config rip vlan trusted-gateway	40
config ospf vlan neighbor add	39	config route-map add goto	14
config ospf vlan neighbor delete	39	config route-map add match	14
config ospf vlan timer	39	config route-map add set	15
config pim add vlan	48	config route-map add	16
config pim cbsr	48	config route-map delete goto	14
config pim crp static	48	config route-map delete match	15
config pim crp timer	48	config route-map delete set	15
config pim crp vlan access-policy	48	config route-map delete	14
config pim delete vlan	48	config sharing address-based	8
config pim register-checksum-to	48	config slb esrp vlan	19

config slb failover alive-frequency	19	config slb vip service-check nntp	22
config slb failover dead-frequency	19	config slb vip service-check pop3	22
config slb failover fallback-now	19	config slb vip service-check smtp	22
config slb failover ping-check	19	config slb vip service-check telnet	22
config slb failover unit	19	config slb vip	22
config slb global connection-block	19	config slot	8
config slb global connection-timeout	19	config snmp access-profile readonly	3
config slb global ftp	19	config snmp access-profile readwrite	3
config slb global http	19	config snmp add community	3
config slb global nntp	19	config snmp add trapreceiver	3
config slb global persistence-level	19	config snmp add	3
config slb global persistence-method	19	config snmp community	4
config slb global ping-check	19	config snmp delete community	4
config slb global pop3	19	config snmp delete trapreceiver	4
config slb global service-check	19	config snmp delete	4
config slb global smtp	20	config snmp sysContact	4
config slb global synguard	20	config snmp sysLocation	4
config slb global tcp-port-check	20	config snmp sysName	4
config slb global telnet	20	config sntp-client server	4
config slb gogo-mode health-check	20	config sntp-client update-interval	4
config slb gogo-mode ping-check	20	config ssh2	4
config slb gogo-mode service-check ftp	20	config stpd add vlan	29
config slb gogo-mode service-check http	20	config stpd delete vlan	29
config slb gogo-mode service-check pop3	20	config stpd forwarddelay	29
config slb gogo-mode service-check smtp	20	config stpd helloftime	29
config slb gogo-mode service-check telnet	20	config stpd maxage	29
config slb gogo-mode service-check timer	20	config stpd ports cost	29
config slb gogo-mode tcp-port-check add	20	config stpd ports mode	29
config slb gogo-mode tcp-port-check delete	21	config stpd ports priority	29
config slb gogo-mode tcp-port-check timer	21	config stpd priority	29
config slb L4-port	21	config stpd tag	29
config slb node max-connections	21	config sys-health-check alarm-level	27
config slb node ping-check	21	config sys-health-check auto-recovery	27
config slb node tcp-port-check	21	config syslog delete	27
config slb pool add	21	config syslog	27
config slb pool delete	21	config sys-recovery-level	2
config slb pool lb-method	21	config tacacs server	4
config slb pool member	22	config tacacs shared-secret	4
config slb proxy-client-persistence	22	config tacacs-accounting server	4
config slb vip client-persistence-timeout	22	config tacacs-accounting shared-secret	4
config slb vip max-connections	22	config tcp-sync-rate	34
config slb vip service-check frequency	22	config time	2
config slb vip service-check ftp	22	config timezone	2
config slb vip service-check http	22	config udp-profile add	34

config udp-profile delete	34	config vlan upd-profile	34
config vlan access-profile	16	config vlan xnetid	51
config vlan add domain-member vlan	30	config vrrp add vlan	32
config vlan add ports loopback-vid	10	config vrrp delete	32
config vlan add ports no-restart	30	config vrrp vlan add	32
config vlan add ports restart	30	config vrrp vlan authentication	32
config vlan add ports stpd	29	config vrrp vlan delete vrid	32
config vlan add ports	10	config vrrp vlan vrid	32
config vlan add track-bgp	31	create access-list icmp destination source	16
config vlan add track-diagnostic	31	create access-list ip destination source ports	16
config vlan add track-environment	31	create access-list tcp destination source ports	16
config vlan add track-iproute	31	create access-list udp destination source ports	16
config vlan add track-ospf	31	create access-profile	16
config vlan add track-ping	31	create account	2
config vlan add track-rip	31	create bgp neighbor peer-group	45
config vlan add track-vlan	31	create bgp neighbor remote-as	45
config vlan delete domain-member vlan	31	create bgp peer-group	45
config vlan delete port	10	create eaps	27
config vlan delete track-bgp	31	create fdbentry vlan blackhole	11
config vlan delete track-diagnostic	31	create fdbentry vlan dynamic	11
config vlan delete track-environment	31	create fdbentry vlan ports	11
config vlan delete track-iproute	31	create flow-redirect	22
config vlan delete track-ospf	31	create ospf area	40
config vlan delete track-ping	31	create protocol	10
config vlan delete track-rip	31	create qosprofile	12
config vlan delete track-vlan	31	create route-map	16
config vlan dhcp-address-range	4	create slb pool	22
config vlan dhcp-lease-timer	4	create slb vip	23
config vlan dhcp-options	4	create stpd	30
config vlan esrp esrp-election	31	create udp-profile	34
config vlan esrp group	32	create vlan	10
config vlan esrp priority	31	delete access-list	16
config vlan esrp timer	32	delete access-profile	16
config vlan ipaddress	10	delete account	2
config vlan name	10	delete bgp neighbor	45
config vlan netlogin-lease-timer	5	delete bgp peer-group	45
config vlan priority	12	delete eaps	27
config vlan protocol	10	delete fdbentry	11
config vlan qosprofile	12	delete flow-redirect	23
config vlan secondary-ip	34	delete ospf area	40
config vlan slb-type	22	delete protocol	10
config vlan subvlan address range	34	delete qosprofile	12
config vlan subvlan	34	delete route-map	16
config vlan tag	10	delete slb pool	23

delete slb vip	23	disable icmp time-exceeded	35
delete stpd	30	disable icmp timestamp	35
delete udp-profile	34	disable icmp unreachable	35
delete vlan	10	disable icmp useredirects	35
disable access-list	16	disable idle timeouts	2
disable bgp aggregation	45	disable igmp snooping with-proxy	49
disable bgp always-compare-med	45	disable igmp snooping	49
disable bgp community format	45	disable igmp	49
disable bgp export	45	disable ignore-bpdu vlan	30
disable bgp neighbor remove-private-as-numbers	45	disable ignore-stp vlan	30
45		disable iparp checking	35
disable bgp neighbor soft-in-reset	46	disable iparp refresh	35
disable bgp neighbor	45	disable ipforwarding	35
disable bgp peer-group	46	disable ipmcforwarding	49
disable bgp synchronization	46	disable ip-option loose-source-route	35
disable bgp	45	disable ip-option record-route	35
disable bootp vlan	34	disable ip-option record-timestamp	35
disable bootprelay	34	disable ip-option strict-source-route	35
disable cli-config-logging	28	disable ip-option use-router-alert	35
disable clipaging	2	disable iproute sharing	35
disable cpu-dos-protect	5	disable ipxrip	51
disable dhcp ports vlan	5	disable ipxsap gns-reply	51
disable diffserv examination ports	13	disable ipxsap	51
disable diffserv replacement ports	13	disable irdp	35
disable dlcs	13	disable isq vlan	13
disable dot1p replacement ports	13	disable jumbo-frame ports	8
disable dvmrp rxmode vlan	49	disable learning ports	8
disable dvmrp txmode vlan	49	disable log display	28
disable dvmrp	49	disable loopback-mode vlan	35
disable eaps	27	disable mac-vlan port	10
disable edp ports	8	disable mirroring	8
disable esrp vlan	32	disable multinetting	35
disable flooding ports	8	disable nat	17
disable flow-redirect	23	disable netlogin ports	5
disable flowstats filter ports	28	disable ospf capability opaque-lsa	40
disable flowstats ping-check	28	disable ospf export direct	40
disable flowstats ports	28	disable ospf export rip	40
disable flowstats	28	disable ospf export static	40
disable g1-module support	8	disable ospf export vip	40
disable gvrp	10	disable ospf export	40
disable icmp address-mask	34	disable ospf	40
disable icmp parameter-problem	35	disable peer-group	46
disable icmp port-unreachables	35	disable pim	49
disable icmp redirects	35	disable ports	8

disable qosmonitor	13	disable subvlan-proxy-arp vlan	36
disable radius	5	disable sys-backplane-diag	28
disable radius-accounting	5	disable sys-health-check	28
disable red ports	13	disable syslog	28
disable rip aggregation	40	disable system-watchdog	5
disable rip export metric	41	disable tacacs	5
disable rip exportstatic	41	disable tacacs-accounting	5
disable rip originate-default cost	41	disable tacacs-authorization	5
disable rip poisonreverse	41	disable telnet	5
disable rip splithorizon	41	disable type20 forwarding	51
disable rip triggerupdate	41	disable vrrp	32
disable rip	40	disable web	5
disable rmon	28	download bootrom	52
disable sharing	8	download configuration cancel	52
disable slb 3dns	23	download configuration every	52
disable slb failover manual-failback	23	download configuration	52
disable slb failover ping-check	23	download image	53
disable slb failover	23	enable access-list	16
disable slb global synguard	23	enable bgp aggregation	46
disable slb gogo-mode ping-check	23	enable bgp always-compare-med	46
disable slb gogo-mode service-check	23	enable bgp community format	46
disable slb gogo-mode tcp-port-check	23	enable bgp export	46
disable slb gogo-mode	23	enable bgp neighbor remove-private-as-number	46
disable slb L4-port	23	enable bgp neighbor soft-in-reset	46
disable slb node ping-check	23	enable bgp neighbor	46
disable slb node tcp-port-check	23	enable bgp peer-group soft-in-reset	46
disable slb node	23	enable bgp peer-group	46
disable slb proxy-client-persistence	24	enable bgp synchronization	46
disable slb vip client-persistence	24	enable bgp	46
disable slb vip service-check	24	enable bootp vlan	36
disable slb vip sticky-persistence	24	enable bootprelay	36
disable slb vip svcdown-reset	24	enable cli-config-logging	28
disable slb vip	24	enable clipaging	2
disable slb	23	enable cpu-dos-protect simulated	5
disable slot	8	enable cpu-dos-protect	5
disable smartredundancy	8	enable dhcp ports vlan	5
disable snmp access	5	enable diffserv examination ports	13
disable snmp dot1dTpFdbTable	5	enable diffserv replacement ports	13
disable snmp traps	5	enable dlcs	13
disable sntp-client	5	enable dot1p replacement ports	13
disable ssh2	5	enable dvmrp rxmode vlan	49
disable stpd ports	30	enable dvmrp txmode vlan	49
disable stpd rapid-root-failover	30	enable dvmrp	49
disable stpd	30	enable eaps	27

enable edp ports	8	enable mac-vlan mac-group port	10
enable esrp vlan	32	enable mirroring	8
enable flooding ports	8	enable multinetting	37
enable flow-redirect	24	enable nat	17
enable flowstats filter ports	28	enable netlogin ports	5
enable flowstats ping-check	28	enable ospf capability opaque-lsa	41
enable flowstats ports	28	enable ospf export direct	41
enable flowstats	28	enable ospf export rip	41
enable g1-module support	8	enable ospf export static	41
enable gvRP	10	enable ospf export vip	41
enable icmp address-mask	36	enable ospf export	41
enable icmp parameter-problem	36	enable ospf originate-default cost	41
enable icmp port-unreachables	36	enable ospf	41
enable icmp redirects	36	enable peer-group	46
enable icmp time-exceeded	36	enable pim	49
enable icmp timestamp	36	enable ports	8
enable icmp unreachables	36	enable qosmonitor	13
enable icmp useredirects	36	enable radius	5
enable idletimeouts	2	enable radius-accounting	5
enable igmp snooping with-proxy	49	enable red ports	13
enable igmp snooping	49	enable rip aggregation	41
enable igmp	49	enable rip export metric	42
enable ignore-bpdu vlan	30	enable rip exportstatic	42
enable ignore-stp vlan	30	enable rip originate-default cost	42
enable iparp checking	36	enable rip poisonreverse	42
enable iparp refresh	36	enable rip splithorizon	42
enable ipforwarding	36	enable rip triggerupdate	42
enable ipmcforwarding	49	enable rip	41
enable ip-option loose-source-route	36	enable rmon	28
enable ip-option record-route	36	enable sharing grouping	8
enable ip-option record-timestamp	36	enable slb 3dns	24
enable ip-option strict-source-route	36	enable slb failover manual-failback	24
enable ip-option use-router-alert	36	enable slb failover ping-check	24
enable iproute sharing	37	enable slb failover	24
enable ipxrip	51	enable slb global synguard	24
enable ipxsap gns-reply	51	enable slb gogo-mode ping-check	24
enable ipxsap	51	enable slb gogo-mode service-check	24
enable irdp	37	enable slb gogo-mode tcp-port-check	24
enable isq vlan	13	enable slb gogo-mode	24
enable jumbo-frame ports	8	enable slb L4-port	24
enable learning ports	8	enable slb node ping-check	25
enable license	2	enable slb node tcp-port-check	25
enable log display	28	enable slb node	24
enable loopback-mode vlan	37	enable slb proxy-client-persistence	25

enable slb vip client-persistence	25	scp2 configuration	6
enable slb vip service-check	25	scp2	6
enable slb vip sticky-persistence	25	show access-list	17
enable slb vip svcdown-reset	25	show access-list-fdb	17
enable slb vip	25	show access-list-monitor	17
enable slb	24	show access-profile	17
enable slot	8	show accounts	2
enable smartredundancy	9	show banner	3
enable snmp access	5	show bgp neighbor	47
enable snmp dot1dTpFdbTable	5	show bgp peer-group	47
enable snmp traps	5	show bgp routes	47
enable sntp-client	5	show bgp	46
enable ssh2	6	show configuration	53
enable stpd ports	30	show cpu-dos-protect	6
enable stpd rapid-root-failover	30	show debug-trace	56
enable stpd	30	show diagnostics backplane mpls mapping	57
enable subvlan-proxy-arp vlan	37	show diagnostics backplane utilization	57
enable sys-backplane-diag	28	show diagnostics packet-memory slot	57
enable sys-health-check	28	show diagnostics	57
enable syslog	28	show dlcs	13
enable system-watchdog	6	show dns-client	3
enable tacacs	6	show dot1p	13
enable tacacs-accounting	6	show dvmrp	49
enable tacacs-authorization	6	show eaps	27
enable telnet	6	show edp	9
enable type20 forwarding	52	show esrp vlan	32
enable vrrp	32	show esrp	32
enable web	6	show fdb	11
exit	6	show flow-redirect	25
history	2	show flowstats group	28
logout	6	show flowstats ports	28
nslookup	2	show flowstats	28
ping	2	show gvrp	10
quit	6	show igmp group	50
reboot	2	show igmp snooping	50
restart ports	9	show iparp proxy	37
rtlookup	37	show iparp	37
run diagnostics packet-memory slot	56	show ipconfig	37
run diagnostics	56	show ipfdb	37
run fdb-check	11	show ipmc cache	50
run ipfdb-check	37	show ipmc fdb	50
run ipmcfdb-check	49	show ipqos	13
run msm-failover	2	show iproute	37
save configuration	53	show ipstats	37

show ipxconfig	52	show rip vlan	42
show ipxfdb	52	show rip	42
show ipxrip	52	show session	6
show ipxroute	52	show sharing address-based	9
show ipxsap	52	show slb 3dns members	25
show ipxservice	52	show slb connections	25
show ipxstats	52	show slb esrp	25
show l2stat	50	show slb failover	25
show log config	28	show slb global	25
show log	28	show slb gogo-mode	25
show mac-vlan	10	show slb L4-port	25
show management	6	show slb node	25
show memory	28	show slb persistence	26
show mirroring	9	show slb pool	26
show nat	18	show slb stats	26
show netlogin info	6	show slb vip	26
show odometer	6	show slot	9
show ospf area detail	42	show sntp-client	6
show ospf area	42	show stpd ports	30
show ospf ase-summary	42	show stpd	30
show ospf interfaces detail	42	show switch	3
show ospf interfaces	42	show tacacs	6
show ospf lsdb area lstype	42	show tacacs-accounting	7
show ospf virtual-link	42	show tech-support	57
show ospf	42	show udp-profile	37
show pim rp-set	50	show version	29
show pim	50	show vlan	10
show ports collisions	9	show vrrp vlan stats	32
show ports configuration	9	show vrrp	32
show ports info	9	ssh2	7
show ports packet	9	synchronize	53
show ports qosmonitor	13	telnet	7
show ports rxerrors	29	top	57
show ports sharing	9	traceroute	3
show ports stats	29	unconfig diffserv examination ports	13
show ports txerrors	29	unconfig diffserv replacement ports	13
show ports utilization	9	unconfig dvmrp	50
show protocol	10	unconfig eaps port	27
show qosprofile	13	unconfig flowstats filter	29
show qostype priority	13	unconfig flowstats ports	29
show radius	6	unconfig icmp	37
show radius-accounting	6	unconfig igmp	50
show rip stat vlan	42	unconfig iparp	37
show rip stat	42	unconfig ipxrip	52

unconfig ipxsap	52
unconfig irdp	37
unconfig management	7
unconfig ospf	42
unconfig pim	50
unconfig ports display string	9
unconfig ports monitor vlan	10
unconfig ports redundant	9
unconfig qos type priority	14
unconfig radius	7
unconfig radius-accounting	7
unconfig rip	42
unconfig slb all	26
unconfig slb gogo-mode health-check	26
unconfig slb gogo-mode service-check	26
unconfig slb vip service-check	26
unconfig slot	9
unconfig stpd	30
unconfig switch	53
unconfig tacacs	7
unconfig tacacs-accounting	7
unconfig udp-profile	38
unconfig vlan ipaddress	10
unconfig vlan xnetid	52
upload configuration cancel	53
upload configuration	53
use configuration	53
use image	53
xping	52